


Quick Reference

CL630-CRM

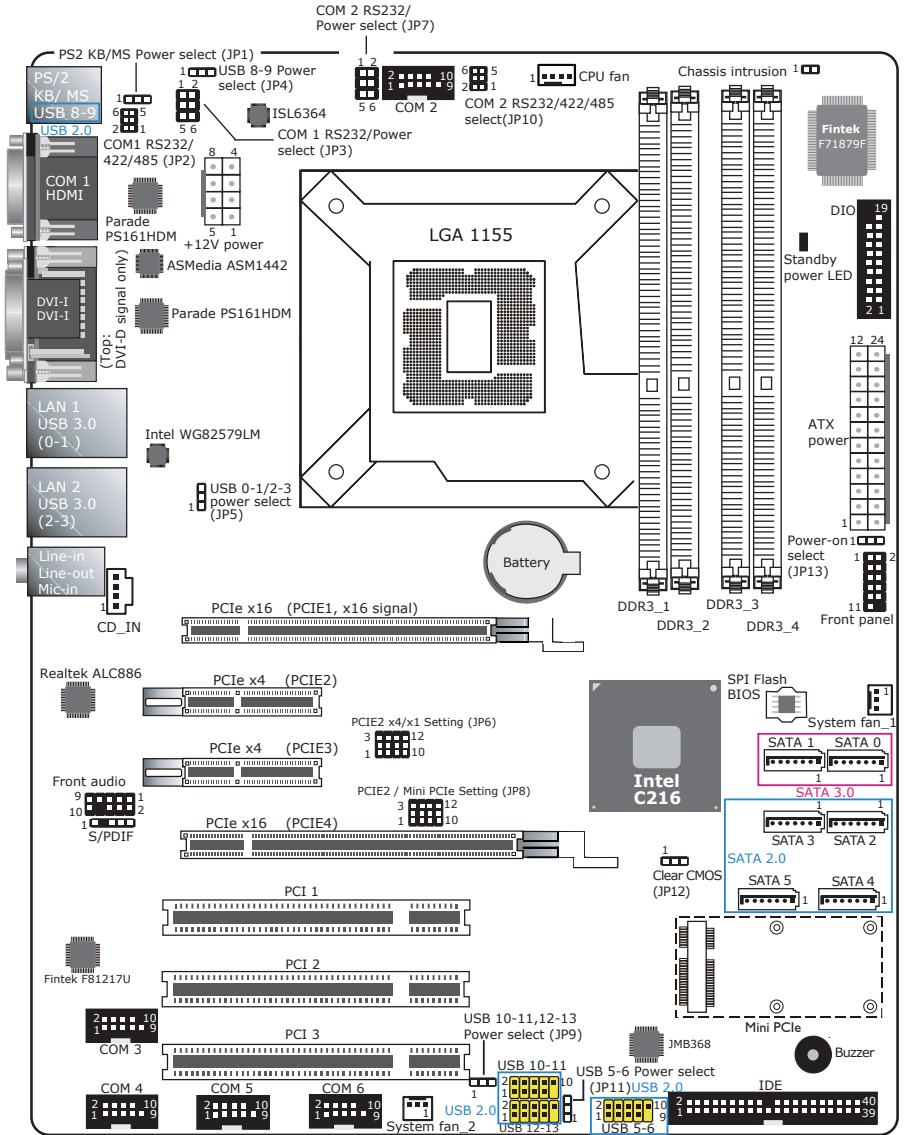

USB Power: 8-9 (JP4), 0-1,2-3 (JP5), 5-6(JP11), 10-11,12-13 (JP9)	
+5V (default)	1-2 On
+5V_standby	2-3 On

RS232/RS422/RS485 Select: COM 1 (JP2), COM 2 (JP10)	
RS232 (default)	1-2 On
RS422 Full Duplex	3-4 On
RS485	5-6 On

PS/2 Power	
	JP1
+5V (default)	1-2 On
+5V_standby	2-3 On

RS232/Power: COM 1 (JP3), COM 2 (JP7)	
RS232 (default)	1-3 (RI), 2-4 (DCD) On
RS232 with power	3-5 (+5V), 4-6 (+12V) On

Power-on Select	
	JP13
Power-on via power button (default)	1-2 On
Auto Power-on	2-3 On

Clear CMOS	
	JP12
Normal (default)	1-2 On
Clear CMOS	2-3 On

PCIe2/Mini PCIe Configuration Settings			
PCIe2	Mini PCIe	JP6	JP8
x4	Supported	2-3, 5-6, 8-9, 11-12 On (default)	1-2, 4-5, 7-8, 10-11 On (default)
x1	Not Supported	1-2, 4-5, 7-8, 10-11 On	2-3, 5-6, 8-9, 11-12 On
Not Supported	Supported	1-2, 4-5, 7-8, 10-11 On	1-2, 4-5, 7-8, 10-11 On

Note:
The default settings of JP6 and JP8 are the best configurations for processors supporting 20 lanes of PCI Express bus. However, not all processors provide 20 lanes of PCI Express bus (based on Intel's official document). If your processor only supports 16 lanes of PCI Express bus, set JP6 to 1-2, 4-5, 7-8, 10-11 On and JP8 to 2-3, 5-6, 8-9, 11-12 On (Mini PCIe not supported), or JP8 to 1-2, 4-5, 7-8, 10-11 On (Mini PCIe supported) as the table illustrates above.



DFI reserves the right to change the specifications at any time prior to the product's release. This QR may be based on editions that do not resemble your actual products. For more documentation and drivers, please visit the download page at go.dfi.com/CL630-CRM, or via the QR code to the right.

