

ADN171_ADN173

Mini-ITX Industrial Motherboard
User's Manual

Copyright

This publication contains information that is protected by copyright. No part of it may be reproduced in any form or by any means or used to make any transformation/adaptation without the prior written permission from the copyright holders.

This publication is provided for informational purposes only. The manufacturer makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. The user will assume the entire risk of the use or the results of the use of this document. Further, the manufacturer reserves the right to revise this publication and make changes to its contents at any time, without obligation to notify any person or entity of such revisions or changes.

Changes after the publication's first release will be based on the product's revision. The website will always provide the most updated information.

© 2023. All Rights Reserved.

Trademarks

Product names or trademarks appearing in this manual are for identification purpose only and are the properties of the respective owners.

FCC and DOC Statement on Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables must be used in order to comply with the emission limits.

Table of Contents

Chapter 1 - Introduction.....	6
Specifications	6
Block Diagram	8
Dimension	8
Chapter 2 - Hardware Installation.....	9
Board Layout.....	9
Installing the heat sink.....	11
Installing the Heat Sink	11
Jumper Settings	12
Clear CMOS Data (SW1)	12
SATA1 CONN/M.2 B-KEY (PBJP1).....	12
PCIe Slotx2/M.2 E-KEY (PBJP2)	13
USB3-A/M.2 B-KEY (PBJP3)	13
Panel Backlight ON Level Select (DPJP1)	14
VCC Panel Power Select (DPJP3).....	14
Inverter Panel Power Select (DPJP4).....	15
DIO_0~3 Power Select (JP2).....	15
DIO_4~7 Power Select (JP5).....	16
Pin Assignment	17
RTC Battery (J19)	17
Case Open (J2).....	17
UART Header (Debug) (JP4).....	18
System Fan (J20)	18
System Fan (J10)	19
DIO (J16)	19
SATA POWER (CN8).....	20
SATA POWER (CN12).....	20
S/PDIF (AUJ2).....	21
SATA1 (J12).....	21
SATA0 (J4).....	22
Backlight CON (DPJ2).....	22
COM1 Power Select (TSJP1).....	23
COM2 Power Select (TSJP2).....	23
COM1 (TSJ1)	24
COM2 (TSJ2)	24
COM3 (TSJ3)	24
COM4 (TSJ4)	24
COM5 (TSJ5).....	24
COM6 (TSJ6).....	24
Front Audio (AUJ1).....	24
USB2.0 Pin Header (J3).....	25
USB2.0 Pin Header (J21).....	25
eSPI Header(Debug) (J5).....	26
Front Panel (J17).....	26
Expansion Slots.....	27
Installing the M.2 Module	27
Chapter 3 - BIOS Settings.....	29
Overview	29
Main.....	30
Advanced	30
RC ACPI Settings.....	31
CPU Configuration.....	31
Power & Performance.....	32
PCH-FW Configuration.....	32

Intel(R) Time Coordinated Computing.....	33
Trusted Computing.....	34
IT8786 Super IO Configuration	34
IT8786 Super IO Configuration ▶ Serial Port 1, 2 Configuration	35
IT8786 Super IO Configuration ▶ Serial Port 3, 4 Configuration	35
IT8786 Super IO Configuration ▶ Serial Port 5, 6 Configuration	36
IT8786 HW Monitor	36
Serial Port Console Redirection	37
Serial Port Console Redirection ▶ Console Redirection Settings	37
Network Stack Configuration.....	38
USB Power Control.....	39
Chipset	40
System Agent (SA) Configuration	40
PCH-IO Configuration	41
PCH-IO Configuration ▶ PCI Express Configuration	41
PCH-IO Configuration ▶ SATA And RST Configuration	42
PCH-IO Configuration ▶ HD Audio Configuration	42
Security	43
Secure Boot.....	43
Boot	44
Save & Exit	44
Updating the BIOS.....	45
Notice: BIOS SPI ROM.....	45

About this Manual

This manual can be downloaded from the website.

The manual is subject to change and update without notice, and may be based on editions that do not resemble your actual products. Please visit our website or contact our sales representatives for the latest editions.

Warranty

1. Warranty does not cover damages or failures that occur from misuse of the product, inability to use the product, unauthorized replacement or alteration of components and product specifications.
2. The warranty is void if the product has been subjected to physical abuse, improper installation, modification, accidents or unauthorized repair of the product.
3. Unless otherwise instructed in this user's manual, the user may not, under any circumstances, attempt to perform service, adjustments or repairs on the product, whether in or out of warranty. It must be returned to the purchase point, factory or authorized service agency for all such work.
4. We will not be liable for any indirect, special, incidental or consequential damages to the product that has been modified or altered.

Static Electricity Precautions

It is quite easy to inadvertently damage your PC, system board, components or devices even before installing them in your system unit. Static electrical discharge can damage computer components without causing any signs of physical damage. You must take extra care in handling them to ensure against electrostatic build-up.

1. To prevent electrostatic build-up, leave the system board in its anti-static bag until you are ready to install it.
2. Wear an antistatic wrist strap.
3. Do all preparation work on a static-free surface.
4. Hold the device only by its edges. Be careful not to touch any of the components, contacts or connections.
5. Avoid touching the pins or contacts on all modules and connectors. Hold modules or connectors by their ends.



Important:

Electrostatic discharge (ESD) can damage your processor, disk drive and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

Safety Measures

- To avoid damage to the system, use the correct AC input voltage range.
- To reduce the risk of electric shock, unplug the power cord before removing the system chassis cover for installation or servicing. After installation or servicing, cover the system chassis before plugging the power cord.

About the Package

The package contains the following items. If any of these items are missing or damaged, please contact your dealer or sales representative for assistance.

- 1 ADN171/ADN173 Motherboard
- 1 COM port cable (Length: 250mm, 1 x COM ports)
- 1 Serial ATA data & power cable w/lock (Length: 300mm)
- 1 Heat Sink

The board and accessories in the package may not come similar to the information listed above. This may differ in accordance with the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.

Before Using the System Board

When installing the system board in a new system, you will need at least the following internal components.

- Memory module
- Storage device such as a hard disk drive.
- Power supply

External system peripherals may also be required for navigation and display, including at least a keyboard, a mouse and a video display monitor.

Chapter 1 - Introduction


► Specifications

SYSTEM	Processor	Intel® Atom® Alder Lake-N Processors, TDP up to 15W Embedded Intel Atom® x7425E, 4 cores, 6M Cache, up to 3.40 GHz, 12W Intel Atom® x7213E, 2 cores, 6M Cache, up to 3.20 GHz, 10W Intel Atom® x7211E, 2 cores, 6M Cache, up to 3.20 GHz, 6W PC Client Intel® Core™ i3-N305, 8 cores, 6M Cache, up to 3.80 GHz, 15W Intel® Processor N200, 4 cores, 6M Cache, up to 3.70 GHz, 6W Intel® Processor N97, 4 cores, 6M Cache, up to 3.60 GHz, 12W Intel® Processor N50, 2 cores, 6M Cache, up to 3.40 GHz, 6W
	Memory	One 262-pin SODIMM up to 16GB Single Channel DDR5 4800MHz
	BIOS	AMI SPI 256Mbit
	GRAPHICS	Controller
GRAPHICS	Feature	OpenGL 4.6, Direct X 12.1, OpenCL 3.0 HW Decode: HEVC, VP9, AV1, AVC HW Encode: HEVC, VP9, AVC
	Display	1 x DP++/ VGA (Co-layout) 1 x DP++/ HDMI2.0 (Co-layout) 1 x USB Type C (DP alt-mode/USB3.2 Gen2/PD 15W) HDMI: resolution up to 3840x2160 @ 24Hz DP++: resolution up to 3840x2160 @ 60Hz VGA: resolution up to 2048x1536 @ 60Hz USB-C: resolution up to 3840x2160 @24Hz
	Triple Displays	DP++/VGA + HDMI/DP++ + USB Type C (DP alt-mode/USB3.2 Gen2/PD 15W) + M2A-Display (optional)
EXPANSION	Interface	1 x PCIe x4 (PCIe signal x2)
		1 x M.2 2242/3042/3052 B Key (PCIe Gen3x1 or SATA3 and USB2.0 wi USB3(opt.))
		1 x M.2 2230 E Key (PCIe Gen3x1, USB2.0, CNVi) (CNVi only support by selected CPU)
		1 x M.2 3060 A Key support DFI M2A-display module (opt. MOQ required)
		1 x Nano SIM socket (connected to M.2 B key)
AUDIO	Audio Codec	Realtek ALC888S
ETHERNET	Controller	2 x Intel® I226V (10/100/1000/2500Mbps)
REAR I/O	Ethernet	2 x 2.5GHz RJ45
	USB	4 x USB 3.2 Gen2 or 3 USB 3.2 Gen2 + 1 USB2.0 or 3 USB 3.2 Gen2+1 USB Type C


	Display	1 x HDMI /DP++ (opt., MOQ may required) 1 x DP++ /VGA (opt., MOQ may required) 1 x USB Type C (DP alt-mode/USB3.2 Gen2/PD 15W)
	Audio	1 x Line-out
INTERNAL I/O	Serial	2 x RS-232/422/485 (RS-232 w/ power) (2.0mm pitch) 4 x RS-232 (2.0mm pitch)
	USB	4 x USB 2.0 (2.0mm pitch) or 3 x USB 2.0 (2.00mm pitch) + 1 x Vertical USB 2.0 (type A) (opt., MOQ required)
	Audio	1 x S/PDIF 1 x Line-out/Mic-in
	SATA	2 x SATA 3.0 (up to 6Gb/s)
	DIO	1 x 8-bit DIO
	SMBus	1 x SMBus
WATCHDOG TIMER	Output & Interval	System Reset, Programmable via Software from 1 to 255 Seconds
SECURITY	TPM	dTPM (default) fTPM (option)
POWER	Type	Single 12VDC (+/-5%) (ADN171) Wide Range 9~36V (ADN173)
	Connector	DC-in Jack (default) Right Angle Connector (4-pin) Vertical Type Connector (4-pin)
	Consumption	Idle: x7213E 10W: 12V @ 0.62A (7.44W) Max: x7213E 10W: 12V @ 2.31A (27.72W)
	RTC Battery	CR2032 Coin Cell
OS SUPPORT	Microsoft	Windows IoT Enterprise 10 LTSC Windows 11
	Linux	Linux

ENVIRONMENT	Temperature	Operating: -5 to 65°C Storage: -40 to 85°C
	Humidity	Operating: 5 to 90% RH Storage: 5 to 90% RH
	MTBF	<p>ADN171-CB-N200 MTBF 478,716 hrs @ 25°C; 297,120 hrs @ 45°C; 197,152 hrs @ 60°C; 148,106 hrs @ 70°C; Calculation model: Telcordia Issue 4 Environment: GB, GC – Ground Benign, Controlled</p> <p>ADN173-CB-x7425 MTBF 455,085 hrs @ 25°C; 278,736 hrs @ 45°C; 183,740 hrs @ 60°C; 137,635 hrs @ 70°C; Calculation model: Telcordia Issue 4 Environment: GB, GC – Ground Benign, Controlled</p>
MECHANISM	Dimensions	Mini-ITX Form Factor: 170mm (6.7") x 170mm (6.7")
	Height	PCB: 1.6mm Top Side: 20mm Bottom Side: 3mm
STANDARDS AND CERTIFICATIONS	Certifications	CE, FCC, RoHS

► Block Diagram

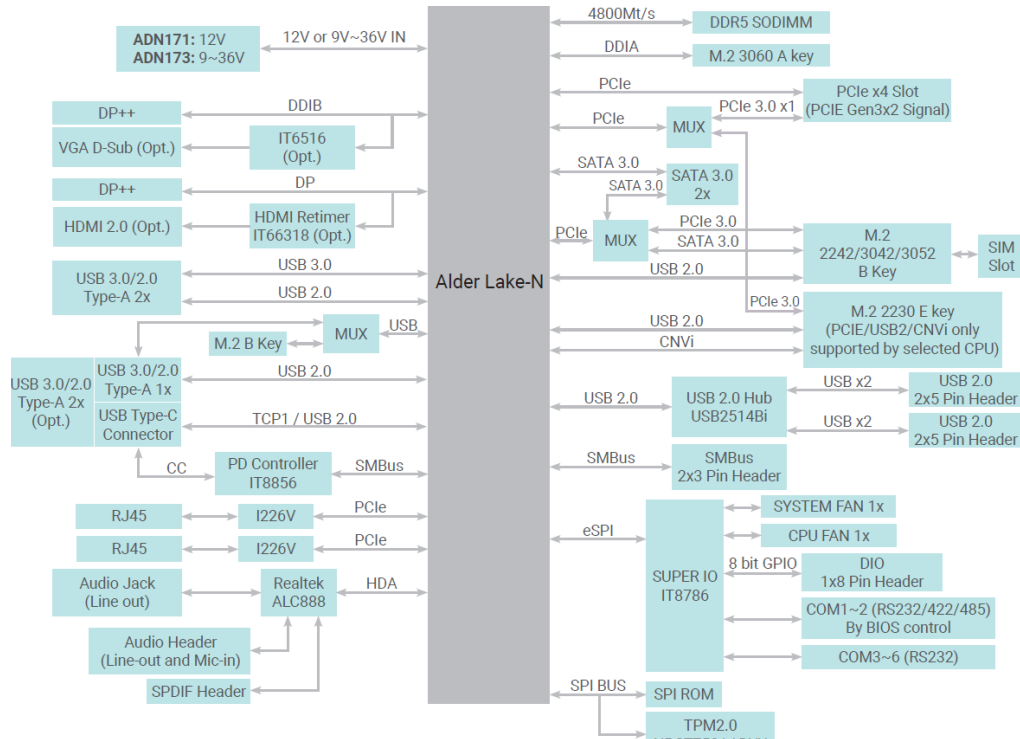


► Dimension

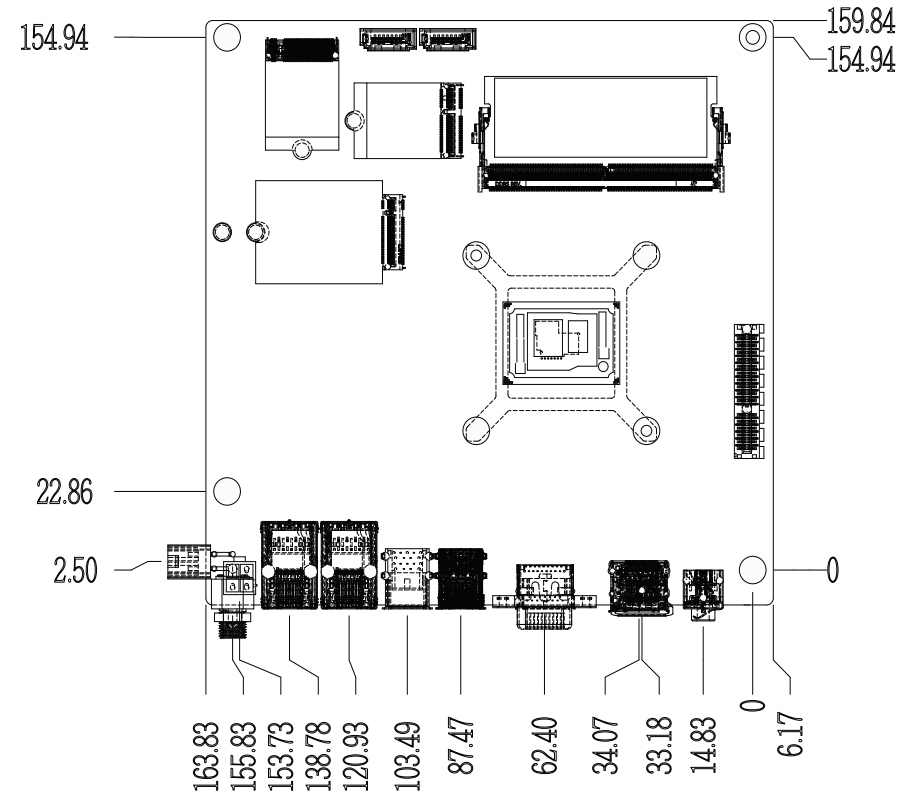

Chapter 2 - Hardware Installation

► Board Layout

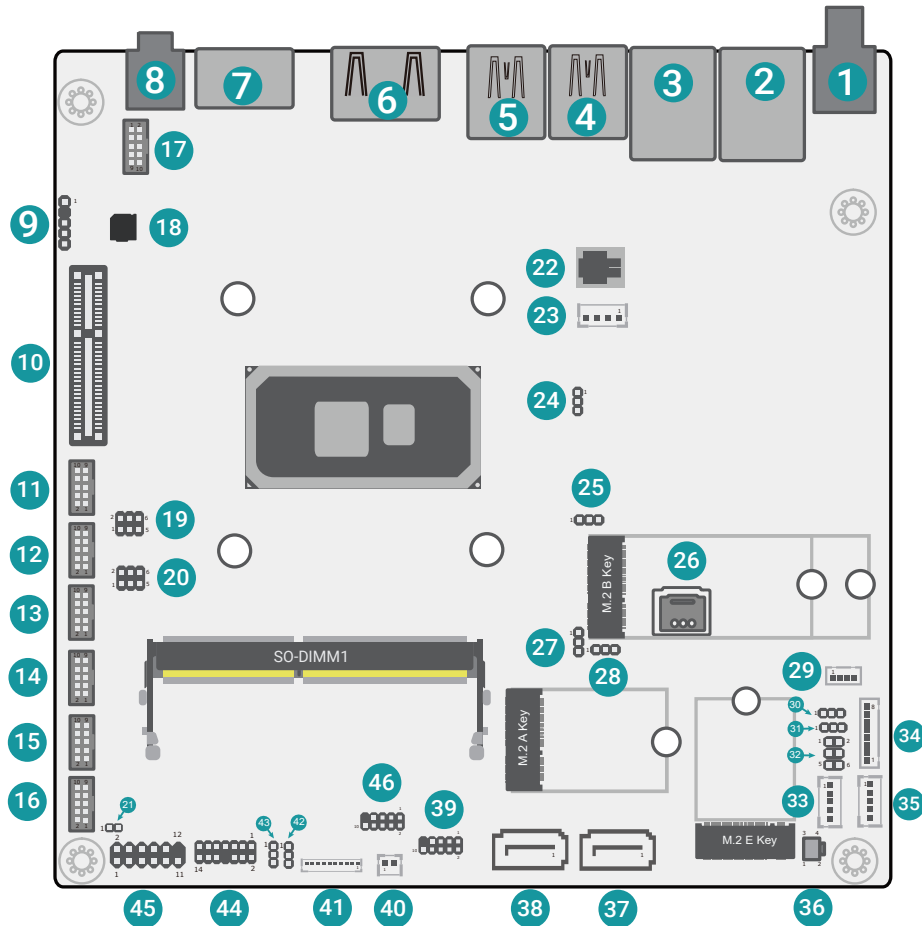

- | | |
|----------------------|------------------------------------|
| 1 DC-in | 21 Case Open |
| 2 2.5G LAN 1 | 22 SPI |
| 3 2.5G LAN 2 | 23 System Fan |
| 4 USB3.2 Gen2 | 24 UART Header (Debug) |
| 5 USB3.2 Gen2 | 25 SATA1 CONN/ M.2 B-KEY |
| 6 DP++ | 26 SIM Card Slot |
| 7 HDMI | 27 USB3-A/ M.2 B-KEY |
| 8 Line-out | 28 PCIe Slotx2/ M.2 E-KEY |
| 9 S/PDIF | 29 System Fan |
| 10 PCIe1 | 30 Panel Backlight ON Level Select |
| 11 COM1 | 31 Panel Inverter Power Select |
| 12 COM2 | 32 VCC Panel Power Select |
| 13 COM3 | 33 SATA Power |
| 14 COM4 | 34 Backlight CON |
| 15 COM5 | 35 SATA Power |
| 16 COM6 | 36 Clear CMOS Data |
| 17 Front Audio | 37 SATA1 |
| 18 Buzzer | 38 SATA0 |
| 19 COM1 Power Select | 39 USB2.0 Pin Header |
| 20 COM2 Power Select | 40 RTC Battery |

41 DIO

42 DIO_4~7 Power Select

43 DIO_0~3 Power Select

44 eSPI Header(Debug)

45 Front Panel

46 USB2.0 Pin Header

► Installing the heat sink


Installing the Heat Sink

The CPU must be kept cool by using a heat sink, otherwise the CPU will overheat damaging both the CPU and system board.

1. Before you install the fan / heat sink, you must apply a thermal paste onto the top of the CPU. The thermal paste is usually supplied when you purchase the fan / heat sink assembly. Do not spread the paste all over the surface. When you later place the heat sink on top of the CPU, the compound will disperse evenly.


Some heat sinks come with a patch of preapplied thermal paste. Do not apply thermal paste if the fan / heat sink already has a patch of thermal paste on its underside. Peel the strip that covers the paste before you place the fan / heat sink on top of the CPU.

2. Place the heat sink on top of the CPU. The 4 spring screws around the heat sink, which are used to secure the heat sink onto the system board, must match the 4 mounting holes around the board.
3. Screw tight two of the spring screws at opposite corners into the mounting holes. And then proceed with the other two spring screws.

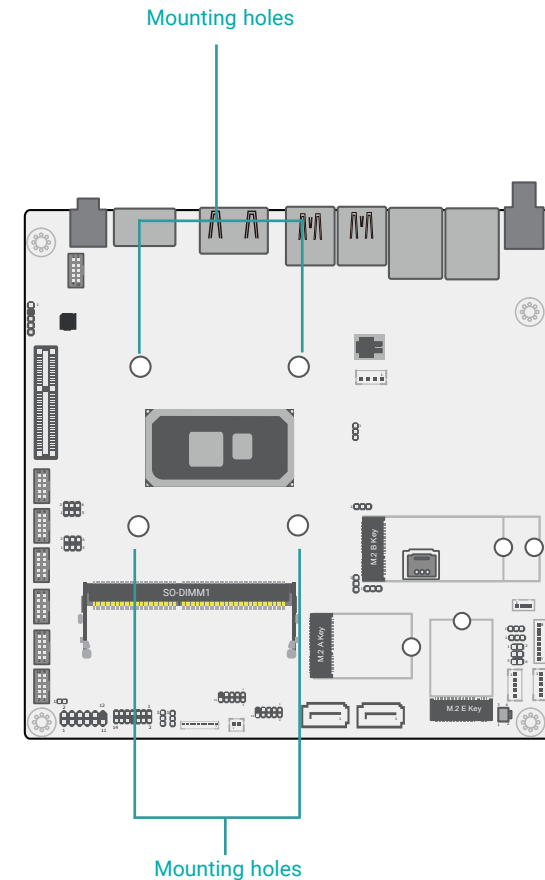


► Jumper Settings

Clear CMOS Data (SW1)

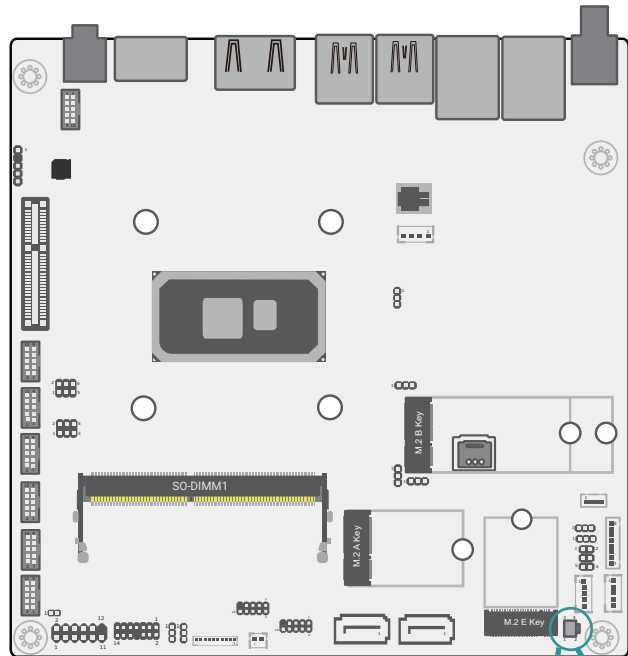


- 1-2 Open: Normal (Default)
- 1-2 Short: Clear CMOS Data

SATA1 CONN/M.2 B-KEY (PBJP1)

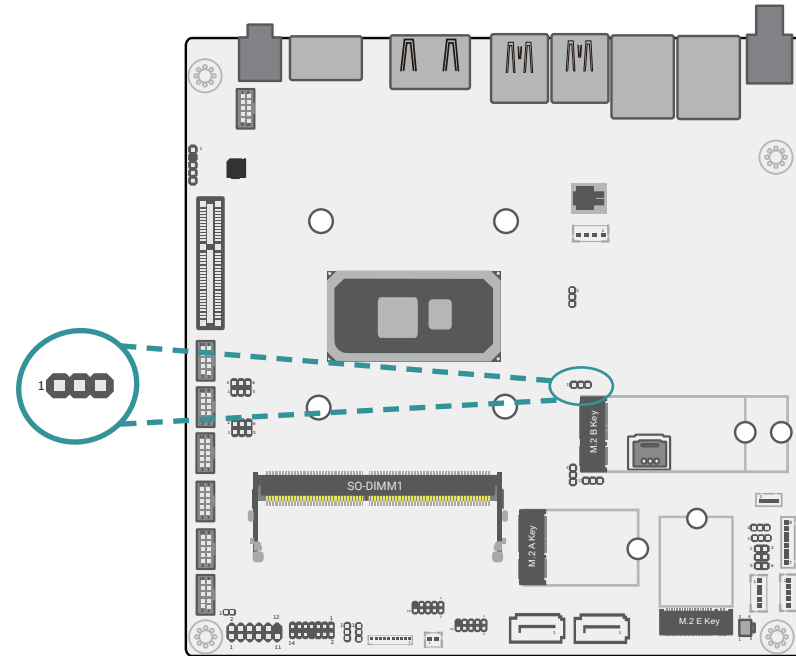

- 1-2 Short: M.2 B-KEY, SATA (Default)
- 2-3 Short: SATA1 CONN


PCIE Slotx2/M.2 E-KEY (PBJP2)

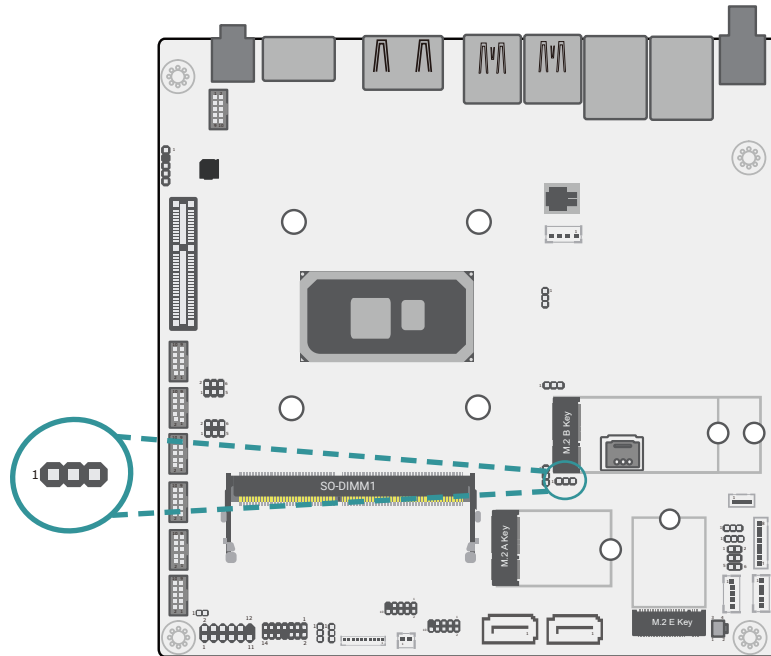

■ 1-2 Short: M.2 E-KEY, PCIe1 (Default)

■ 2-3 Short: PCIe2 Slot2 (Optional)


USB3-A/M.2 B-KEY (PBJP3)

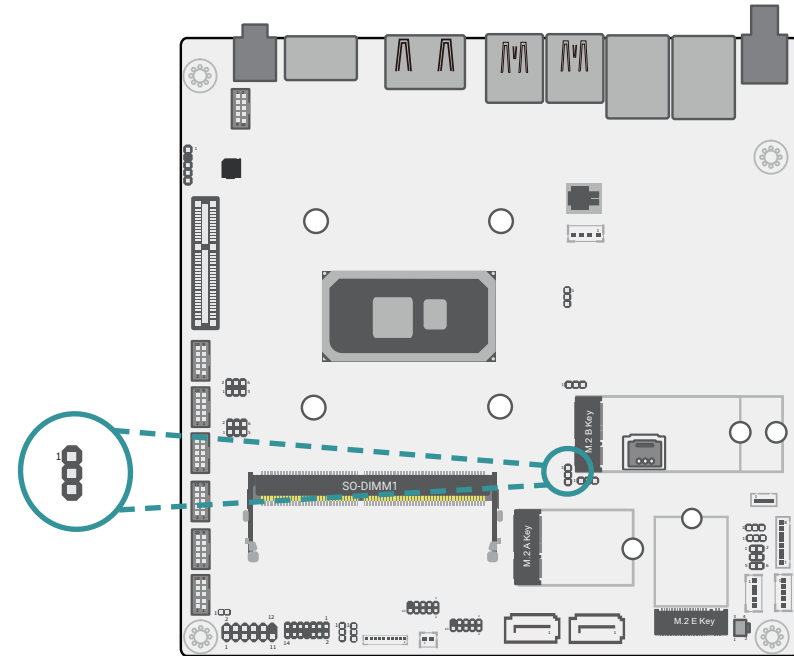

■ 1-2 Short: M.2 B-KEY, USB3 (Default)

■ 2-3 Short: USB3-TYPE-A

Panel Backlight ON Level Select (DPJP1)

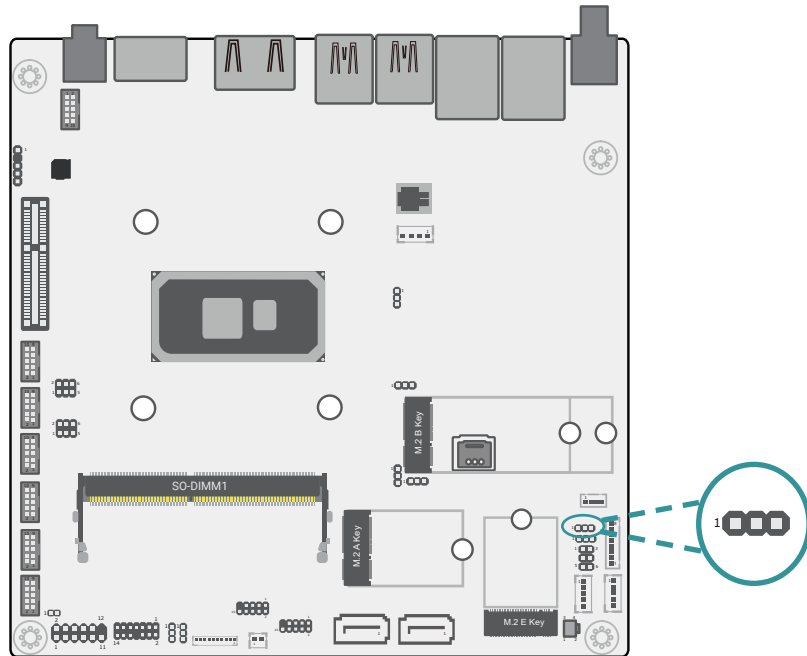


■ 1-2 Short: 3V3 (Default)



■ 2-3 Short: 5V

VCC Panel Power Select (DPJP3)

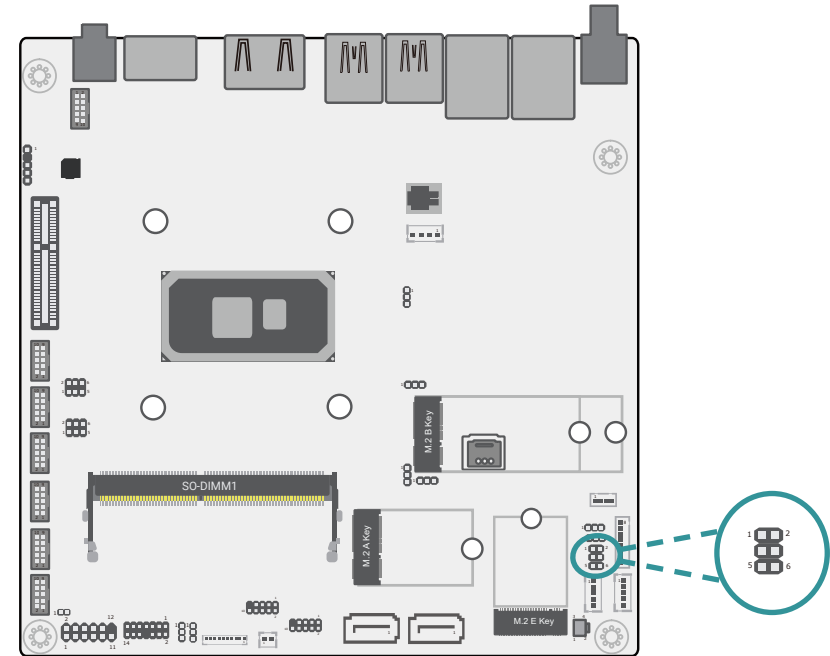

■ 1-2 Short: 12V




■ 3-4 Short: 5V



■ 5-6 Short: 3V3 (Default)

Inverter Panel Power Select (DPJP4)

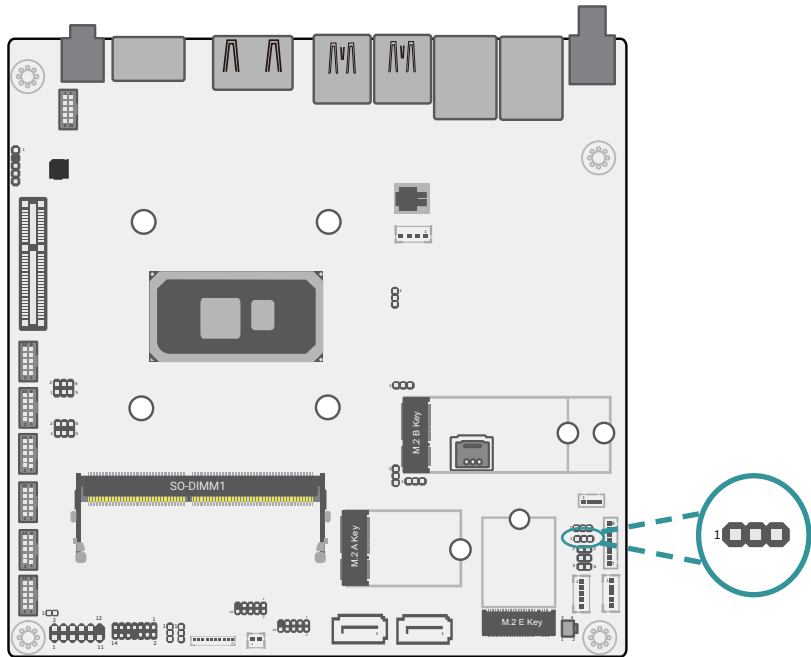


■ 1-2 Short: 12V (Default)



■ 2-3 Short: 5V

DIO_0~3 Power Select (JP2)


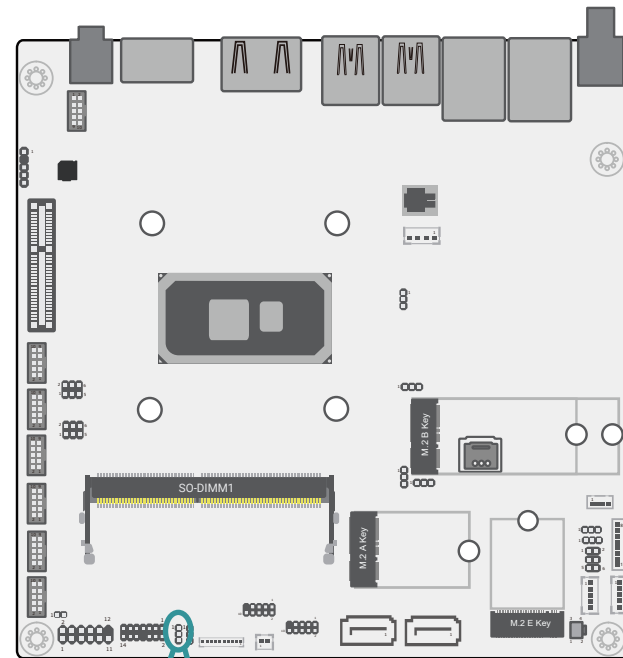


■ 1-2 Short to 5VSB: Normal (Default)



■ 2-3 Short: GND

 DIO_4~7 Power Select (JP5)

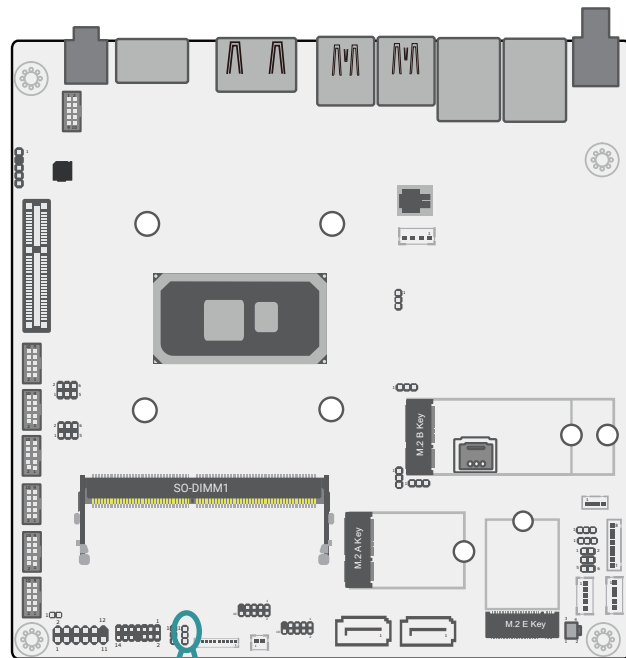


■ 1-2 Short to 5VSB: Normal (Default)



■ 2-3 Short: GND


► Pin Assignment

RTC Battery (J19)

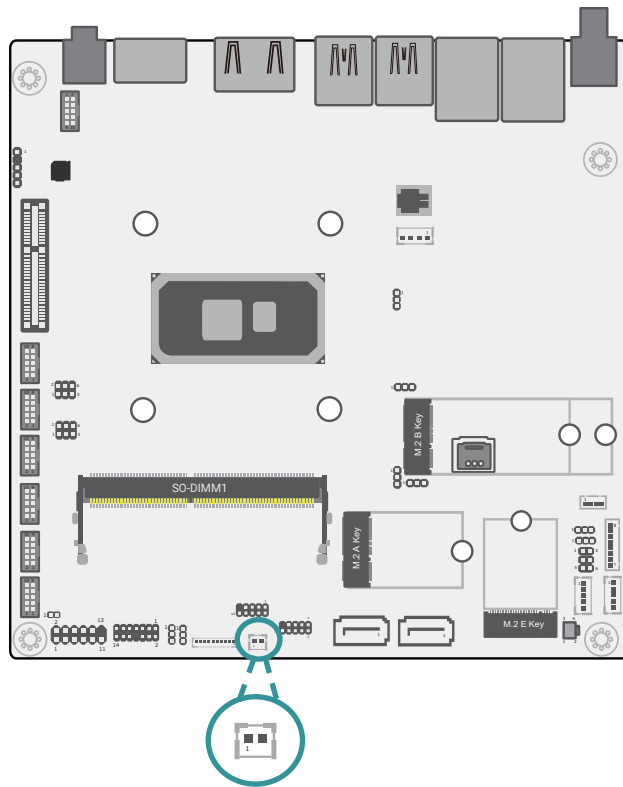


Pin	Assignment
1	V_BAT
2	GND

Case Open (J2)

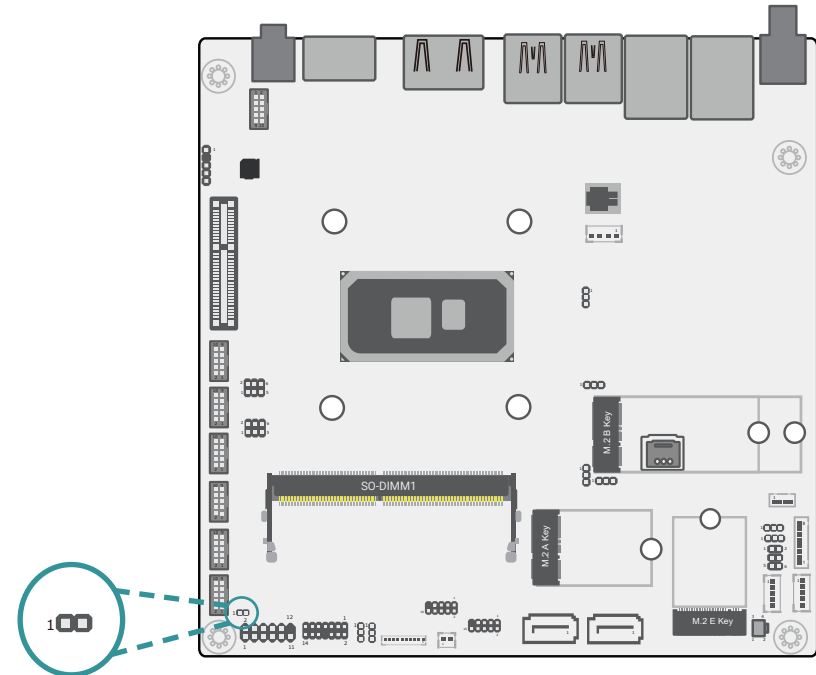


Pin	Assignment
1	Case Open-
2	GND

UART Header (Debug) (JP4)

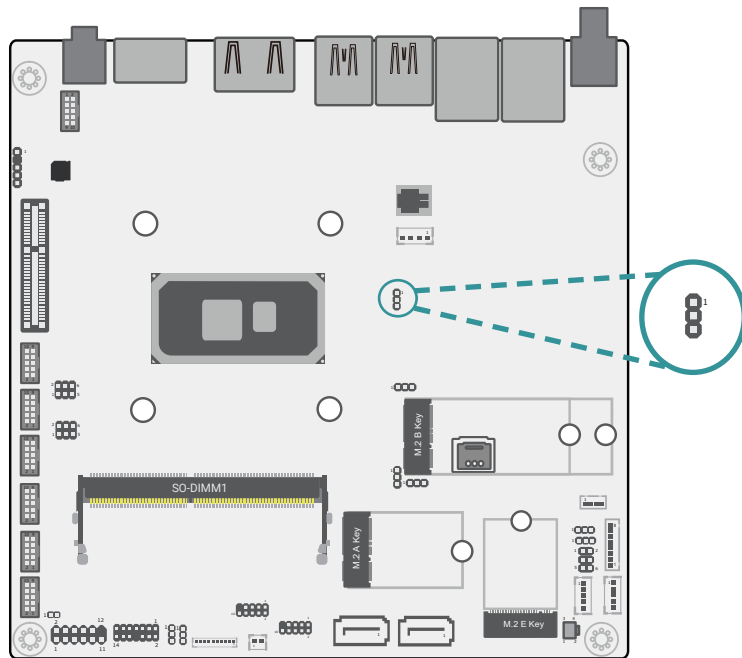


Pin	Assignment
1	DEBUG_UART_TX
2	DEBUG_UART_RX
3	GND

System Fan (J20)

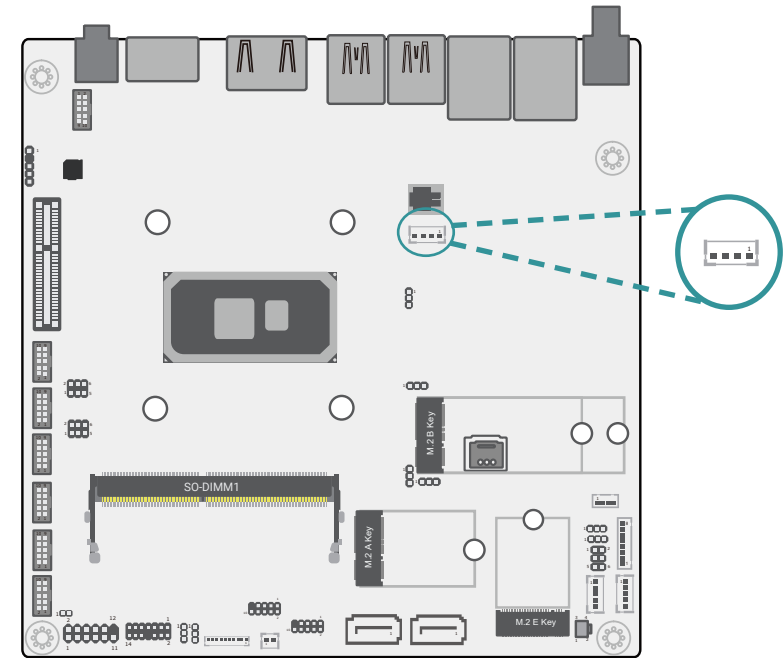


Pin	Assignment
1	GND
2	+12V
3	PWM
4	TACH

System Fan (J10)

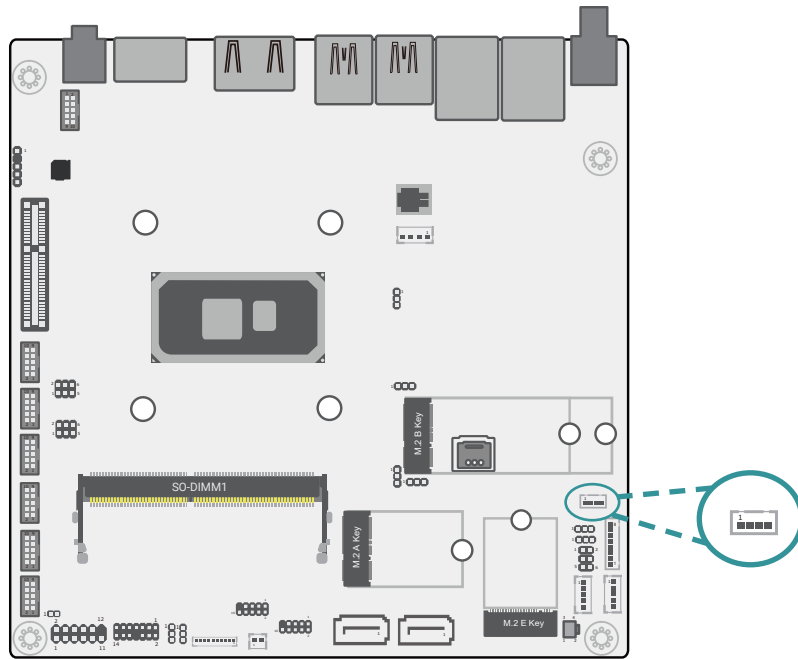


Pin	Assignment
1	GND
2	+12V
3	PWM
4	TACH

DIO (J16)

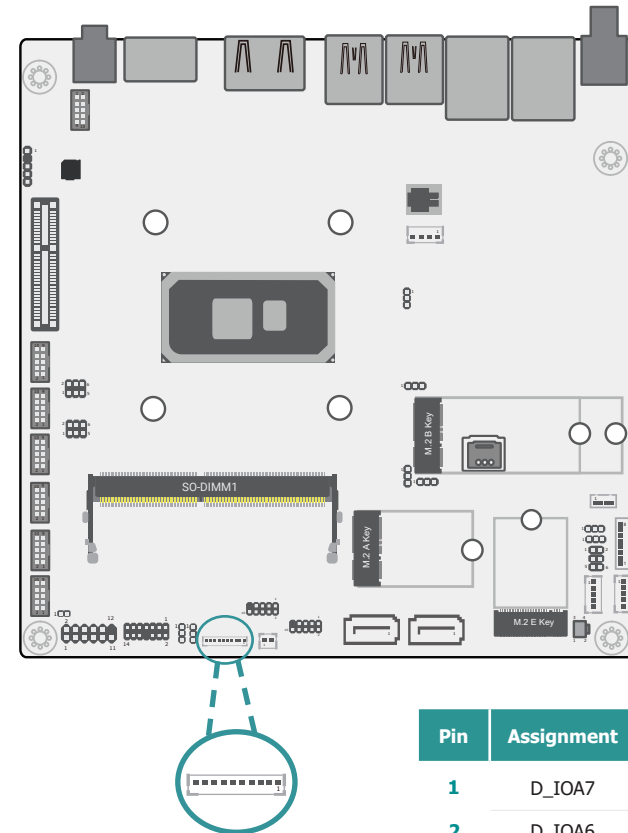


Pin	Assignment
1	D_IOA7
2	D_IOA6
3	D_IOA5
4	D_IOA4
5	D_IOA3
6	D_IOA2
7	D_IOA1
8	D_IOA0
9	5VSB
10	GND

SATA POWER (CN8)

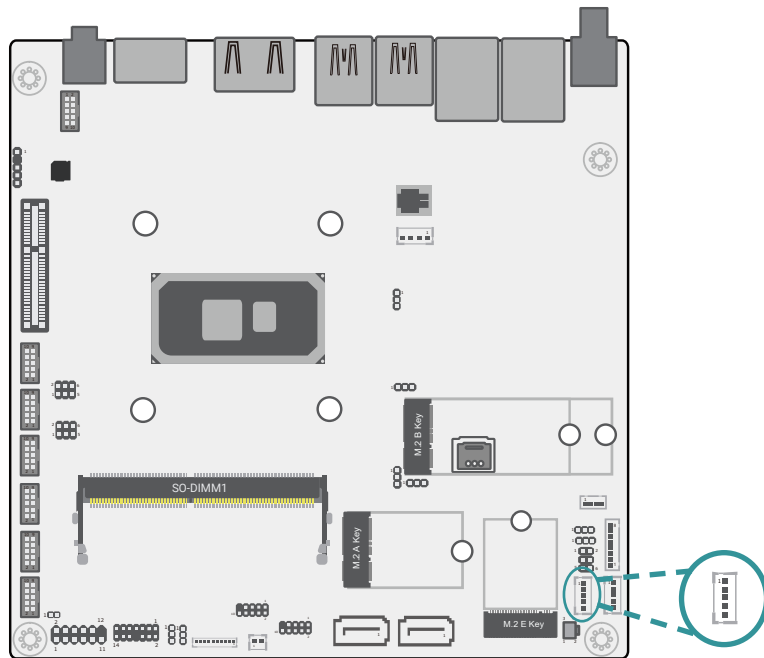


Pin	Assignment
1	5V
2	5V
3	12V
4	GND
5	GND

SATA POWER (CN12)

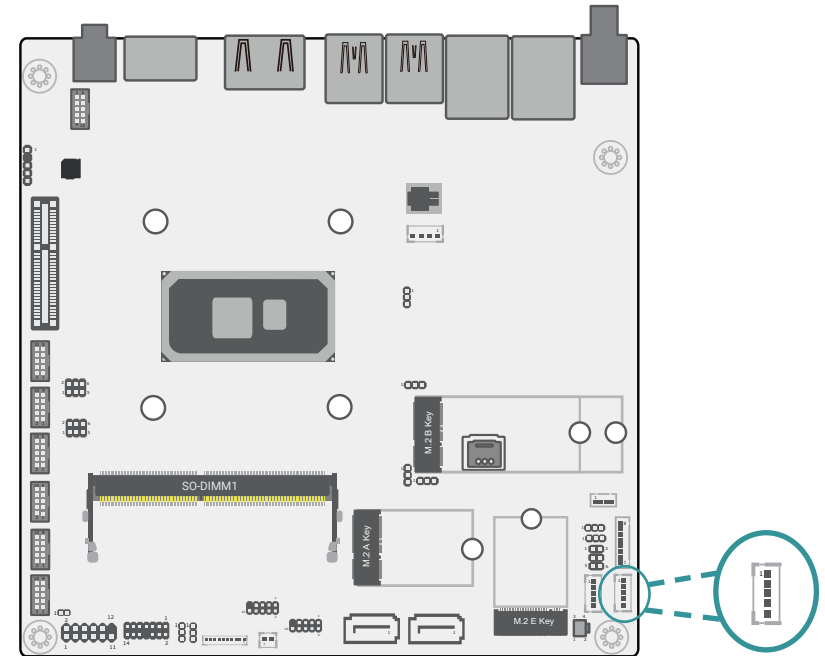


Pin	Assignment
1	5V
2	5V
3	12V
4	GND
5	GND

S/PDIF (AUJ2)

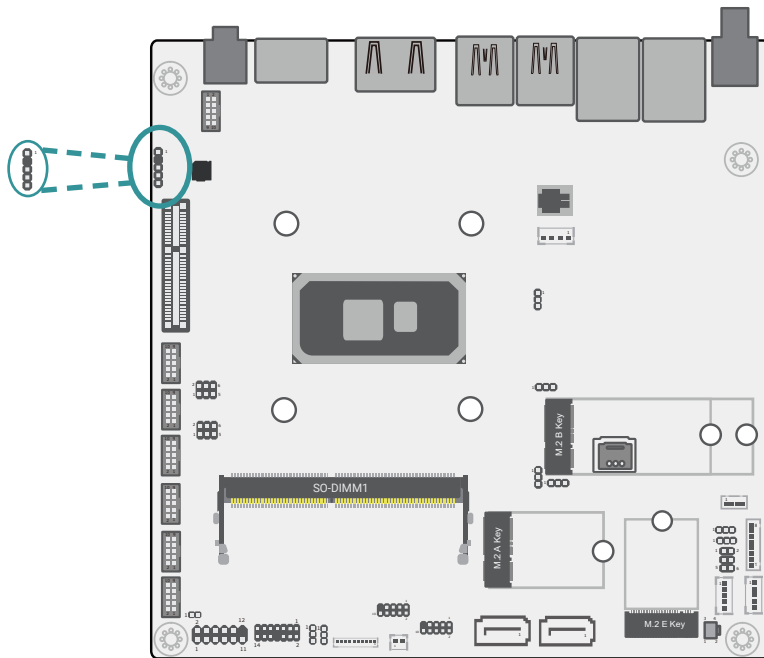


Pin	Assignment
1	5V
2	NC
3	SPDIF OUT
4	GND
5	SPDIF IN

SATA1 (J12)

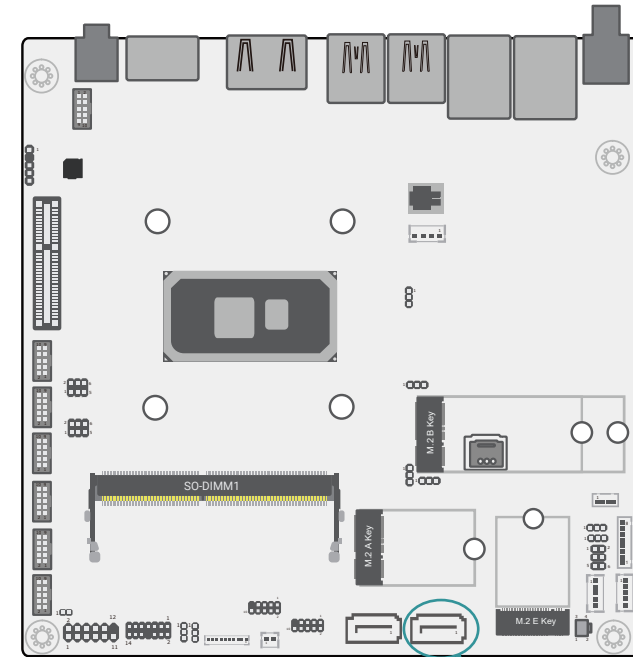


Pin	Assignment
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

SATA0 (J4)

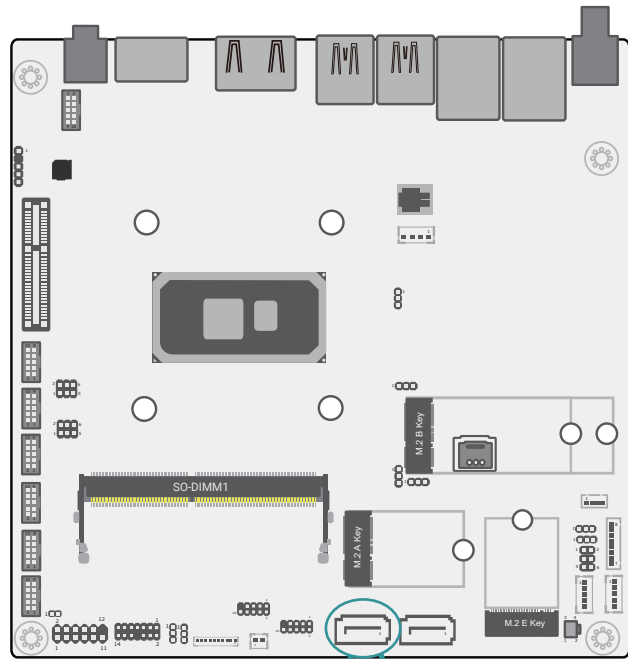


Pin	Assignment
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

Backlight CON (DPJ2)

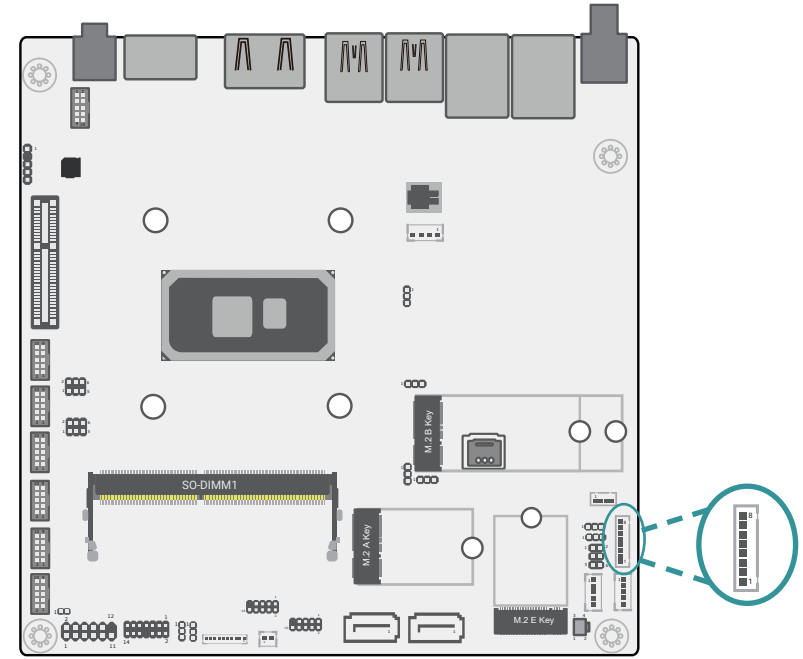


Pin	Assignment
1	GND
2	GND
3	PWM
4	VCC_PANEL_PWR
5	LVDS_3V3
6	BLONOFF
7	INV_PWR
8	INV_PWR

COM1 Power Select (TSJP1)

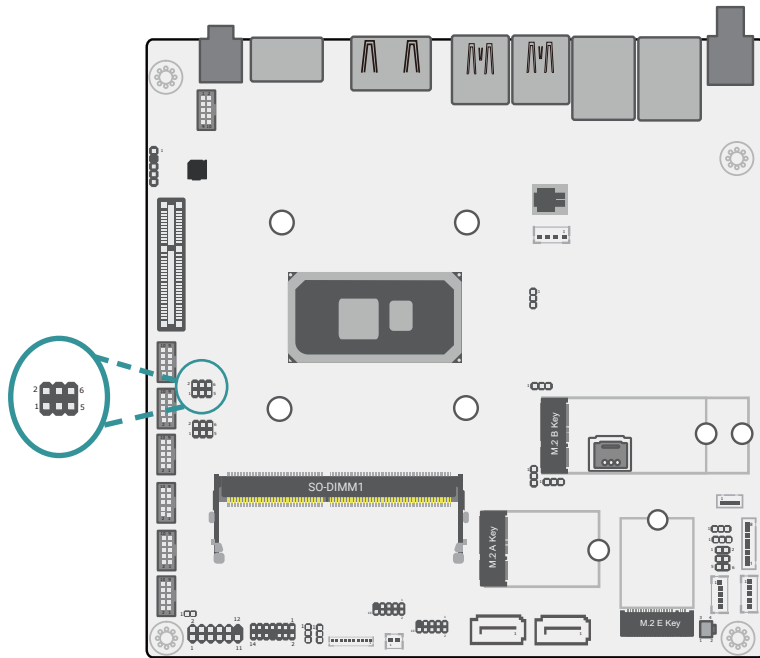


Pin	Assignment	Pin	Assignment
1	MRI-	2	MDCD-
3	X_MRI-	4	X_MDCD-
5	5V	6	12V

COM2 Power Select (TSJP2)

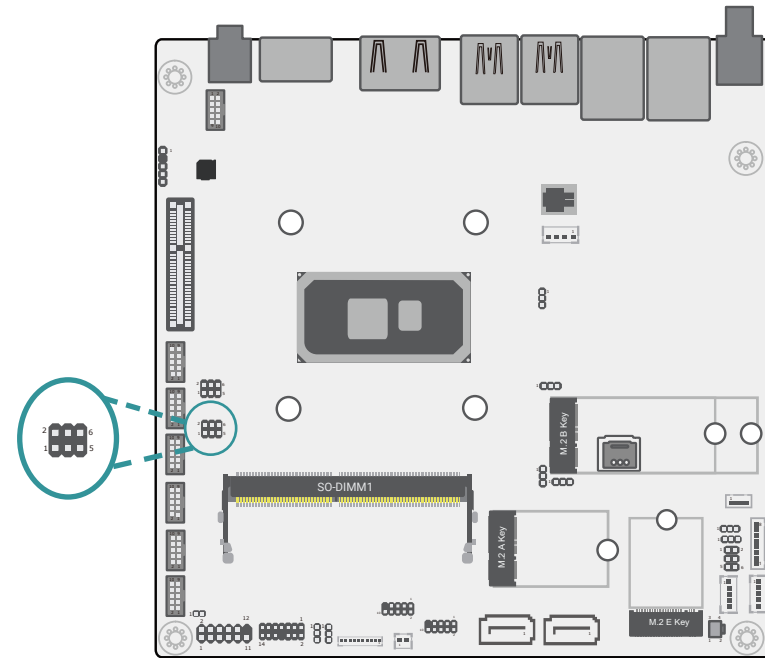

Pin	Assignment	Pin	Assignment
1	MRI-	2	MDCD-
3	X_MRI-	4	X_MDCD-
5	5V	6	12V

COM1 (TSJ1) COM3 (TSJ3) COM5 (TSJ5)
COM2 (TSJ2) COM4 (TSJ4) COM6 (TSJ6)

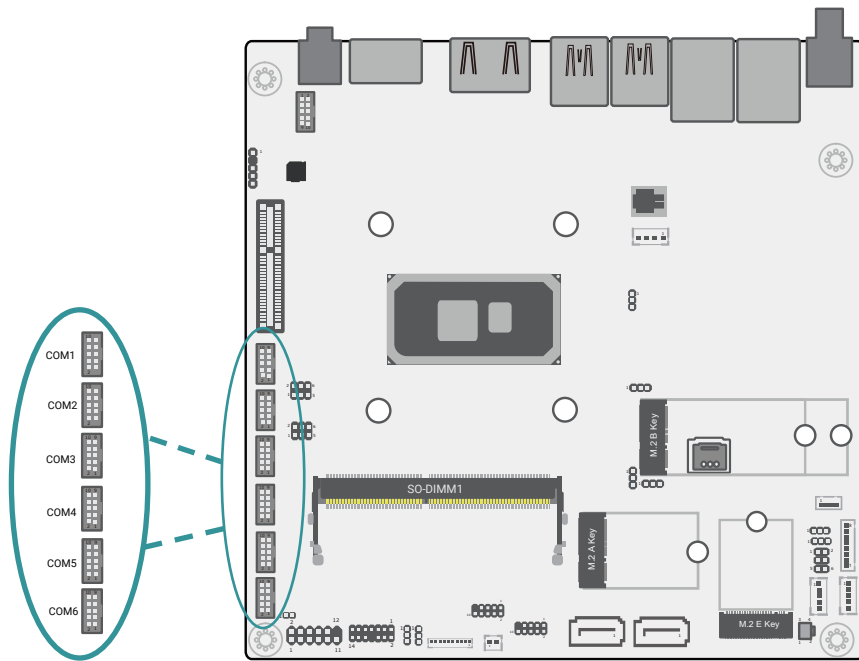


► COM1 RS232/RS422/RS485 (TSJ1)

Pin	RS232	RS422 Full Duplex	RS485
1	DCD-	TX-	Data-
2	RD	TX+	Data+
3	TD	RX+	N.C
4	DTR-	RX-	N.C
5	GND	GND	GND
6	DSR-	N.C	N.C
7	RTS-	N.C	N.C
8	CTS-	N.C	N.C
9	RI-	N.C	N.C
10	N.C	N.C	N.C

► COM2/COM3/COM4/COM5/COM6


Pin	Assignment	Pin	Assignment
1	MDCD-	2	MSIN-
3	MSO-	4	MDTR-
5	GND	6	MDSR-
7	MRTS-	8	MCTS-
9	MRI-	10	----

Front Audio (AUJ1)

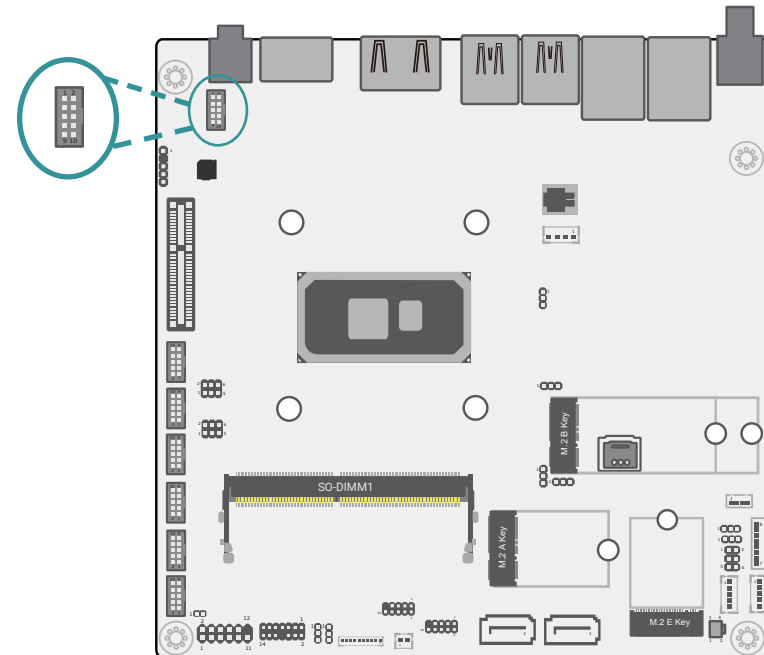


Pin	Assignment	Pin	Assignment
1	MIC2_L	2	GND
3	MIC2_R	4	NC
5	LINE2_R	6	MIC2_JD
7	GND	8	NC
9	LINE2_L	10	LINE2_JD

USB2.0 Pin Header (J3)

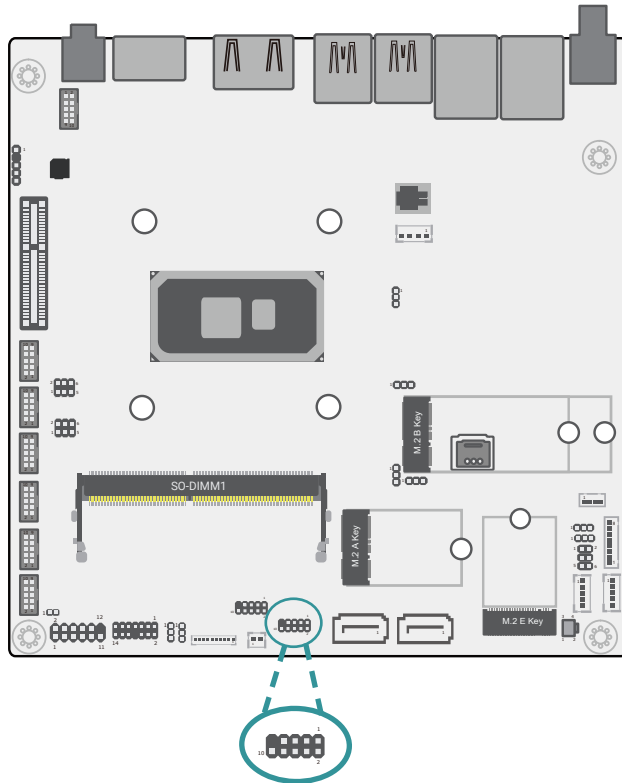



Pin	Assignment	Pin	Assignment
1	5V	2	5V
3	USB2_4_C_N	4	USB2_3_C_N
5	USB2_4_C_P	6	USB2_3_C_P
7	GND	8	GND
9	----	10	NC

USB2.0 Pin Header (J21)

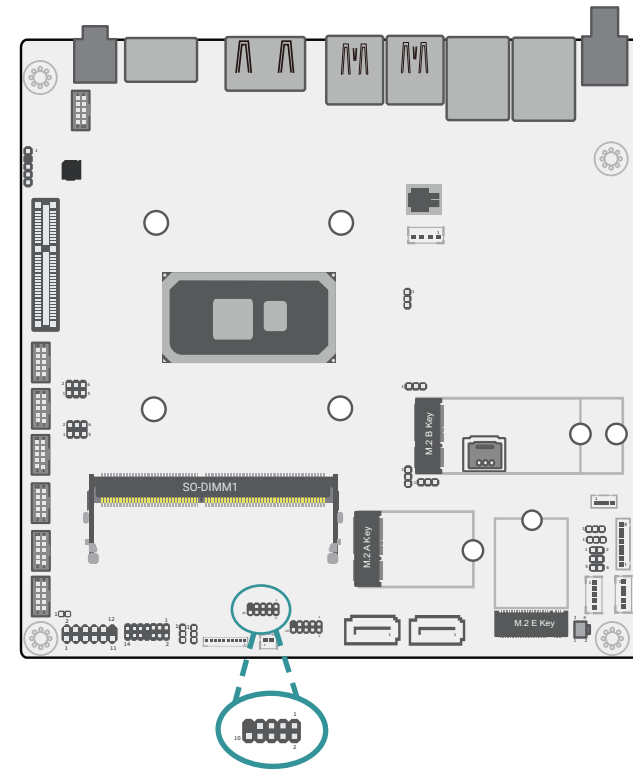



Pin	Assignment	Pin	Assignment
1	5V	2	5V
3	USB2_1_HUB_C_N	4	USB2_2_HUB_C_N
5	USB2_1_HUB_C_P	6	USB2_2_HUB_C_P
7	GND	8	GND
9	----	10	NC

eSPI Header(Debug) (J5)

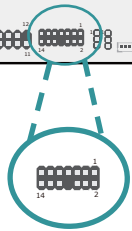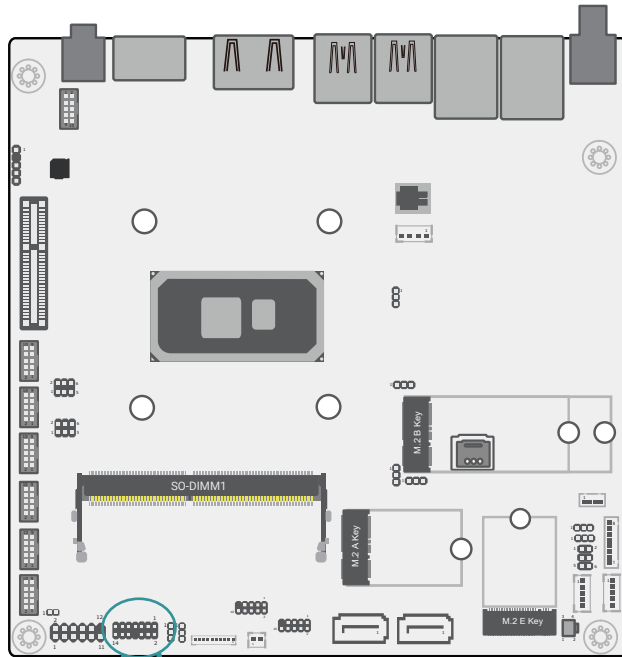


Pin	Assignment	Pin	Assignment
1	3V3SB	2	ESPI_CLK
3	ESPI_RESET#	4	GND
5	ESPI_ALT#	6	GND
7	ESPI_D0	8	---
9	ESPI_D1	10	ESPI_CS
11	ESPI_D2	12	3V3SB
13	ESPI_D3	14	3V3SB

Front Panel (J17)

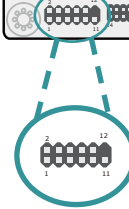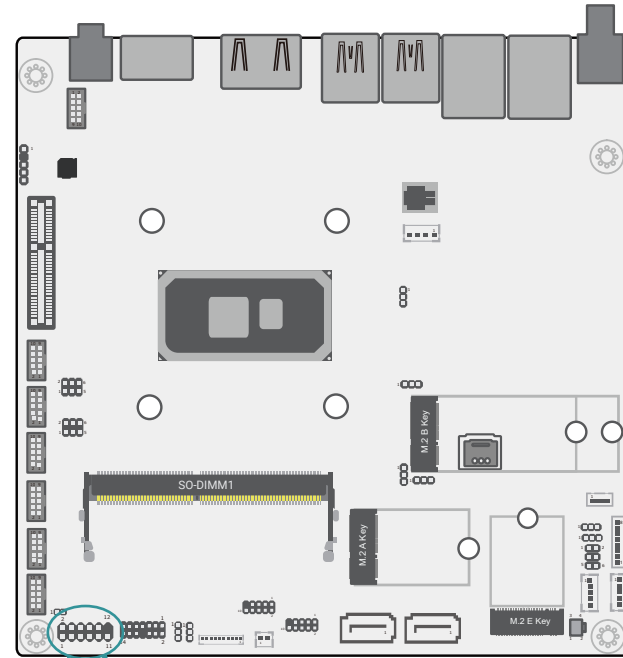

Pin	Assignment	Pin	Assignment
1	NC	2	3V3SB
3	3V3	4	3V3SB
5	HD_LED#	6	SUS_LED#
7	GND	8	GND
9	SYS_RST0	10	PWR_BTN0
11	NC	12	---

► Expansion Slots

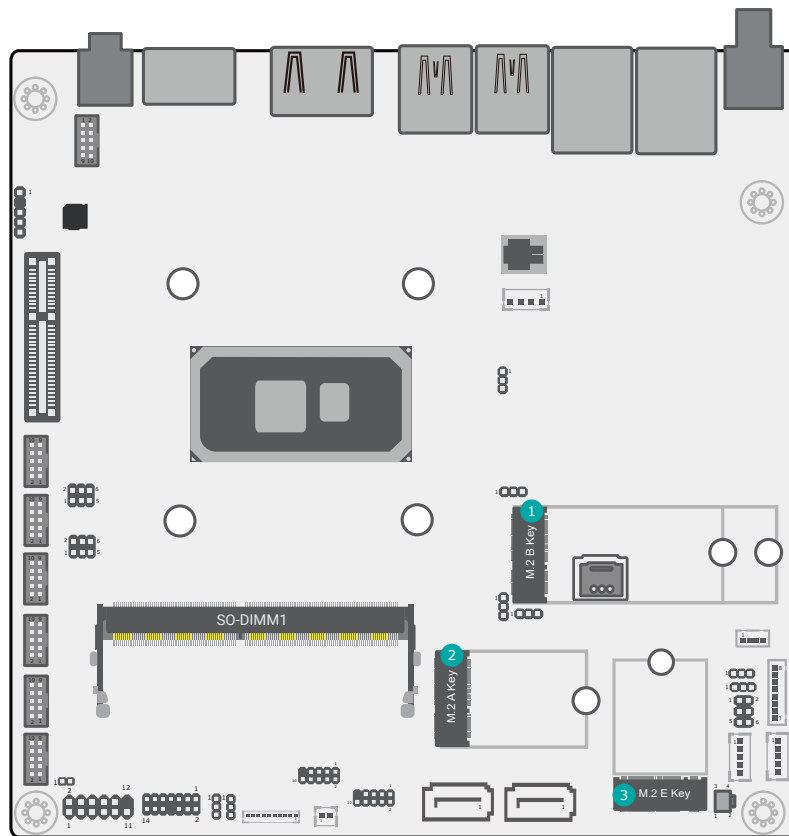

1 M.2 B-Key


2 M.2 A-Key

3 M.2 E-Key


Installing the M.2 Module

Before installing the M.2 module into the M.2 socket, please make sure that the following safety cautions are well-attended.


1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.
3. Locate the M.2 socket on the system board
4. Make sure the notch on card is aligned to the key on the socket.
5. Make sure the standoff screw is removed from the standoff.

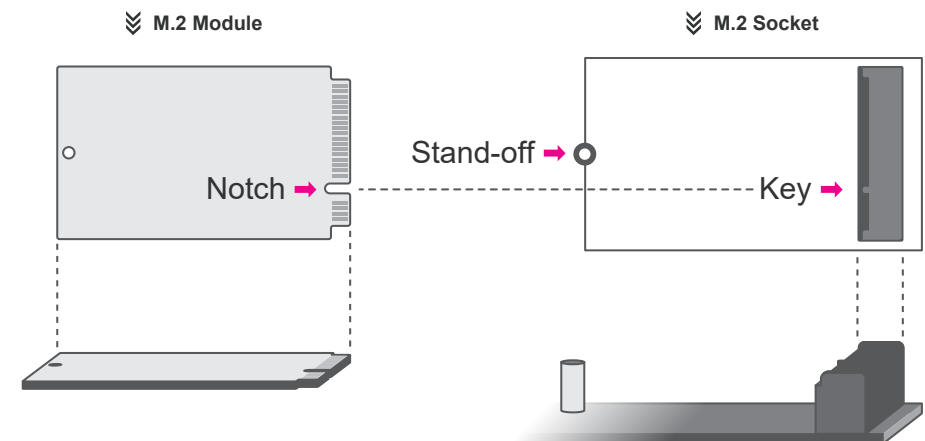


Please follow the steps below to install the card into the socket.

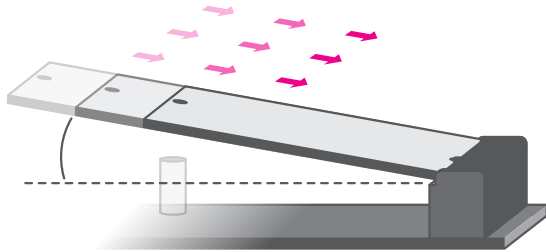

Step 1:
Insert the card into the socket at an angle while making sure the notch and key are perfectly aligned.

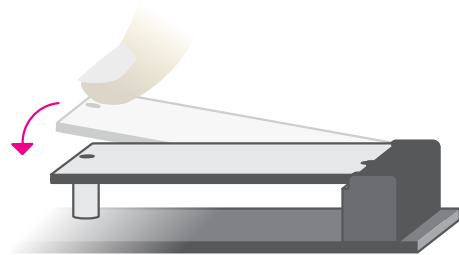

Step 2:
Press the end of the card far from the socket down until against the stand-off.

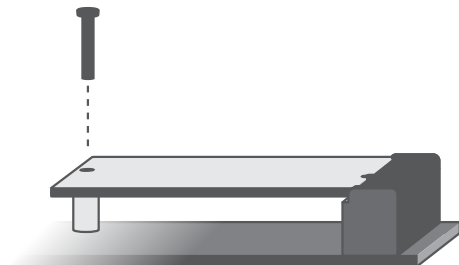

Step 3:
Screw tight the card onto the stand-off with a screw driver and a stand-off screw until the gap between the card and the stand-off closes up. The card should be lying parallel to the board when it's correctly mounted.

Chapter 3 - BIOS Settings

► Overview

The BIOS is a program that takes care of the basic level of communication between the CPU and peripherals. It contains codes for various advanced features found in this system board.

The BIOS allows you to configure the system and save the configuration in a battery-backed CMOS so that the data retains even when the power is off. In general, the information stored in the CMOS RAM of the EEPROM will stay unchanged unless a configuration change has been made such as a hard drive replaced or a device added.

It is possible that the CMOS battery will fail causing CMOS data loss. If this happens, you need to install a new CMOS battery and reconfigure the BIOS settings.



Note:

The BIOS is constantly updated to improve the performance of the system board; therefore the BIOS screens in this chapter may not appear the same as the actual one. These screens are for reference purpose only.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering the BIOS Setup Utility

The BIOS Setup Utility can only be operated from the keyboard and all commands are keyboard commands. The commands are available at the right side of each setup screen.

The BIOS Setup Utility does not require an operating system to run. After you power up the system, the BIOS message appears on the screen and the memory count begins. After the memory test, the message "Press DEL to run setup" will appear on the screen. If the message disappears before you respond, restart the system or press the "Reset" button. You may also restart the system by pressing the <Ctrl> <Alt> and keys simultaneously.

Legends

Keys	Function
Right / Left arrow	Move the highlight left or right to select a menu
Up / Down arrow	Move the highlight up or down between submenus or fields
<Enter>	Enter the highlighted submenu
+ (plus key)/F6	Scroll forward through the values or options of the highlighted field
- (minus key)/F5	Scroll backward through the values or options of the highlighted field
<F1>	Display general help
<F2>	Display previous values
<F9>	Optimized defaults
<F10>	Save and Exit
<Esc>	Return to previous menu

Scroll Bar


When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When "►" appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

► Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

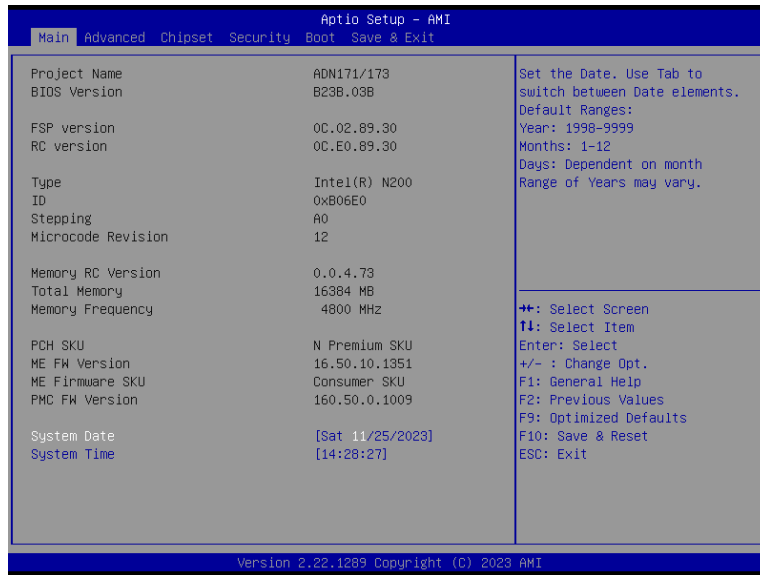

System Date

The date format is <month>, <date>, <year>. Press "Tab" to switch to the next field and press "-" or "+" to modify the value.

System Time


The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

► Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.




Important:
Setting incorrect field values may cause the system to malfunction.

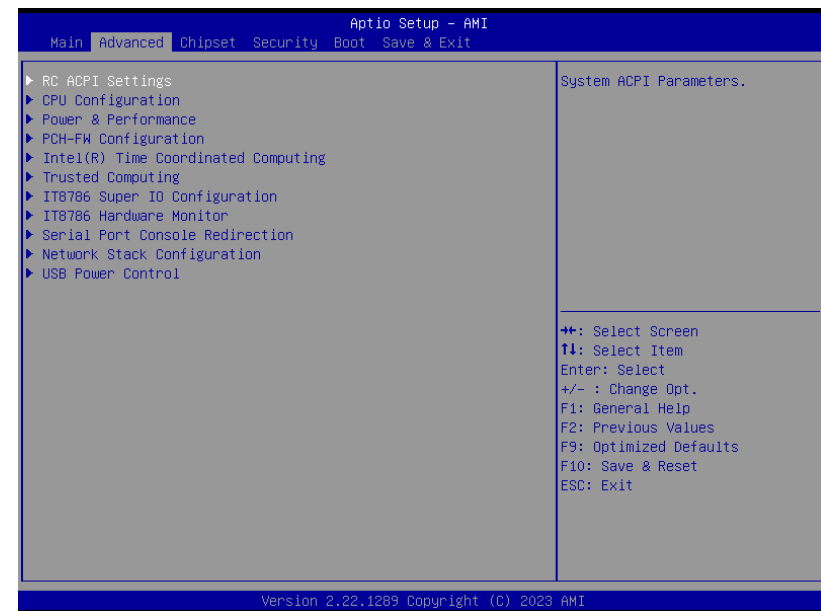

▶ Advanced

RC ACPI Settings

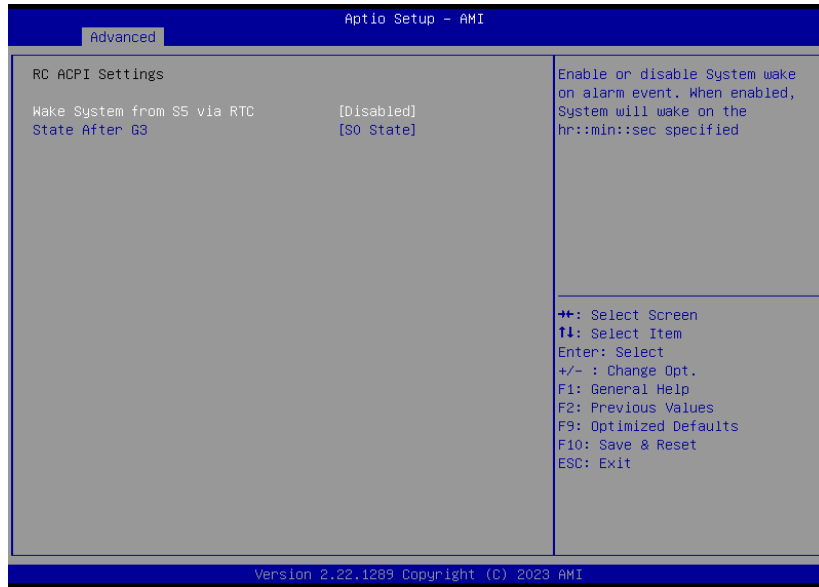

Wake system from S5 via RTC

When Enabled, the system will automatically power up at a designated time every day. Once it's switched to [Enabled], please set up the time of day – hour, minute, and second – for the system to wake up.


State After G3

Select between S0 State, and S5 State. This field is used to specify what state the system is set to return to when power is re-applied after a power failure (G3 state).

- **S0 State** The system automatically powers on after power failure.
- **S5 State** The system enter soft-off state after power failure. Power-on signal input is required to power up the system.

▶ Advanced

CPU Configuration

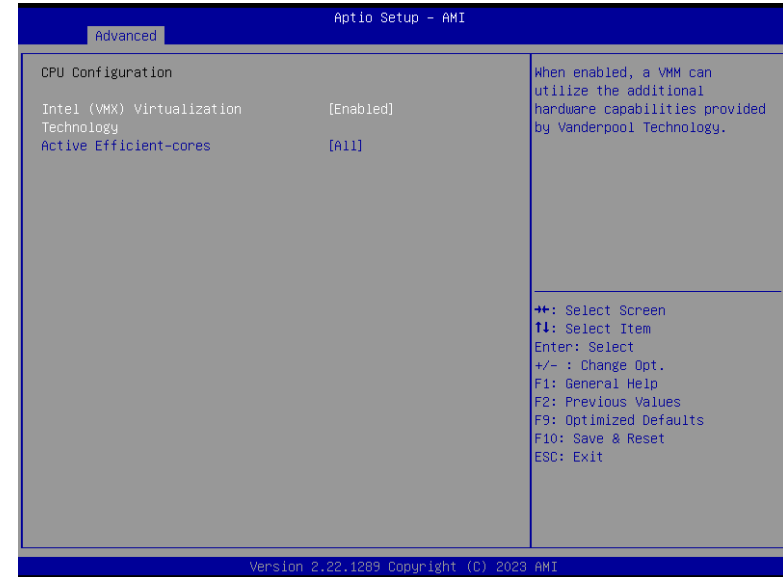

Intel (VMX) Virtualization Technology


When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Active Processor Cores

Select number of cores to enable in each processor package: all or 1.

▶ Advanced

Power & Performance

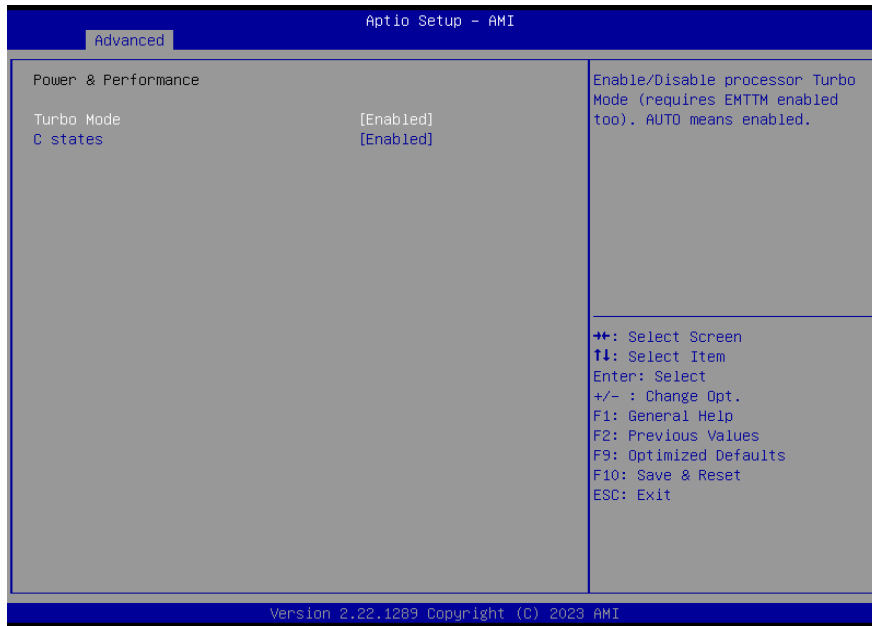

Turbo Mode


Enable or disable turbo mode of the processor. This field will only be displayed when EIST is enabled.

C states

Enable or disable CPU Power Management. It allows CPU to enter "C states" when it's idle and nothing is executing.

▶ Advanced

PCH-FW Configuration

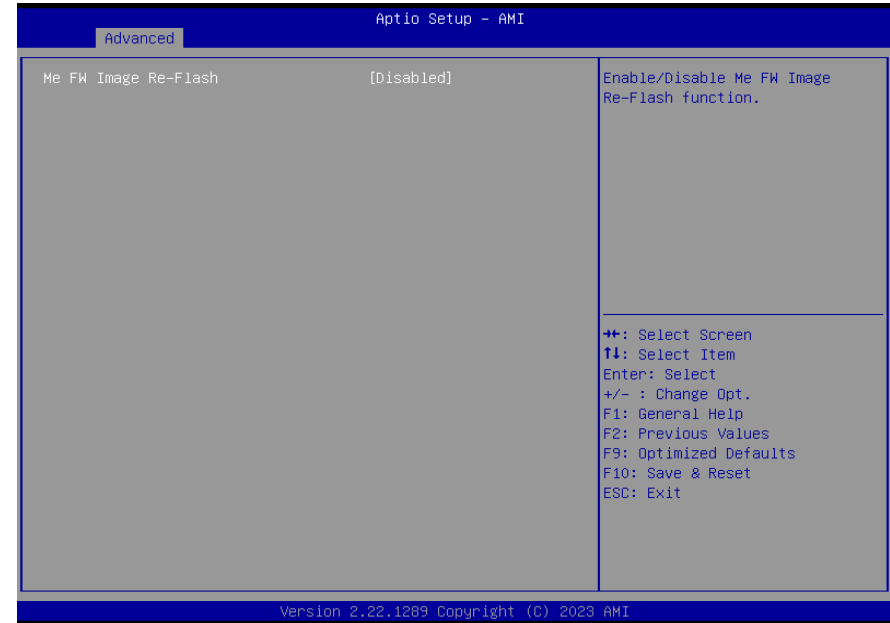


ME State

When this field is set to Disabled, ME will be put into ME Temporarily Disabled Mode.

► Advanced

Intel(R) Time Coordinated Computing

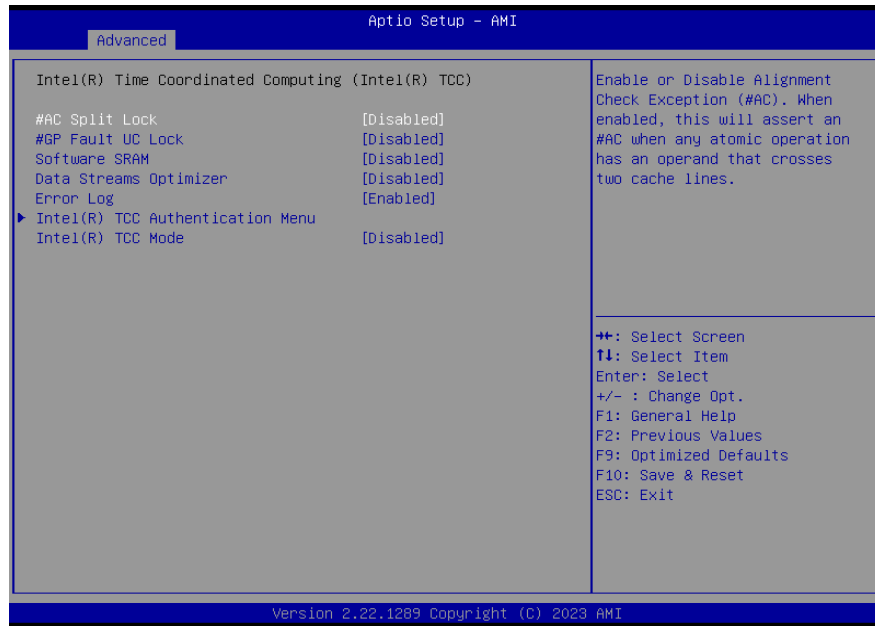

#AC Split Lock

Enable or Disable Alignment Check Exception (#AC). When enabled, this will assert an #AC when any atomic operation has an operand that crosses two cache lines.

#GP Fault UC Lock

Enable or Disable GP Fault Exception (GP#). When enabled, this will assert an GP# when encountering a Lock to un-cacheable memory before the bus is locked.

Software SRAM

Enable or Disable Software SRAM. Enable will allocate 1 way of LLC; if Cache Configuration subregion is available, it will allocate based on the subregion.

Data Streams Optimizer

Enable or Disable Data Streams Optimizer (DSO). Enable will utilize DSO Subregion to tune system. DSO settings supercede Intel(R) TCC Mode settings that overlap between the two.

Error Log

Enable or Disable Error Log. Enable will record errors related to Intel(R) TCC and save them to memory.

Intel(R) TCC Authentication Menu

Intel(R) TCC Authentication Menu options


Intel(R) TCC Mode

Enable or Disable Intel(R) TCC Mode.

When enabled, this will modify system settings to improve real-time performance. The full list of settings and their current state are displayed below when Intel (R) TCC mode is enabled.

▶ Advanced

Trusted Computing

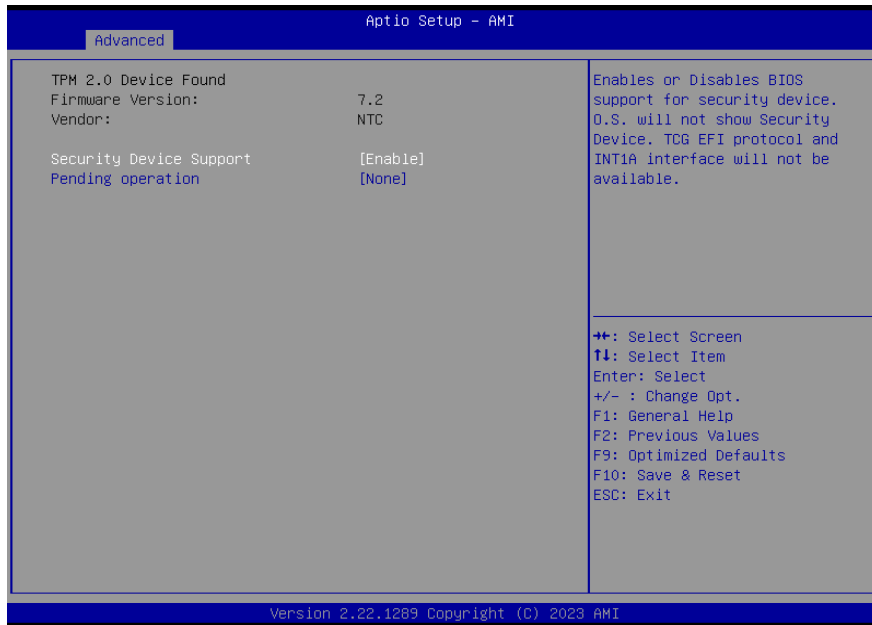

Security Device Support


This field is used to enable or disable BIOS support for the security device such as an TPM 2.0 to achieve hardware-level security via cryptographic keys.

Pending operation

To clear the existing TPM encryption, select "TPM Clear" and restart the system. This field is not available when "Security Device Support" is disabled.

▶ Advanced

IT8786 Super IO Configuration

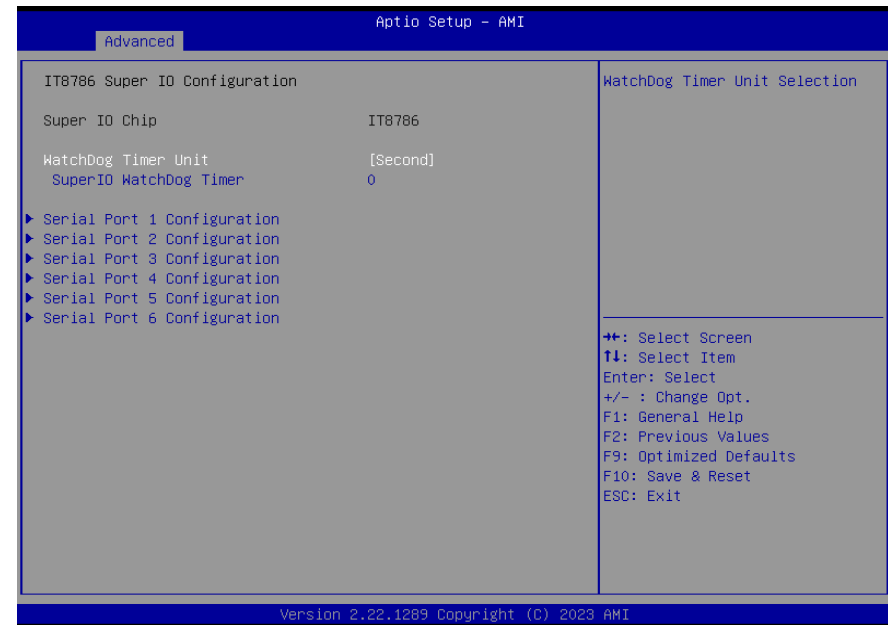

WatchDog Timer Unit

Select WatchDog Timer Unit — Second or Minute.

SuperIO WatchDog Timer



Set SuperIO WatchDog Timer Timeout value. The range is from 0 (disabled) to 255.



Note:
The sub-menus are detailed in following sections.

▶ Advanced

IT8786 Super IO Configuration ▶ Serial Port 1, 2 Configuration

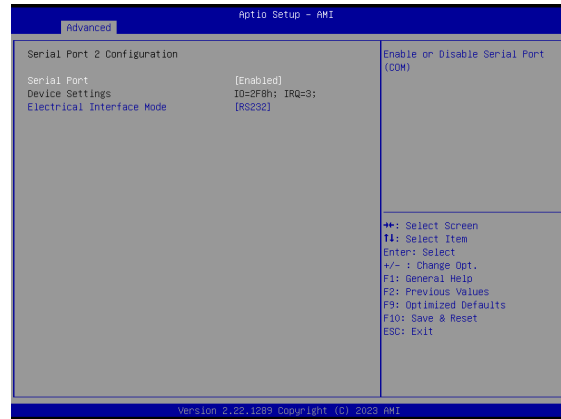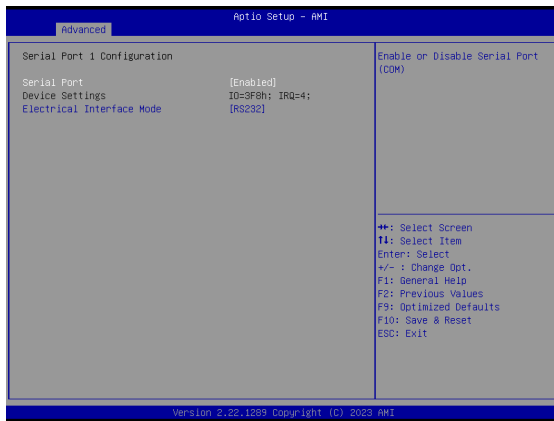

Serial Port

Enable or disable serial port.

▶ Advanced

IT8786 Super IO Configuration ▶ Serial Port 3, 4 Configuration





Serial Port

Enable or disable serial port.

▶ Advanced

IT8786 Super IO Configuration ▶ Serial Port 5, 6 Configuration

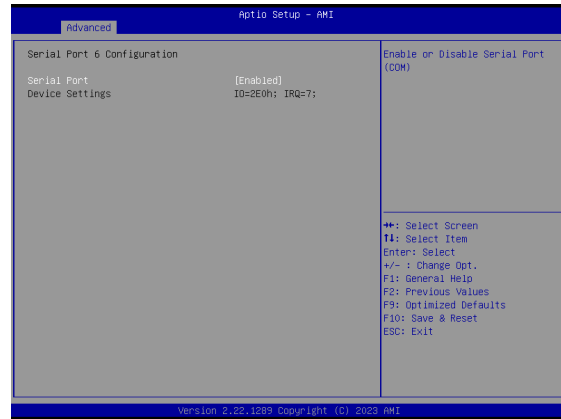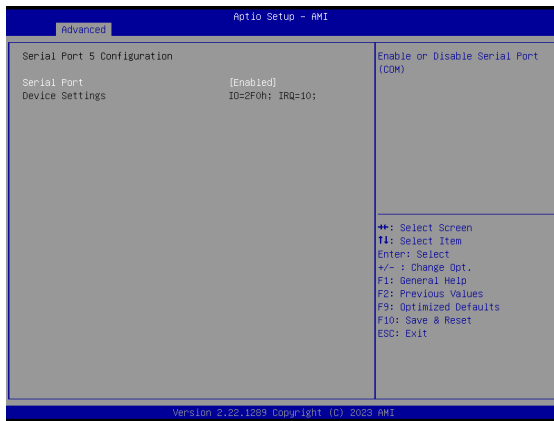


Serial Port

Enable or disable serial port.

▶ Advanced

IT8786 HW Monitor

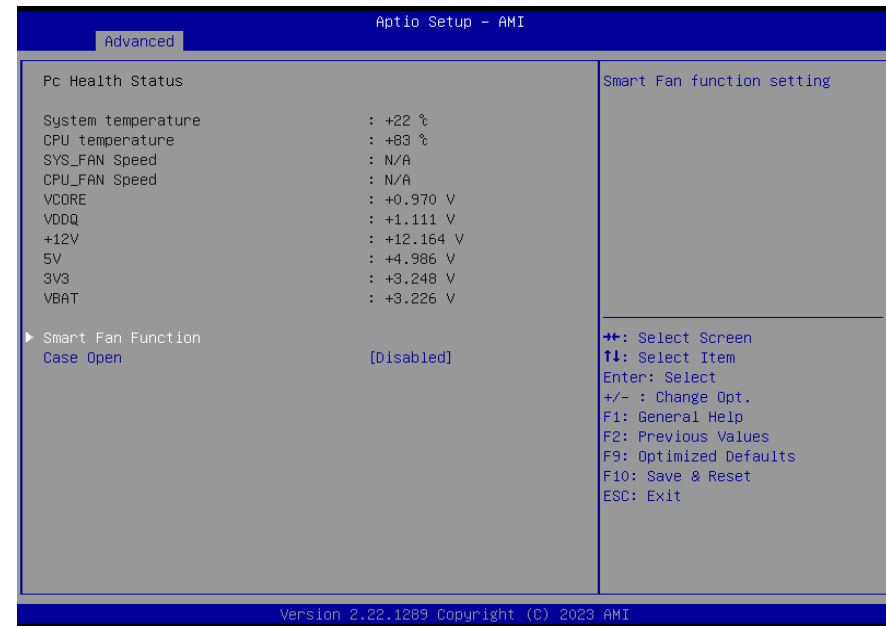


This section displays the system's health information, i.e. voltage readings, CPU and system temperatures, and fan speed readings

Case Open

Enable or disable the case open detection function.

▶ Advanced

Serial Port Console Redirection

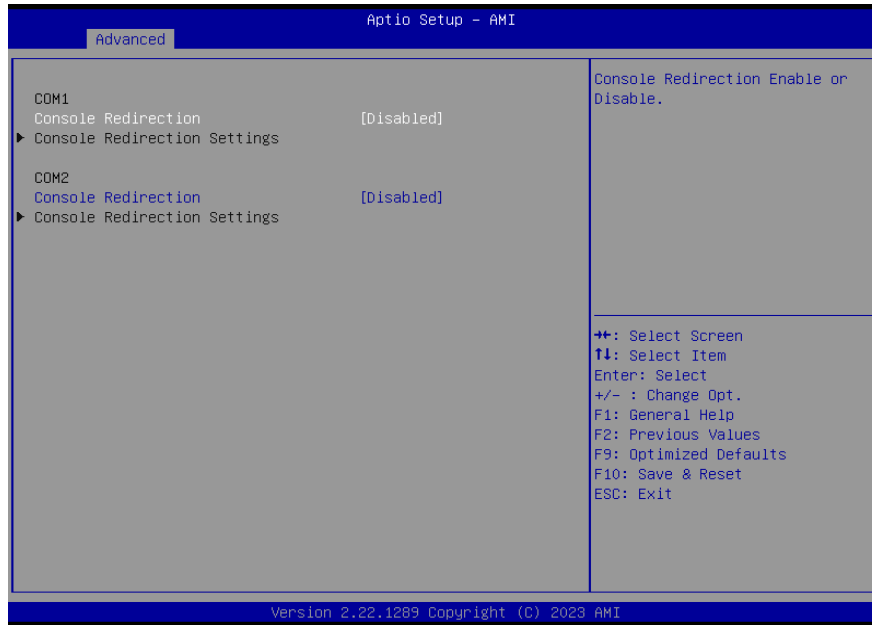


Console Redirection

By enabling Console Redirection of a COM port, the sub-menu of console redirection settings will become available for configuration as detailed in the following.

▶ Advanced

Serial Port Console Redirection ▶ Console Redirection Settings

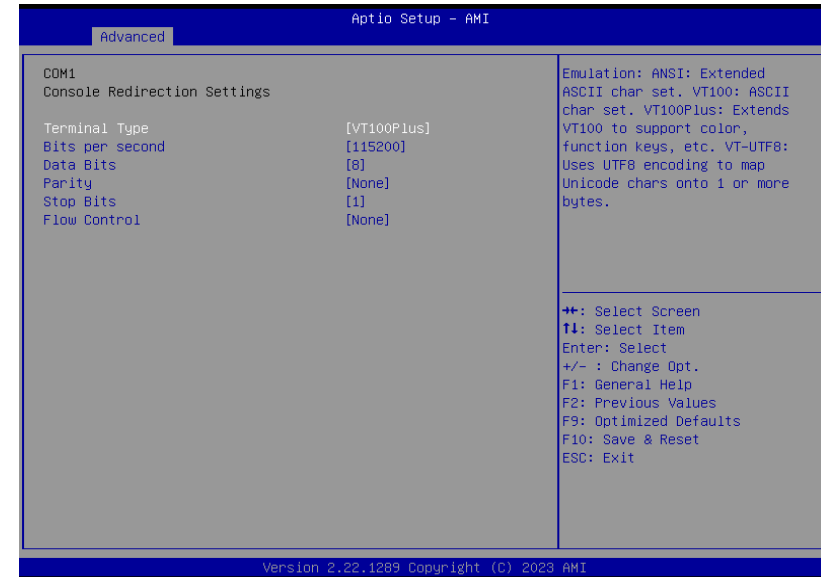

Configure the serial settings of the current COM port.

Terminal Type

Select terminal type: VT100, VT100+, VT-UTF8 or ANSI.

Bits per second

Select serial port transmission speed: 9600, 19200, 38400, 57600 or 115200.

Data Bits

Select data bits: 7 bits or 8 bits.

Parity

Select parity bits: None, Even, Odd, Mark or Space.

Stop Bits

Select stop bits: 1 bit or 2 bits.

Flow Control

Select flow control type: None or Hardware RTS/CTS. Flow Control is for RS485 mode and is only supported by Serial Port 1 (COM1).

► Advanced

Network Stack Configuration



Network Stack

Enable or disable UEFI network stack. The following fields will appear when this field is en-abled.

Ipv4 PXE Support

Enable or disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be avail-able.

Ipv6 PXE Support

Enable or disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be avail-able.

PXE boot wait time


Set the wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.

Media detect count

Set the number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

▶ **Advanced**

USB Power Control

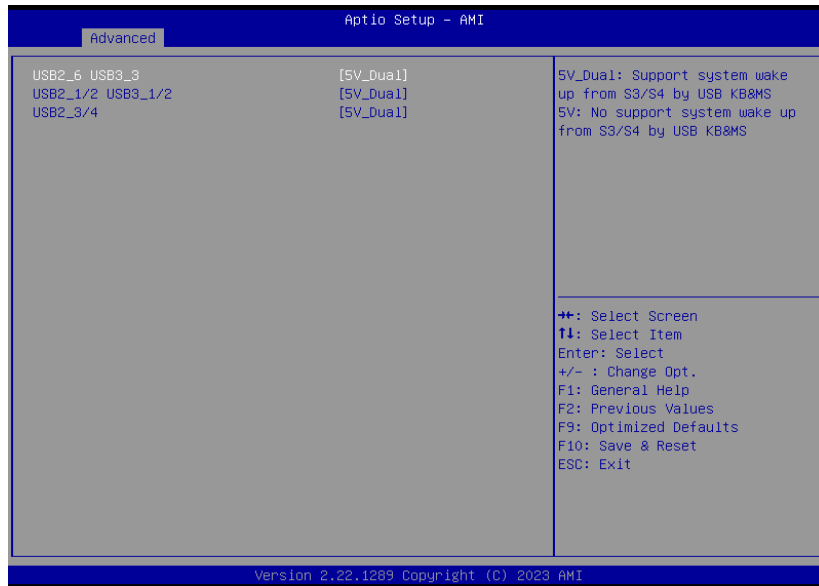


Server CA Configuration

5_Dual: Support system wake up from S3/S4 by USB KB&MS

5V: No support system wake up from S3/S4 by USB KB&MS

► Chipset

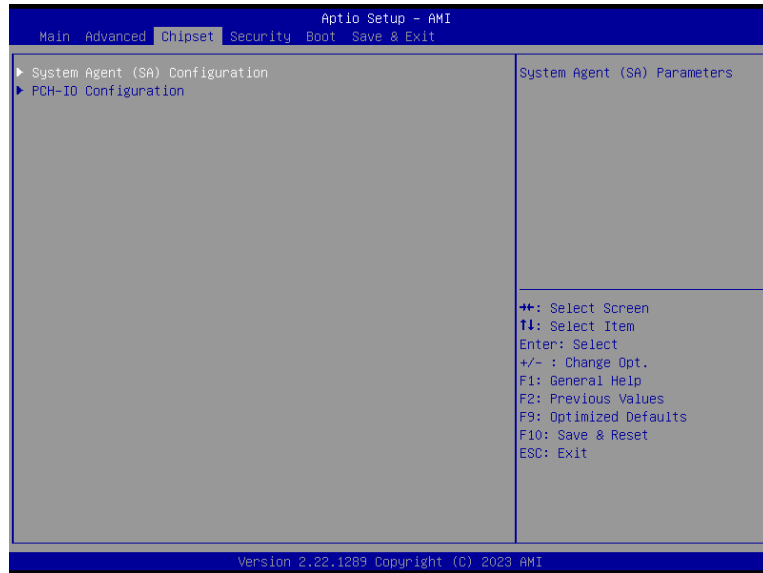

Please select a submenu and press Enter. The submenus are detailed in the following pages.

► Chipset

System Agent (SA) Configuration



Memory Configuration


Memory Configuration Parameters

Graphics Configuration

Graphics Configuration

► **Chipset**

PCH-IO Configuration

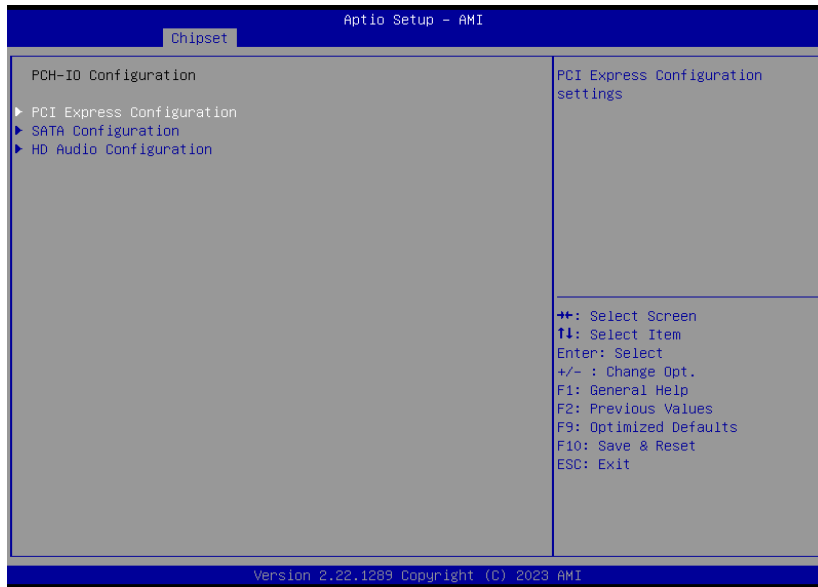

PCI Express Configuration

PCI Express Configuration Settings

SATA And RST Configuration


SATA Device Options Settings

HD Audio Configuration

HD Audio Subsystem Configuration Settings

► **Chipset**

PCH-IO Configuration ► PCI Express Configuration

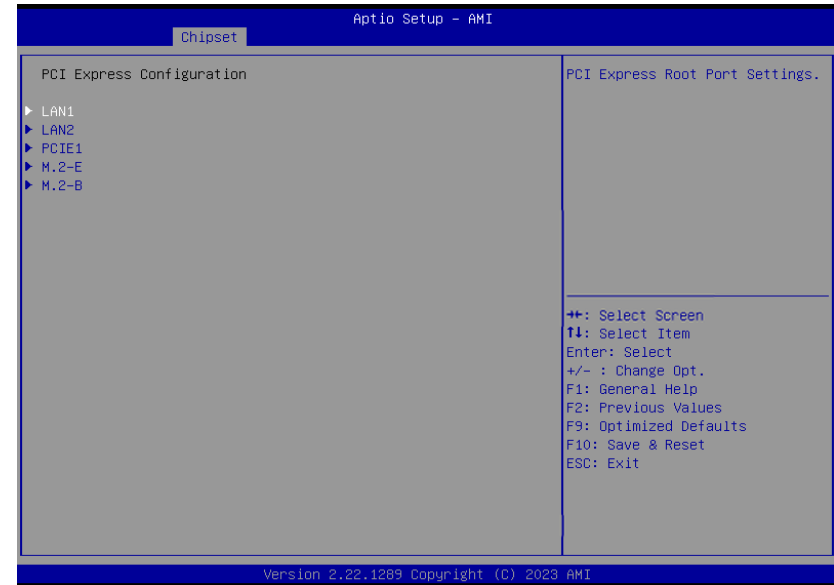


Select one of the PCI Express channels and press enter to configure the following settings.

LAN1, LAN2, PCIE1, M.2-E, M.2-B

Control the PCI Express Root Port.

► Chipset

PCH-IO Configuration ► SATA And RST Configuration

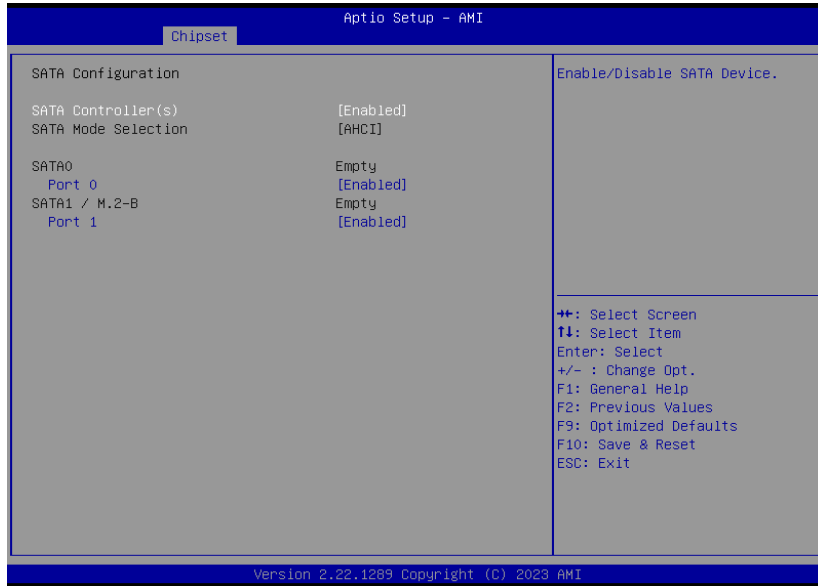

SATA Controller(s)

This field is used to enable or disable the Serial ATA controller.

SATA Mode Selection

The mode selection determines how the SATA controller(s) operates.


- **AHCI** This option allows the Serial ATA controller(s) to use AHCI (Advanced Host Controller Interface).

Ports

Enable or disable the Serial ATA port.

► Chipset

PCH-IO Configuration ► HD Audio Configuration

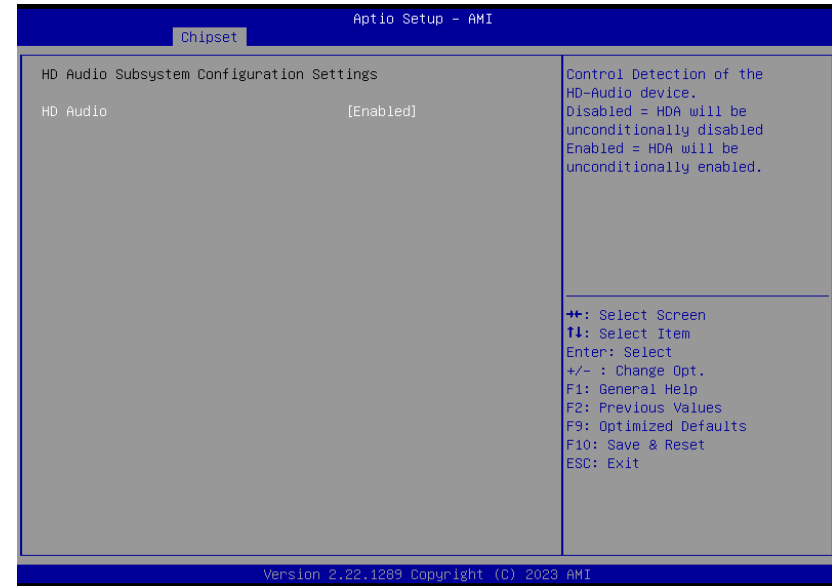


HD Audio

Control the detection of the HD Audio device.

- **Disabled** HDA will be unconditionally disabled.
- **Enabled** HDA will be unconditionally enabled.

► Security

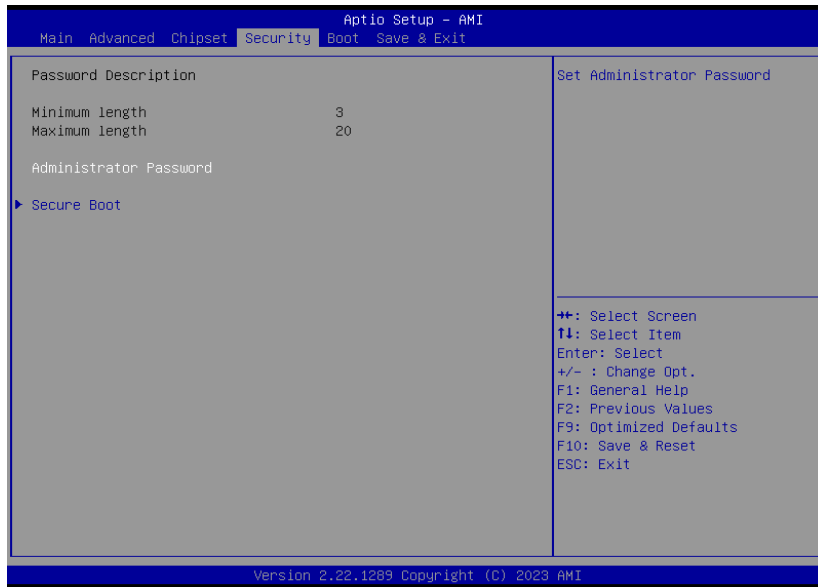

Administrator Password

Set the administrator password. To clear the password, input nothing and press enter when a new password is asked. Administrator Password will be required when entering the BIOS.

► Security

Secure Boot



Secure Boot

The Secure Boot store a database of certificates in the firmware and only allows the OSEs with authorized signatures to boot on the system. To activate Secure Boot, please make sure that "Secure Boot" is "[Enabled]", Platform Key (PK) is enrolled, "System Mode" is "User", and CSM is disabled. After enabling/disabling Secure Boot, please save the configuration and restart the system. When configured and activated correctly, the Secure Boot status will be "Active".

Secure Boot Mode

Select the secure boot mode – Standard or Custom. When set to Custom, the following fields will be configurable for the user to manually modify the key database.

Restore Factory Keys

Force system to User Mode. Load OEM-defined factory defaults of keys and databases onto the Secure Boot. Press Enter and a prompt will show up for you to confirm.


Reset To Setup Mode

Clear the database from the NVRAM, including all the keys and signatures installed in the Key Management menu. Press Enter and a prompt will show up for you to confirm.

Key Management

Enables expert users to modify Secure Boot Policy variables without full authentication.

► Boot

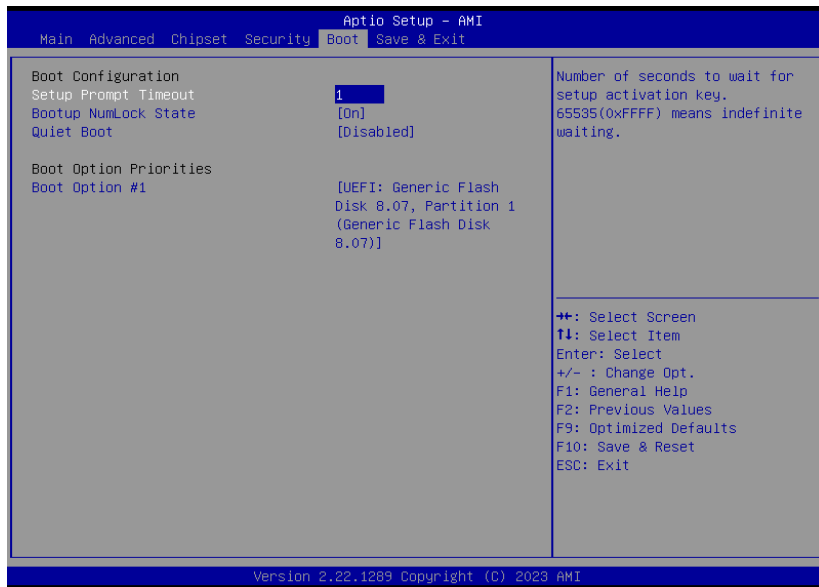

Setup Prompt Timeout

Set the number of seconds to wait for the setup activation key. 65535 (0xFFFF) denotes indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state: On or Off.

Quiet Boot

This section is used to enable or disable quiet boot option.

Boot Option Priorities


Rearrange the system boot order of available boot devices.



Note:

If "Boot option filter" of "CSM Configuration" is set to "UEFI and Legacy" or "UEFI only", and "Quiet Boot" is set to enabled, "BGRT Logo" will show up for configuration. Refer to the Advanced > CSM Configuration submenu for more information.

► Save & Exit

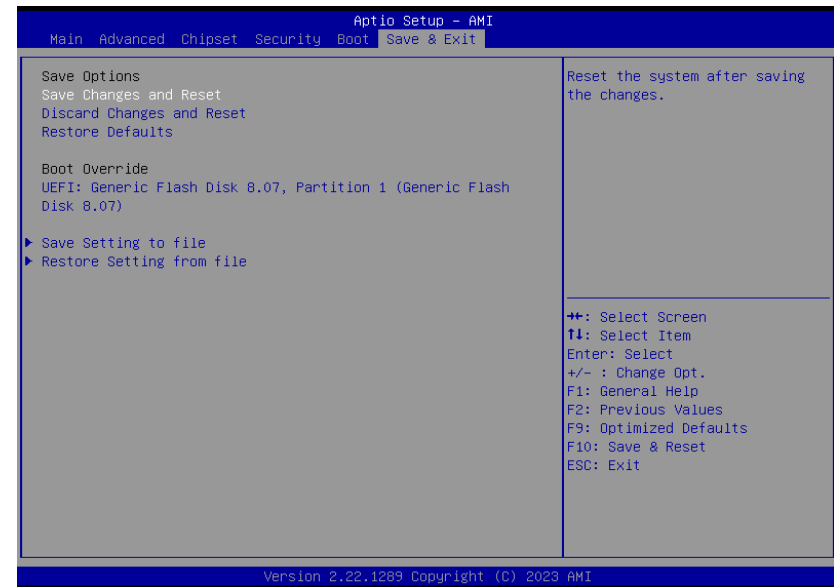

Save Changes and Reset

To save the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system after saving all changes made.

Discard Changes and Reset

To discard the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system setup without saving any changes.

Restore Defaults

To restore and load the optimized default values, select this field and then press <Enter>. A dialog box will appear. Select Yes to restore the default values of all the setup options.

Boot Override

Move the cursor to an available boot device and press Enter, and then the system will immediately boot from the selected boot device. The Boot Override function will only be effective for the current boot. The "Boot Option Priorities" configured in the Boot menu will not be changed.

- **Save Setting to file** Select this option to save BIOS configuration settings to a USB flash device.
- **Restore Setting from file** This field will appear only when a USB flash device is detected. Select this field to restore setting from the USB flash device.

► Updating the BIOS

To update the BIOS, you will need the new BIOS file and a flash utility. Please contact technical support or your sales representative for the files and specific instructions about how to update BIOS with the flash utility.

► Notice: BIOS SPI ROM

1. The Intel® Management Engine has already been integrated into this system board. Due to the safety concerns, the BIOS (SPI ROM) chip cannot be removed from this system board and used on another system board of the same model.
2. The BIOS (SPI ROM) on this system board must be the original equipment from the factory and cannot be used to replace one which has been utilized on other system boards.
3. If you do not follow the methods above, the Intel® Management Engine will not be updated and will cease to be effective.



Note:

- a. You can take advantage of flash tools to update the default configuration of the BIOS (SPI ROM) to the latest version anytime.
- b. When the BIOS IC needs to be replaced, you have to populate it properly onto the system board after the EEPROM programmer has been burned and follow the technical person's instructions to confirm that the MAC address should be burned or not.