



# DT200-CS

MiniITX System with MXM  
User's Manual

## Copyright

This publication contains information that is protected by copyright. No part of it may be reproduced in any form or by any means or used to make any transformation/adaptation without the prior written permission from the copyright holders.

This publication is provided for informational purposes only. The manufacturer makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. The user will assume the entire risk of the use or the results of the use of this document. Further, the manufacturer reserves the right to revise this publication and make changes to its contents at any time, without obligation to notify any person or entity of such revisions or changes.

Changes after the publication's first release will be based on the product's revision. The website will always provide the most updated information.

© 2023. All Rights Reserved.

## Trademarks

Product names or trademarks appearing in this manual are for identification purpose only and are the properties of the respective owners.

## FCC and DOC Statement on Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

## Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables must be used in order to comply with the emission limits.

# Table of Contents

- Chapter 1 - Introduction..... 6
  - Overview..... 6
    - Front View..... 6
    - Rear View..... 6
  - Dimensions..... 7
  - Key Features..... 7
  - Specifications..... 8
- Chapter 2 - Hardware Installations..... 10
  - Removing the Chassis Cover..... 10
    - Front View..... 10
    - Rear View..... 10
    - Left View..... 10
    - Right View..... 10
  - Installing an M.2 Card..... 11
  - Installing an MXM Card..... 12
  - Installing an Antenna..... 16
  - Inserting a 2.5" HDD/SDD..... 17
  - Mounting Options..... 18
    - Wall Mount..... 18
- Chapter 3 - System Settings..... 19
  - System Layout..... 19
  - Jumper Settings..... 20
    - Clear CMOS Jumper..... 20
    - M.2 Power..... 20
  - Pin Assignment..... 21
    - CPU Fan..... 21
    - USB2\_5/6..... 21
    - COM (Serial) Port..... 22
    - Front Panel..... 22
    - LPC..... 23
    - DIO (Digital I/O)..... 23
    - DIO Power..... 24
    - Front Audio..... 24
    - SATA Power..... 25
    - SATA (Serial ATA)..... 25
- Chapter 4 - BIOS Settings..... 26
  - Overview..... 26
  - Main..... 27
  - Advanced..... 27
    - RC ACPI Configuration..... 28
    - CPU Configuration..... 28
    - Power & Performance..... 29
    - PCH-FW Configuration..... 29
    - Trusted Computing..... 30
    - NCT5525D Super IO Configuration..... 30
    - NCT5525D Super IO Configuration ▶ **Serial Port 1, 2 Configuration..... 31**
    - NCT5525D HW Monitor..... 31
    - NCT5525D HW Monitor ▶ **Smart FAN Function..... 32**
    - Serial Port Console Redirection..... 32

- Serial Port Console Redirection ▶ **Console Redirection Settings..... 33**
- USB Configuration..... 33
- CSM Configuration..... 34
- USB Power Control..... 34
- Network Stack Configuration..... 35
- Chipset..... 36
  - Graphics Configuration..... 36
  - PEG Port Configuration..... 37
  - PEG Port Configuration ▶ **PEG Port Feature Configuration..... 37**
  - PCH-IO Configuration..... 38
  - PCH-IO Configuration ▶ **PCI Express Configuration..... 39**
  - PCH-IO Configuration ▶ **SATA And RST Configuration..... 39**
  - PCH-IO Configuration ▶ **HD Audio Configuration..... 40**
- Security..... 41
  - Secure Boot..... 41
- Boot..... 42
- Save & Exit..... 42
- Updating the BIOS..... 43
- Notice: BIOS SPI ROM..... 43

## About this Manual

This manual can be retrieved from the website.

The manual is subject to change and update without notice, and may be based on editions that do not resemble your actual products. Please visit our website or contact our sales representatives for the latest editions.

## Warranty

1. Warranty does not cover damages or failures that arises from misuse of the product, inability to use the product, unauthorized replacement or alteration of components and product specifications.
2. The warranty is void if the product has been subjected to physical abuse, improper installation, modification, accidents or unauthorized repair of the product.
3. Unless otherwise instructed in this user's manual, the user may not, under any circumstances, attempt to perform service, adjustments or repairs on the product, whether in or out of warranty. It must be returned to the purchase point, factory or authorized service agency for all such work.
4. We will not be liable for any indirect, special, incidental or consequential damages to the product that has been modified or altered.

## About this Package

The package contains the following items. If any of these items are missing or damaged, please contact your dealer or sales representative for assistance.

- 1 DT200-CS System Unit
- 3 M.2 Slot Screws
- 2 MXM Module Screws
- 1 ADDM UL Battery Addendum
- Thermal Grease(X-23-7783D) Injector 1g

Note: The items are subject to change in the developing stage. The product and accessories in the package may not come similar to the information listed above. This may differ in accordance with the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.

## Static Electricity Precautions

It is quite easy to inadvertently damage your PC, system board, components or devices even before installing them in your system unit. Static electrical discharge can damage computer components without causing any signs of physical damage. You must take extra care in handling them to ensure against electrostatic build-up.

1. To prevent electrostatic build-up, leave the system board in its anti-static bag until you are ready to install it.
2. Wear an antistatic wrist strap.
3. Do all preparation work on a static-free surface.
4. Hold the device only by its edges. Be careful not to touch any of the components, contacts or connections.
5. Avoid touching the pins or contacts on all modules and connectors. Hold modules or connectors by their ends.



### Important:

Electrostatic discharge (ESD) can damage your processor, disk drive and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

## Safety Precautions

- Use the correct DC / AC input voltage range.
- Unplug the power cord before removing the system chassis cover for installation or servicing. After installation or servicing, cover the system chassis before plugging in the power cord.
- There is danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent specifications of batteries recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.
- Keep this system away from humid environments.
- Make sure the system is placed or mounted correctly and stably to prevent the chance of dropping or falling may cause damage.
- The openings on the system shall not be blocked and shall be kept in distance from

other objects to make sure of proper air ventilation to protect the system from over-heating.

- Dress the cables, especially the power cord, so they will not be stepped on, in contact with high temperature surfaces, or cause any tripping hazards.
- Do not place anything on top of the power cord. Use a power cord that has been approved for use with the system and is compliant with the voltage and current ranges required by the system's electrical specifications.
- If the system is to be unused or stored for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
- If one of the following occurs, consult a service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated the system.
  - The system has been exposed to moisture.
  - The system is not working properly.
  - The system is physically damaged.
- The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace the outlet.
- Disconnect the system from the electricity outlet before cleaning. Use a damp cloth for cleaning the surface. Do not use liquid or spray detergents for cleaning.
- Before connecting, make sure that the power supply voltage is correct. The device is connected to a power outlet which should be grounded connection.




The system may burn fingers while running.

Wait for 30 minutes to handle electronic parts after power off.

## Chapter 1 - Introduction

### ► Overview

#### Front View

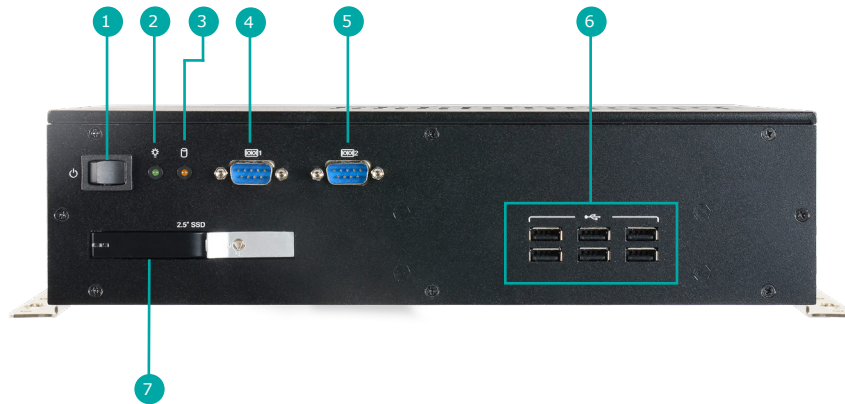

1 Power Button

2 Power LED

3 HDD LED


4 COM1

5 COM2

6 USB 2.0

7 2.5" SSD Slot

#### Rear View

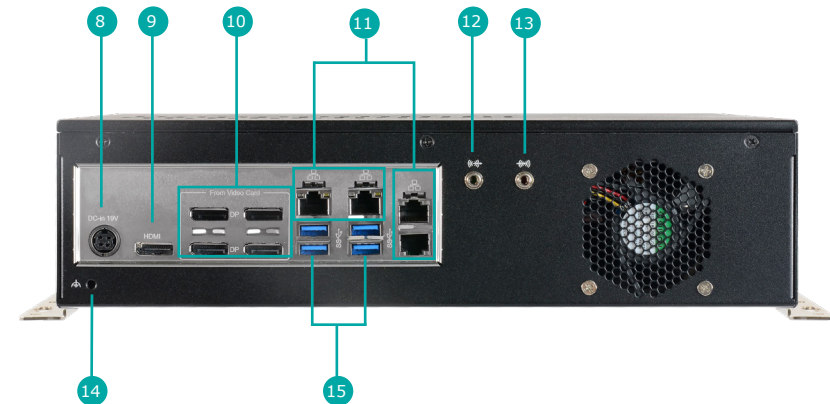

8 DC-in

9 HDMI Port

10 DP (From MXM)

11 Giga LAN

 
12 MIC-In

13 Line-Out


14 Grounding

15 USB 3.0


► **Dimensions**




**Front View**

 

**Left View**

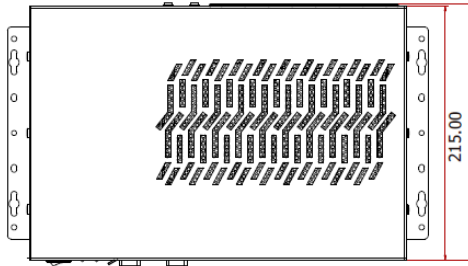

**Right View**

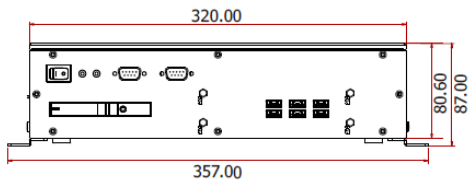

**Rear View**

► **Key Features**

**Multiple Displays:**

4 DP (from MXM), 1 HDMI

**Low Profile Design:**

Dimensions (W x H x D): 320 x 220 x 87mm (2U)

**AI Accelerated:**

Up to 115W GPU MXM module supported

**Scalability:**

3 M.2 expansion slots

**Support 5G Communication:**

Support M.2 B key 3052 5G cellular module

► Specifications

<b>SYSTEM</b>	<b>Processor</b>	Intel® Core i7-9700E Processor (Core 8; Max speed 4.4 GHz; TDP 65W) Intel® Core i7-9700TE Processor (Core 8; Max speed 3.8 GHz; TDP 35W) Intel® Core i5-9500E Processor (Core 6; Max speed 4.2 GHz; TDP 65W) Intel® Core i5-9500TE Processor (Core 6; Max speed 3.6 GHz; TDP 35W) Intel® Core i3-9100E Processor (Core 4; Max speed 3.7 GHz; TDP 65W) Intel® Core i3-9100TE Processor (Core 4; Max speed 3.2 GHz; TDP 35W) 8th Generation Intel® Core™ Processors, LGA 1151 Socket, TDP up to 65W Intel® Core™ i7-8700 Processor (Core 6; Max speed 4.6 GHz; TDP 65W) Intel® Core™ i7-8700T Processor (Core 6; Max speed 4.0 GHz; TDP 35W) Intel® Core™ i5-8500 Processor (Core 6; Max speed 4.1 GHz; TDP 65W) Intel® Core™ i5-8500T Processor (Core 6; Max speed 3.5 GHz; TDP 35W) Intel® Core™ i3-8100 Processor (Core 4; Max speed 3.6 GHz; TDP 65W) Intel® Core™ i3-8100T Processor (Core 4; Max speed 3.1 GHz; TDP 35W) Intel® Pentium® G5400 Processor (Core 2; Max speed 3.7 GHz; TDP 58W) Intel® Celeron® G4900 Processor (Core 2; Max speed 3.1 GHz; TDP 54W)
	<b>Chipset</b>	Intel® H310/Q370 Chipset
	<b>Memory</b>	DDR4 2400/2666MHz up to 64GB
	<b>BIOS</b>	AMI SPI 128Mbit (supports UEFI/Legacy mode)
<b>GRAPHICS</b>	<b>Controller</b>	Intel® UHD Graphics 630 (Pentium® G5400 and Celeron® G4900 support Intel® UHD Graphics 610)
	<b>Feature</b>	OpenGL 4.5, DirectX 12, OpenCL 2.1 HW Decode: AVC/H.264, MPEG2, VC1/WMV9, JPEG/MJPEG, HEVC/H265, VP8, VP9 HW Encode: AVC/H.264, MPEG2, JPEG, HEVC/H265, VP8, VP9
	<b>Display</b>	4 x DP (from MXM) 1 x DP++/HDMI (auto-detection) DP: resolution up to 4096x2304@60Hz HDMI: resolution up to 4096x2160@30Hz
<b>AI ACCELERATOR</b>	<b>Interface</b>	1 x MXM 3.1 slot, Type-A/B up to 115W
<b>STORAGE</b>	<b>External</b>	1 x SATA III connector with 1 x 2.5" SSD tray
	<b>Internal</b>	1 x M.2 M key supports 2242/2280 slot (PCIe Gen3 x4/SATA)
<b>EXPANSION</b>	<b>Interface</b>	1 x M.2 M key supports 2242/2280 slot (PCIe Gen3 x4/SATA) 1 x M.2 B key supports 3052 slot (PCIe x1/USB3.1 Gen1) 1 x M.2 E key supports 2230 slot (PCIe x1/USB2.0)
<b>AUDIO</b>	<b>Audio Codec</b>	5.1 CH Audio Codec:Realtek ALC888S-VD2-GR
<b>ETHERNET</b>	<b>Controller</b>	1 x Intel® I219LM for Q370 / I219V for H310 3 x Intel® I210AT
<b>LED</b>	<b>Indicators</b>	1 x PWD LED 1 x HDD LED



<b>FRONT I/O</b>	Serial	2 x RS232
	USB	6 x USB2.0
	Buttons	1 x Power button
	Audio	1 x Line-out 1 x Mic-in
<b>REAR I/O</b>	Ethernet	4 x GbE
	USB	4 x USB 3.1 Gen2
	Display	1 x HDMI 4 x DP (from MXM)
	Antenna Holes	4 x SMA for 5G module 2 x SMA for WiFi module
<b>COOLING</b>	Fan	1x CPU cooler, 1x System fan (MXM cooler is not included)
<b>WATCHDOG TIMER</b>	Output & Interval	Watchdog timeout programmable via software from 1 to 255 seconds
<b>SECURITY</b>	TPM	dTPM2.0 (default)
<b>POWER</b>	Voltage	19V DC-in
	Connector	DC-in jack
<b>OS SUPPORT</b>	Microsoft	Windows 10 IoT Enterprise 64-bit
	Linux	Linux
<b>MECHANISM</b>	Construction	Aluminum + SGCC
	Mounting	Wall mount (mounting brackets and screws)
	Dimensions (W x H x D)	320 x 220 x 87mm (not include wall mount bracket)
	Weight	5kg
<b>ENVIRONMENT</b>	Operating Temperature	0 to 55°C
	Storage Temperature	0 to 86°C
	Relative Humidity	5 to 95% RH (non-condensing)uminum extrusion + Metal
<b>STANDARDS AND CERTIFICATIONS</b>	Certifications	CE, FCC Class A, RoHS

## Chapter 2 - Hardware Installations

### ► Removing the Chassis Cover

Please observe the following guidelines and follow the instructions to open the system.

1. Make sure the system and all other peripheral devices connected to it have been powered off.
2. Disconnect all power cords and cables.

#### Step 1:

The 6 screws on both front and rear sides of the system and the 8 screws on the left and right sides of the system are used to secure the cover to the chassis. Remove the screws and put them in a safe place for later use.

Front View



Rear View



Left View




Right View




#### Step 2:

Lift the cover to open the system.

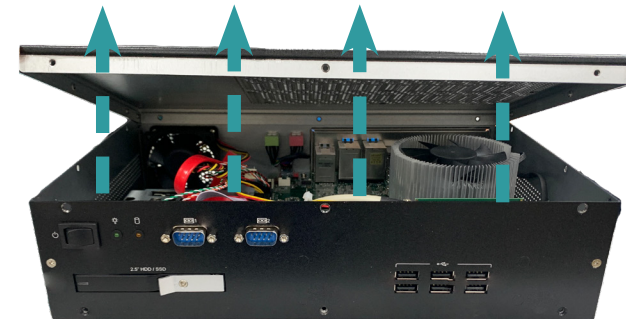

#### Step 3:

The boards can be easily accessed after the chassis cover is removed.

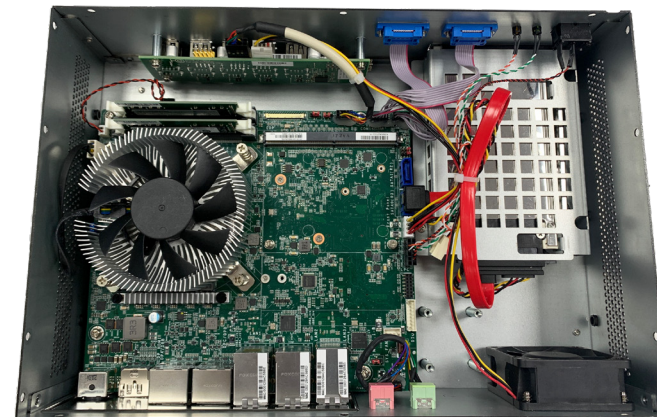

## ► Installing an M.2 Card

Please observe the following guidelines and follow the instructions to open the system.

1. Make sure the system and all other peripheral devices connected to it have been powered off.
2. Disconnect all power cords and cables.


### Step 1:

There are 4 screws on the bottom of the system are used to secure the M.2 cover to the chassis. Remove the screws and put them in a safe place for later use.




### Step 2:

Lift the cover to open the system.

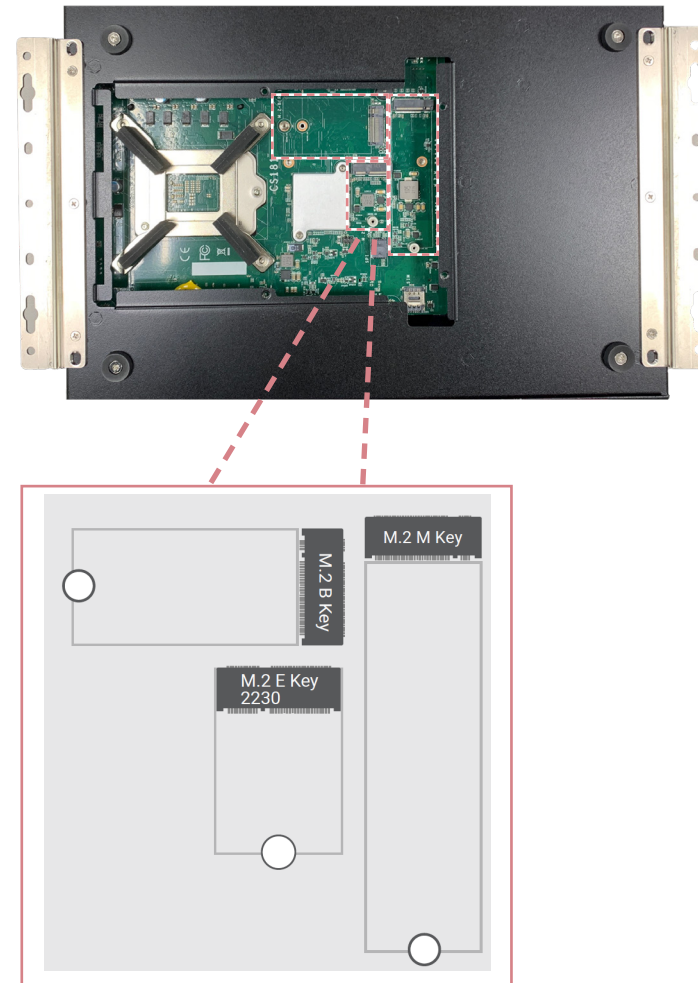


**Step 3:**

Please follow the steps below to install the card into the socket.  
Insert the card into the socket at an angle while making sure the notch and key are perfectly aligned.

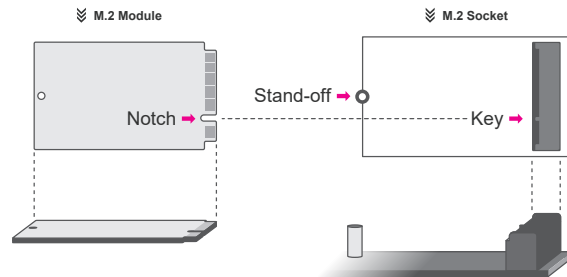


**Step 4:**

Press the end of the card far from the socket down until against the stand-off.

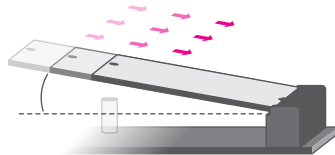

**Step 5:**

Screw tight the card onto the stand-off with a screw driver and a stand-off screw until the gap between the card and the stand-off closes up. The card should be lying parallel to the board when it's correctly mounted.

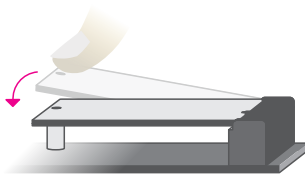

► **Installing an MXM Card**


Before installing an MXM card, please make sure that the following safety cautions are wellattended.

1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.

**Step 1:**

Lift the cover to open the system.


The board can be easily accessed and you will find the location of the MXM card socket.

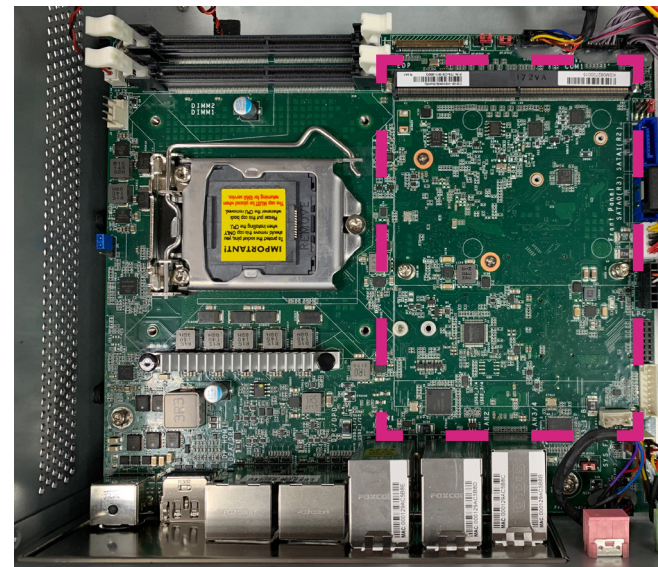




**Step 2:**

Please follow the steps below to install an MXM card into the socket. Insert an MXM card into the socket at an angle while making sure the notch and key are perfectly aligned.

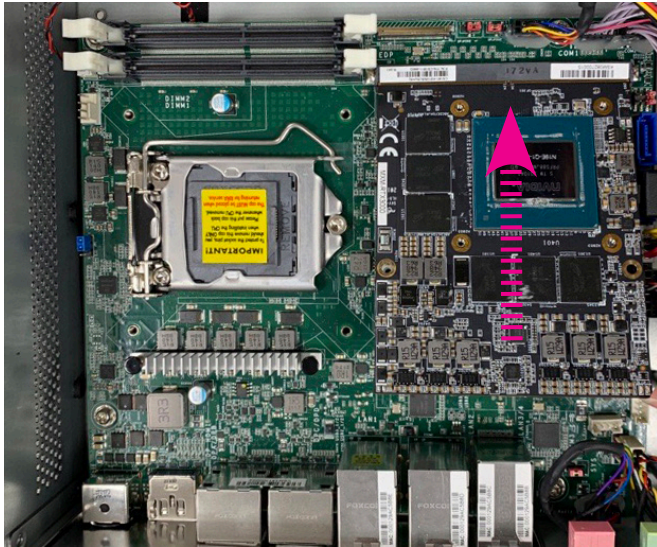

**Step 3:**

Screw tight the card through the holes with the motherboard to keep it steady until the gap closes up. The card should be lying parallel to the board when it's correctly mounted.

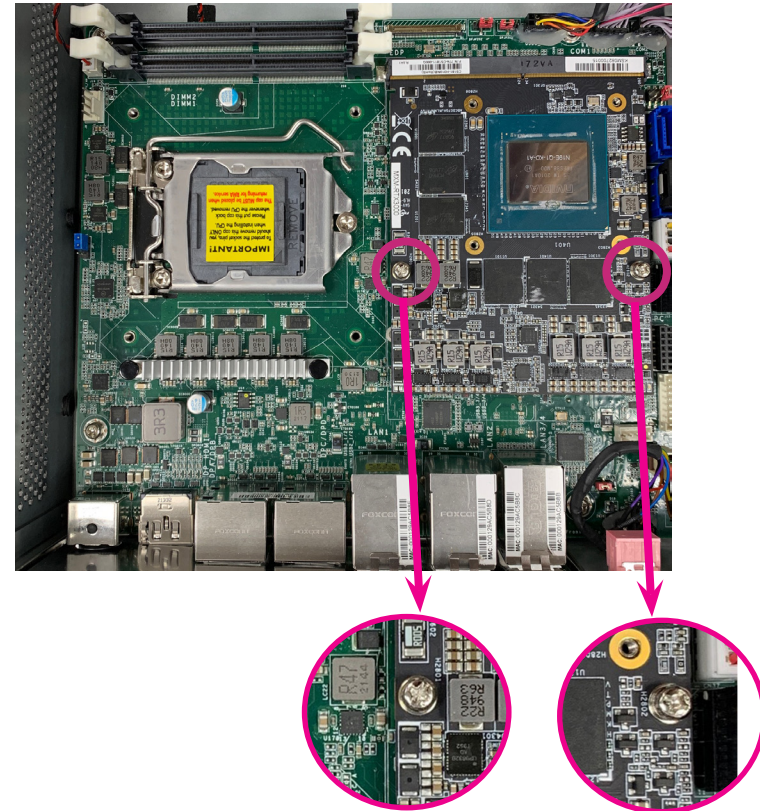

## Installing an MXM cooler



Please follow the steps below to attach an MXM cooler to the MXM module.

**\*An MXM cooler is an optional accessory, customers can purchase it if necessary.**

### Step 1:

Align the mounting screws of the cooler with the mounting holes of the module.

Tighten four screws to install the cooler onto the module.

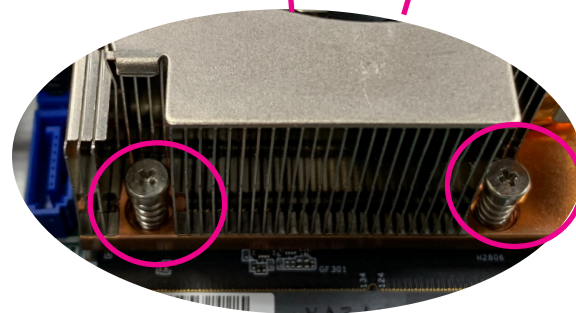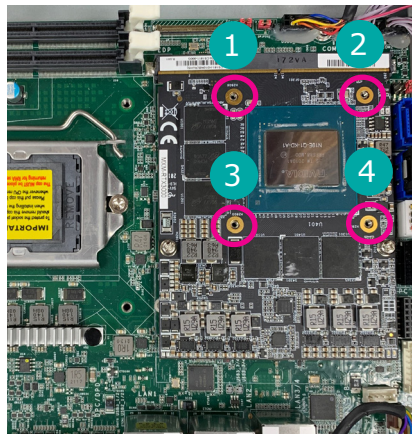

### Step 2:

Connect the cable to the fan connector on the board.



The List of Compactible MXM modules is as follows:

Model	Assignment	Assignment
<b>P1000</b>	512	47W
<b>P2000</b>	768	58W
<b>T1000</b>	896	50W
<b>PTX3000</b>	1920	80W

The List of Optional items is as follows:

Item Name	Part Number	Description
<b>CPU cooler</b>	A71-103004-000G	For 35W, Height: 37.3mm
	A71-103005-000G	For 65W, Height: 45.3mm
<b>MXM Quadro T1000</b>	612-M3T100-100G	50W, 896 CUDA Cores, 2.6 TFLOPS, 0~55°C
<b>MXM Quadro RTX3000</b>	612-M3T300-000G	80W, 1290 CUDA Cores, 5.4 TFLOPS, 0~55°C
<b>Fan PWR Y-cable for MXM(RTX3000)</b>	A81-009614-016G	1*3P/2.5mm to 1*3P/2.54mm to 1*4P/1.25mm, L=50mm
<b>MXM Cooler</b>	A71-110100-000G	MXM cooler for RTX3000 87x106.35x34 MXM cooler for T1000 73x60x32.1mm

### ► Installing an Antenna

Before installing the antenna, please make sure that the following safety cautions are wellattended.

1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.


#### Step 1:

There are antenna holes reserved on both the right and left sides of the system and by default covered by rubber plugs. Please remove the plug prior to installing an antenna.



#### Step 2:

Connect the internal cable to the board's antenna connector, screw the antenna connector through the antenna hole with washers and nuts, and screw on the antenna as illustrated below.

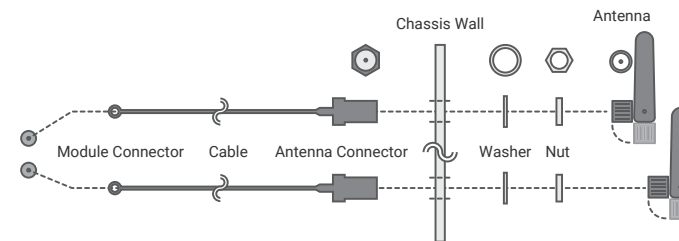



## ► Inserting a 2.5" HDD/SDD

### Step 1:

There is a 2.5" HDD/SDD slot on the front side of the system.



### Step 2:

Pull the silver latch to unlock the door.



### Step 3:

Slide the drive into the slot until the drive is fully seated.  
Close the drive latch to lock the drive in place.





#### Important:

Excessive force may damage its mechanical parts.  
If the HDD/SDD is inserted backward into the slot, forcing the device may damage the slot.

► Mounting Options


Wall Mount

The wall mount kit containing two mounting brackets can be attached to the bottom of the system for mounting onto desired locations, such as walls, stands, or shelves. Locate the mounting holes on the bottom of the system as shown in the photo. Screw on the two brackets onto the system with six screws as illustrated below.

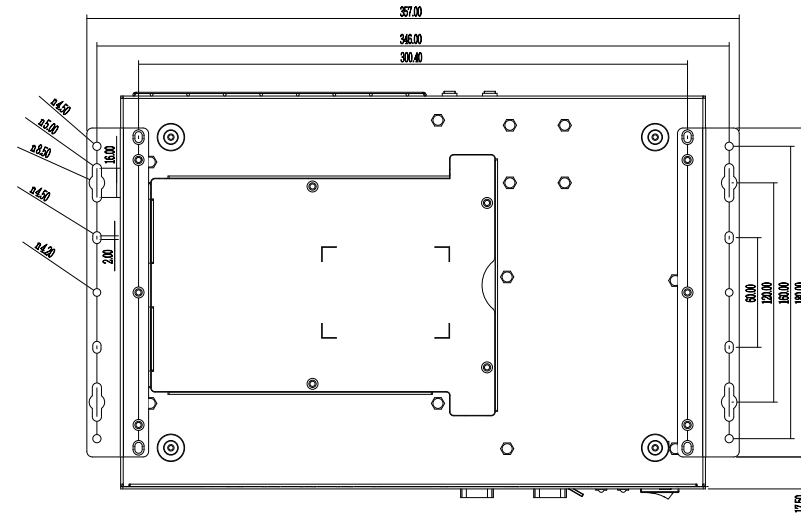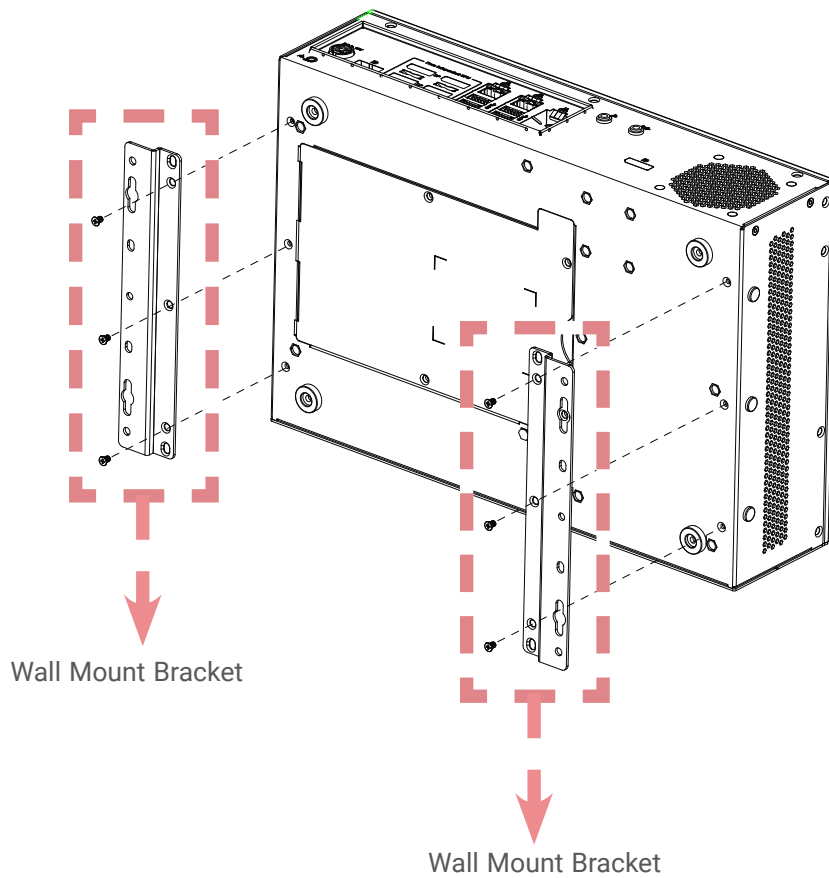


## Chapter 3 - System Settings

### ► System Layout

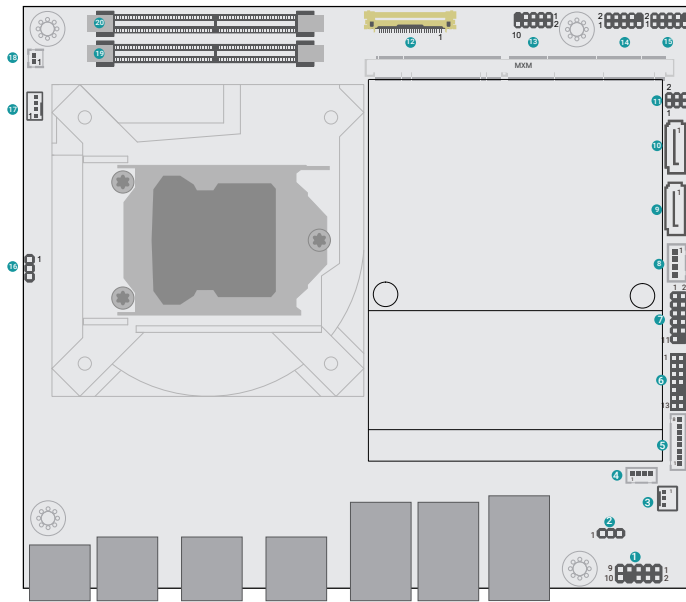

- 1 Front Audio
- 2 M.2 Power
- 3 System Fan Power
- 4 DIO Power
- 5 DIO
- 6 LPC
- 7 Front Panel
- 8 SATA Power
- 9 SATA0
- 10 SATA1
- 11 LCD Panel Power
- 12 LCD/eDP
- 13 USB 2.0
- 14 COM1
- 15 COM2
- 16 Clear CMOS Jumper
- 17 CPU Fan
- 18 Battery
- 19 DIMM1
- 20 DIMM2
- 21 CPU Cooler
- 22 6x USB 2.0 Hub Riser Card
- 23 System Fan
- 24 2.5" SATA SSD/HDD Tray

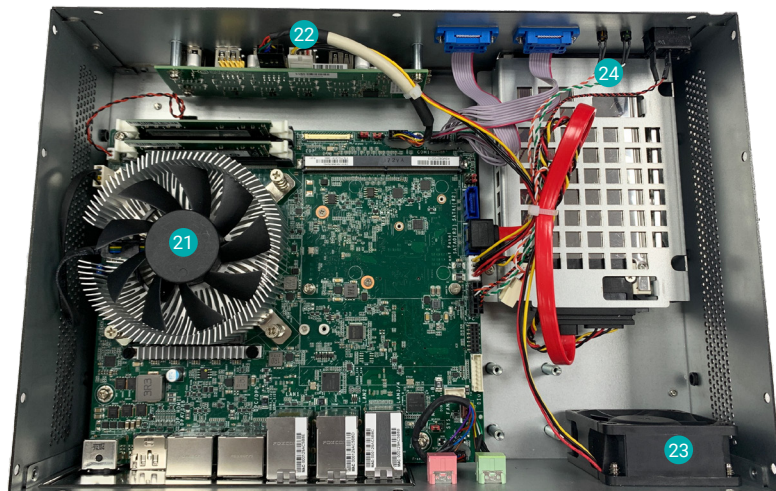


**Important:**

Electrostatic discharge (ESD) can damage your board, processor, disk drives, add-in boards, and other components. Perform installation procedures at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

► Jumper Settings

Clear CMOS Jumper

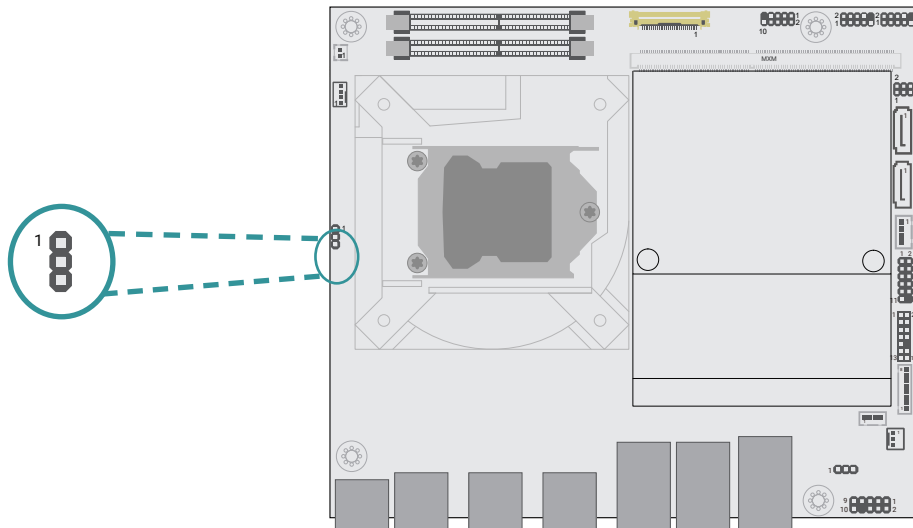


■ 1-2 On: Normal (default)



■ 2-3 On: Clear CMOS Data

M.2 Power

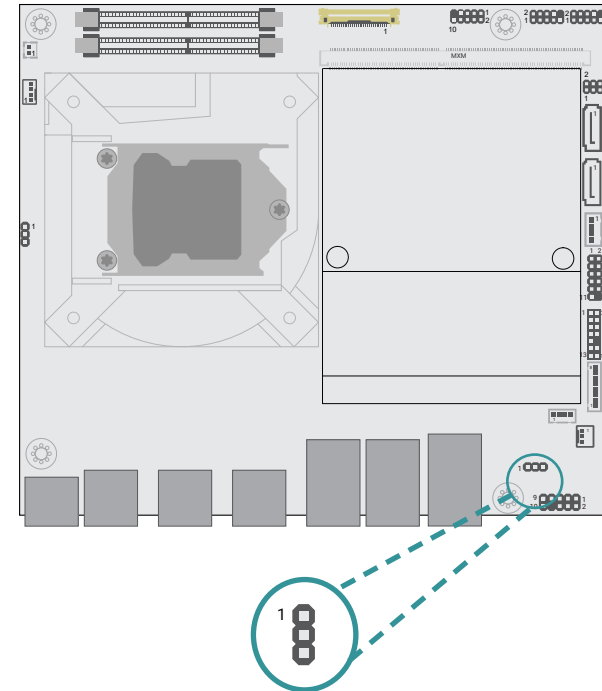


■ 1-2 On: 3V3SB (default)



■ 2-3 On: 3V3


► Pin Assignment

CPU Fan

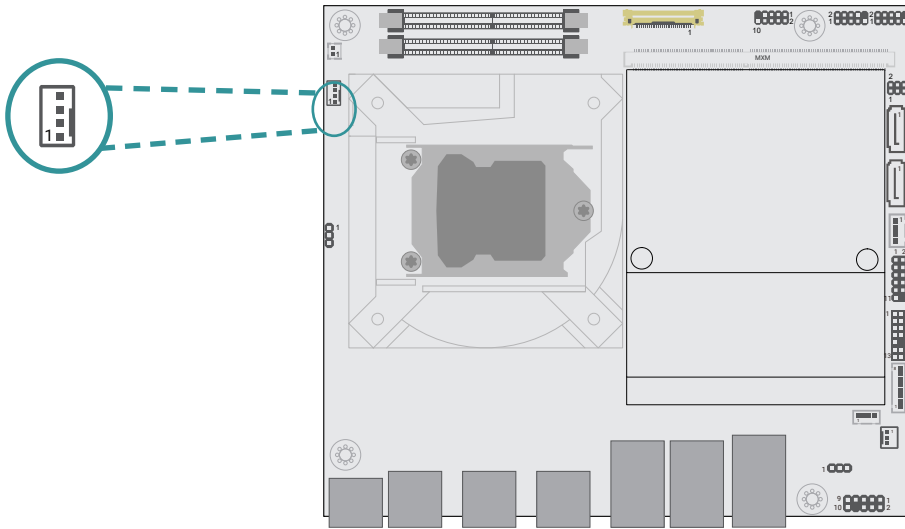


Pin	Assignment
1	Ground
2	12V
3	RPM
4	CTRL

USB2\_5/6

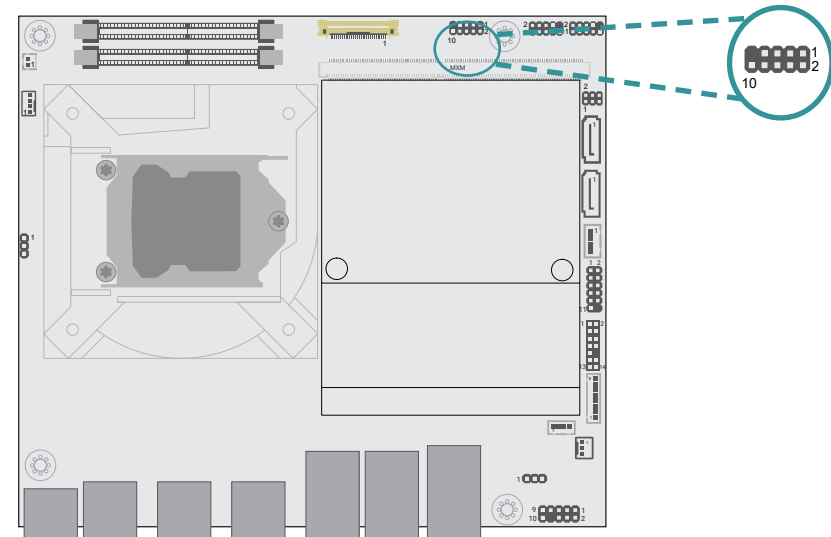


Pin	Assignment	Pin	Assignment
1	SBV4	2	SBV4
3	USBP_C_5N	4	USBP_C_6N
5	USBP_C_5P	6	USBP_C_6P
7	GND	8	GND
9	--	10	N.C

### COM (Serial) Port

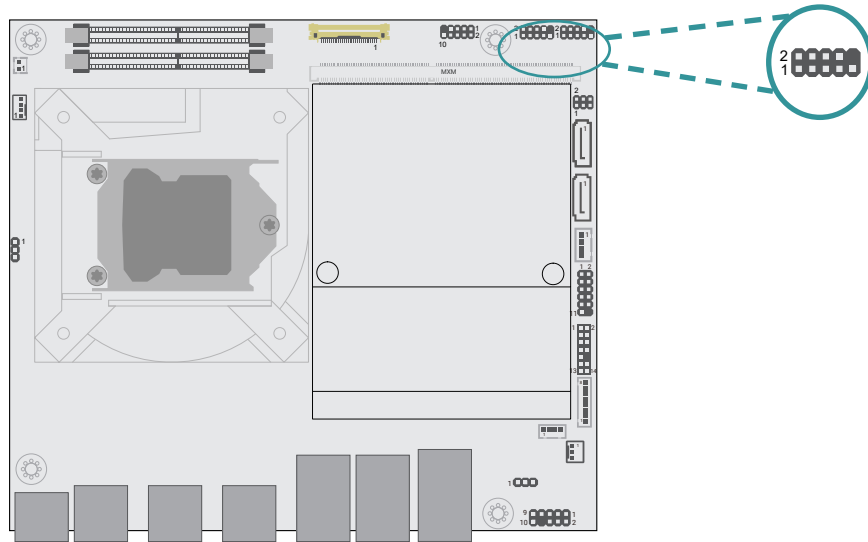


Pin	Assignment	Pin	Assignment
1	MDCD1(2)-	2	MRD1(2)
3	MTD1(2)	4	MDTR1(2)-
5	GND	6	MDSR1(2)-
7	MRTS1(2)-	8	MCTS1(2)-
9	MRI1(2)-	10	---

### Front Panel

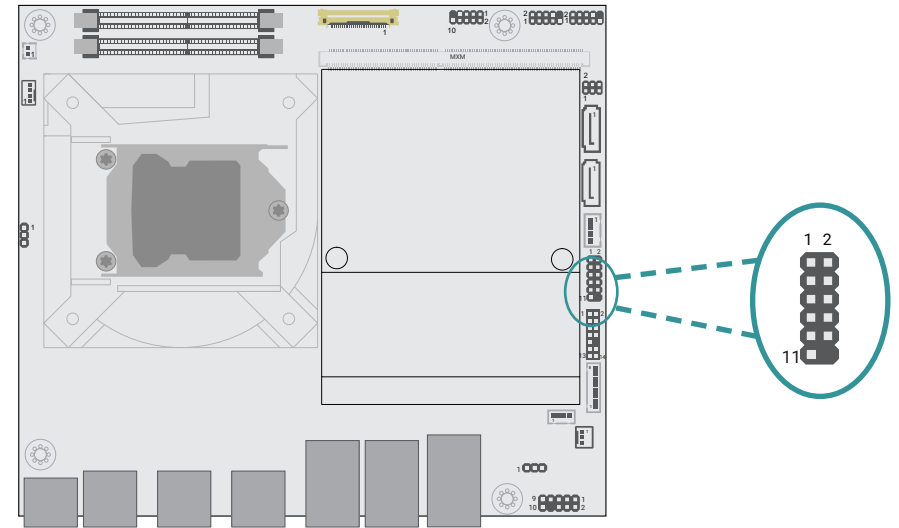


	Pin	Assignment		Pin	Assignment
	1	NC	Power/ Standby LED	2	V_SUS_LED
HDD-LED	3	3V3		4	V_SUS_LED
	5	HD_LED		6	SUS_LED
RESET	7	GND	Power Button	8	GND
	9	SYS_RST		10	PWR_BTN-
	11	NC		12	---

LPC

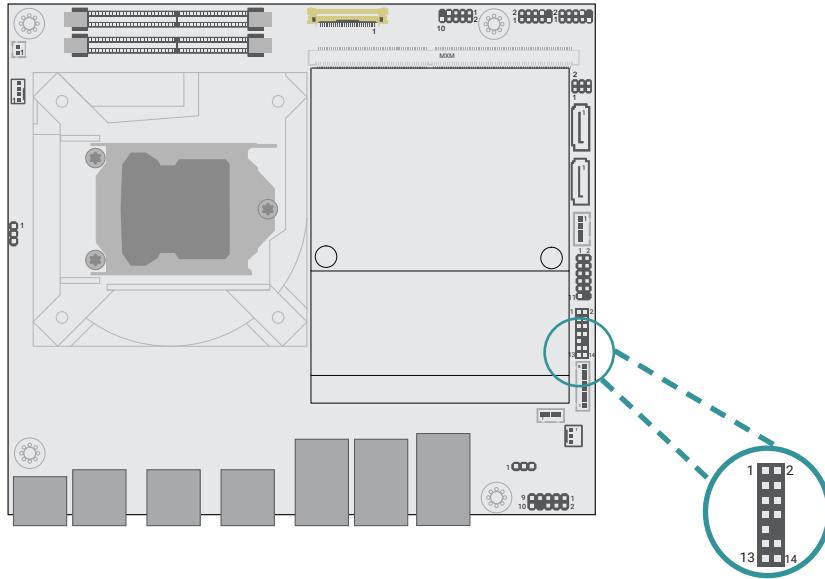


Pin	Assignment	Pin	Assignment
1	CLK	2	LAD1
3	RST#	4	LAD0
5	FRAME#	6	VCC3
7	LAD3	8	GND1
9	LAD2	10	---
11	SERIRQ	12	GND2
13	5VSB	14	5V

DIO (Digital I/O)

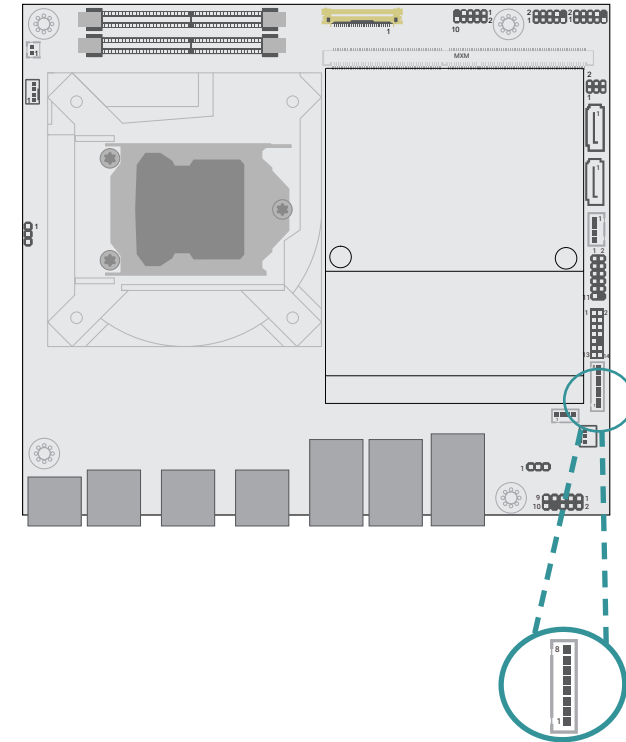


Pin	Assignment	Pin	Assignment
1	D_IOA0_C	2	D_IOA1_C
3	D_IOA2_C	4	D_IOA3_C
5	D_IOA4_C	6	D_IOA5_C
7	D_IOA6_C	8	D_IOA7_C

### DIO Power

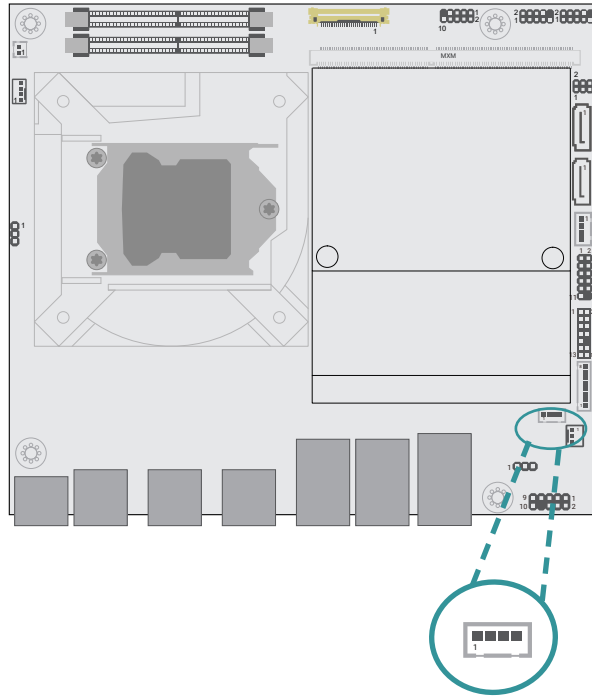

Pin	Assignment
1	12V
2	GND
3	5VSB
4	5V


### Front Audio

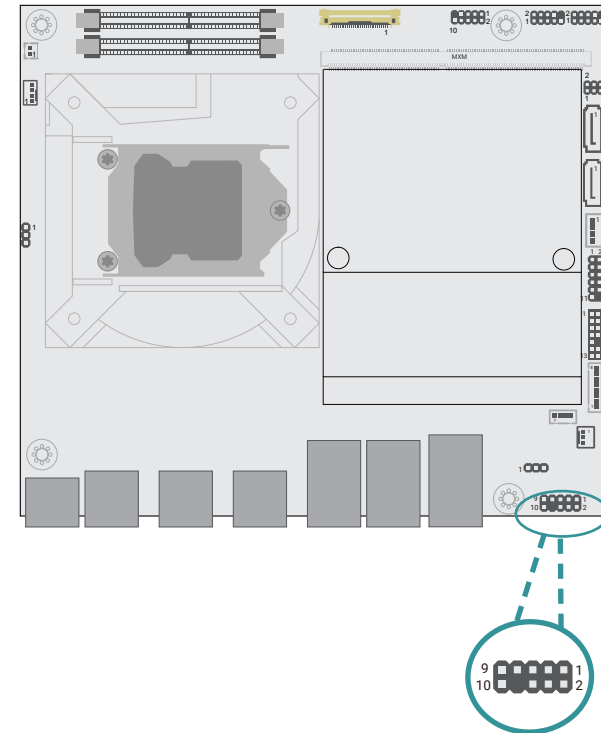

Pin	Assignment	Pin	Assignment
1	Mic2-L	2	GND
3	Mic2-R	4	N.C.
5	Line2-R	6	Mic2-JD
7	GND	8	--
9	Line2-L	10	Line2-JD




### SATA Power

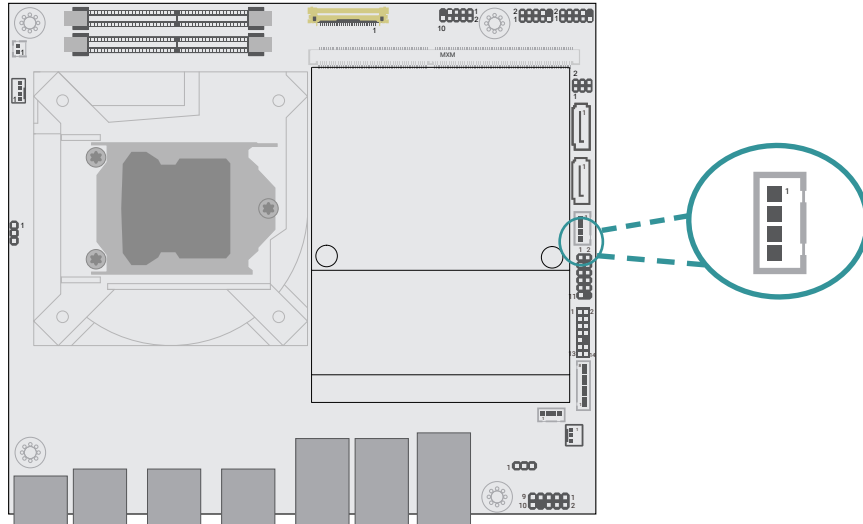

Pin	Assignment
1	N.C
2	GND
3	GND
4	+5V

### SATA (Serial ATA)

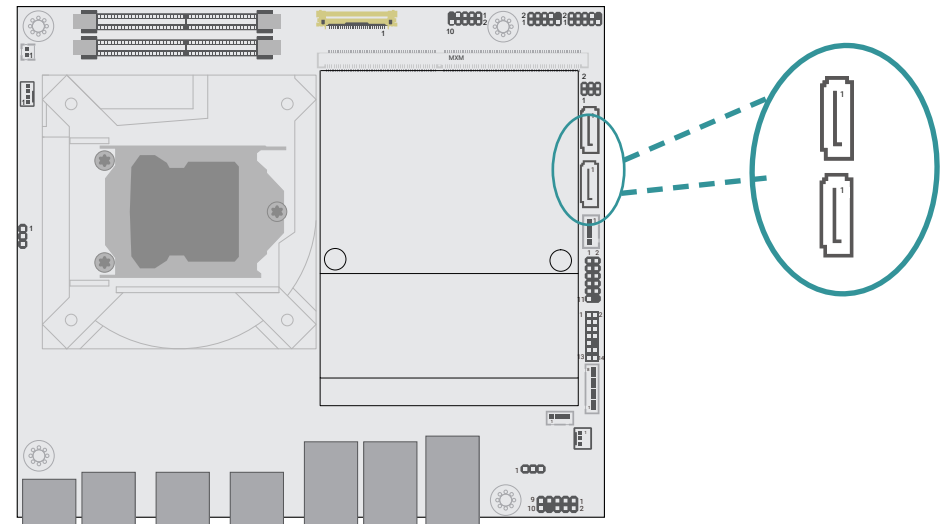

Pin	Assignment
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND

## Chapter 4 - BIOS Settings

### ► Overview

The BIOS is a program that takes care of the basic level of communication between the CPU and peripherals. It contains codes for various advanced features found in this system board. The BIOS allows you to configure the system and save the configuration in a battery-backed CMOS so that the data retains even when the power is off. In general, the information stored in the CMOS RAM of the EEPROM will stay unchanged unless a configuration change has been made such as a hard drive replaced or a device added.

It is possible that the CMOS battery will fail causing CMOS data loss. If this happens, you need to install a new CMOS battery and reconfigure the BIOS settings.



#### Note:

The BIOS is constantly updated to improve the performance of the system board; therefore the BIOS screens in this chapter may not appear the same as the actual one. These screens are for reference purpose only.

#### Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

#### Entering the BIOS Setup Utility

The BIOS Setup Utility can only be operated from the keyboard and all commands are keyboard commands. The commands are available at the right side of each setup screen.

The BIOS Setup Utility does not require an operating system to run. After you power up the system, the BIOS message appears on the screen and the memory count begins. After the memory test, the message "Press DEL to run setup" will appear on the screen. If the message disappears before you respond, restart the system or press the "Reset" button. You may also restart the system by pressing the <Ctrl> <Alt> and <Del> keys simultaneously.

#### Legends

Keys	Function
Right / Left arrow	Move the highlight left or right to select a menu
Up / Down arrow	Move the highlight up or down between submenus or fields
<Enter>	Enter the highlighted submenu
+ (plus key)/F6	Scroll forward through the values or options of the highlighted field
- (minus key)/F5	Scroll backward through the values or options of the highlighted field
<F1>	Display general help
<F2>	Display previous values
<F7>	Popup Boot Device List
<F9>	Optimized defaults
<F10>	Save and Exit
<Esc>	Return to previous menu

#### Scroll Bar


When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

#### Submenu

When "►" appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

► Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

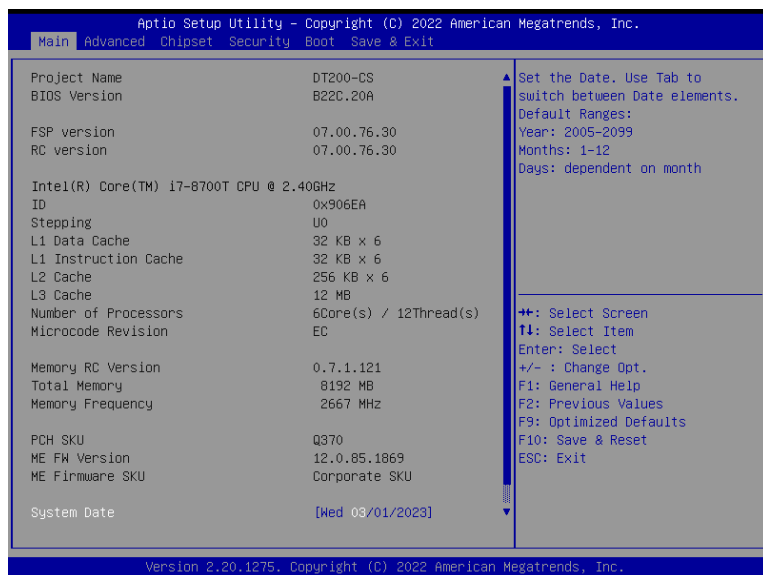

**System Date**

The date format is <month>, <date>, <year>. Press "Tab" to switch to the next field and press "-" or "+" to modify the value.

**System Time**


The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

► Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.




**Important:**  
Setting incorrect field values may cause the system to malfunction.

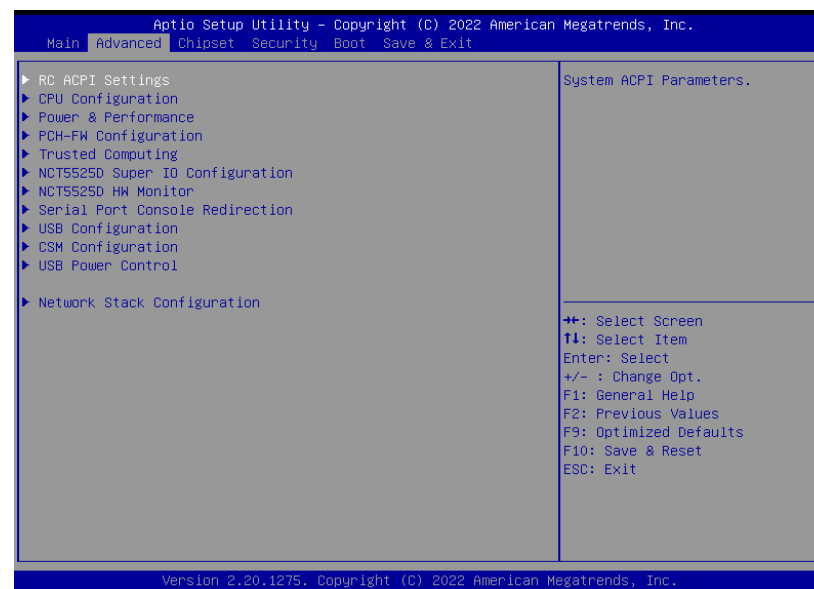

► Advanced

RC ACPI Configuration

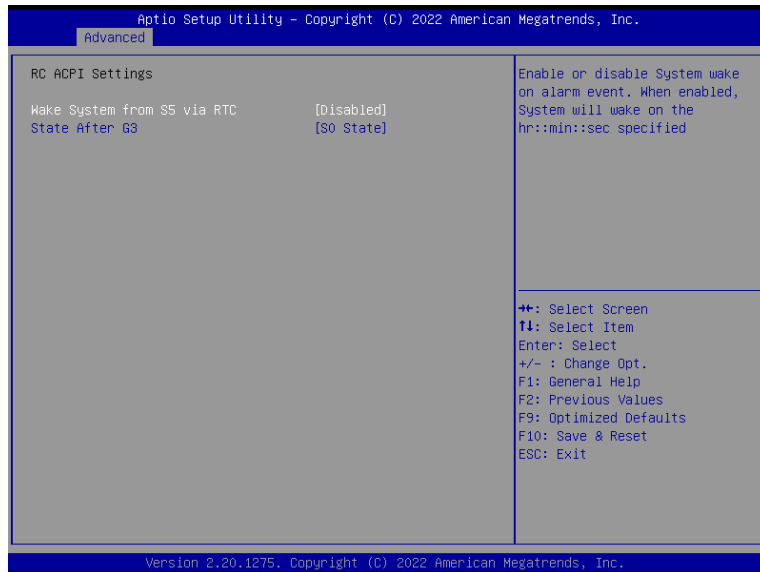

**Wake system from S5 via RTC**

When Enabled, the system will automatically power up at a designated time every day. Once it's switched to [Enabled], please set up the time of day — hour, minute, and second — for the system to wake up.


**State After G3**

Select between S0 State, and S5 State. This field is used to specify what state the system is set to return to when power is re-applied after a power failure (G3 state).

- S0 State** The system automatically powers on after power failure.
- S5 State** The system enter soft-off state after power failure. Power-on signal input is required to power up the system.
- Last State** The system returns to the last state right before power failure.

► Advanced

CPU Configuration

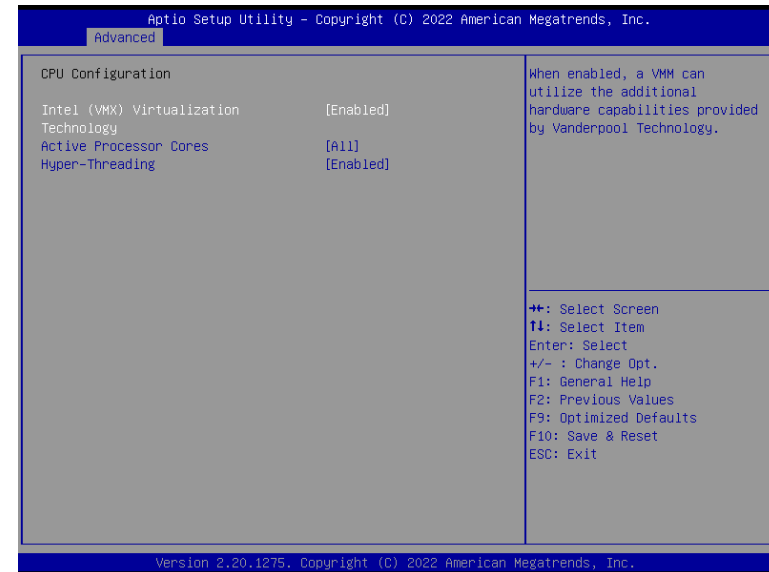

**Intel (VMX) Virtualization Technology**

When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

**Active Processor Cores**


Select number of cores to enable in each processor package: all or 1.

**Hyper-threading**

Enables this field for Windows XP and Linux which are optimized for Hyper-Threading technology. Select disabled for other OSes not optimized for Hyper-Threading technology. When disabled, only one thread per enabled core is enabled.

▶ Advanced

Power & Performance

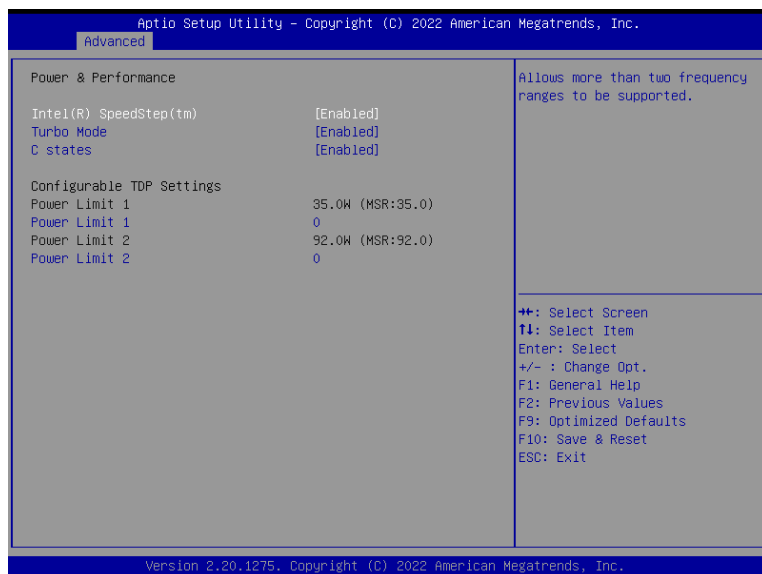

**Intel (R) SpeedStep(tm)**

This field is used to enable or disable the Intel SpeedStep® Technology, which helps optimize the balance between system’s power consumption and performance. After it is enabled in the BIOS, EIST features can then be enabled via the operating system’s power management.

**Turbo Mode**


Enable or disable turbo mode of the processor. This field will only be displayed when EIST is enabled.

**C states**

Enable or disable CPU Power Management. It allows CPU to enter "C states" when it’s idle and nothing is executing.

▶ Advanced

PCH-FW Configuration

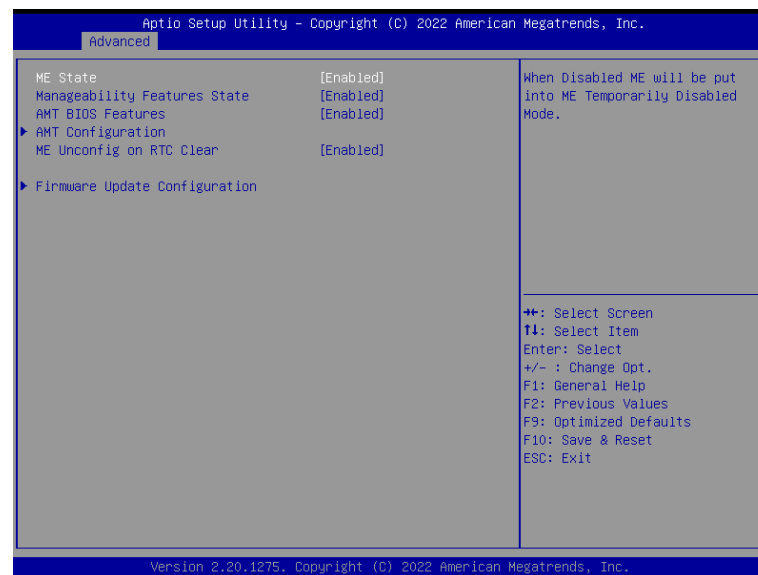

**ME State**

When this field is set to Disabled, ME will be put into ME Temporarily Disabled Mode.

**Manageability Features State**

Enable or disable Intel(R) Manageability features. This option disables/enables Manageability Features support in FW. To disable, support platform must be in an unprovisioned state first.

**AMT BIOS Features**

When disabled, AMT BIOS features are no longer supported and user is no longer able to access MEBx Setup. This option does not disable manageability features in FW.

**ME Unconfig on RTC Clear**


When disabled, ME will not be unconfigured on RTC Clear.



**Note:**  
The sub-menus are detailed in following sections.

▶ Advanced

Trusted Computing

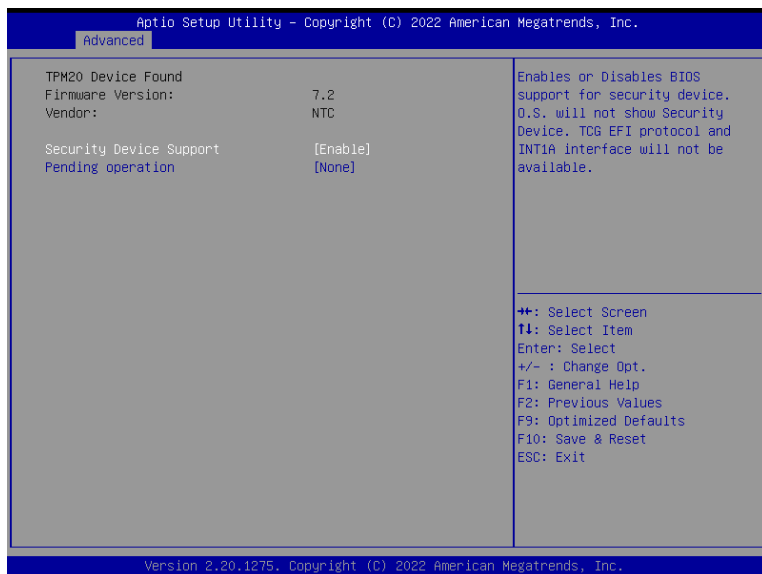

**Security Device Support**


This field is used to enable or disable BIOS support for the security device such as an TPM 2.0 to achieve hardware-level security via cryptographic keys.

**Pending operation**

To clear the existing TPM encryption, select "TPM Clear" and restart the system. This field is not available when "Security Device Support" is disabled.

▶ Advanced

NCT5525D Super IO Configuration

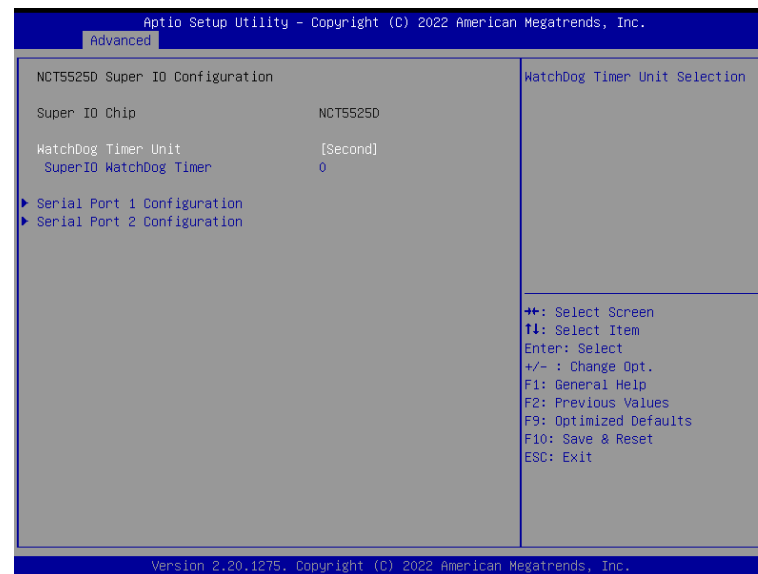

**WatchDog Timer Unit**

Select WatchDog Timer Unit – Second or Minute.

**SuperIO WatchDog Timer**



Set SuperIO WatchDog Timer Timeout value. The range is from 0 (disabled) to 255.



**Note:**  
The sub-menus are detailed in following sections.

► Advanced

NCT5525D Super IO Configuration ► Serial Port 1, 2 Configuration

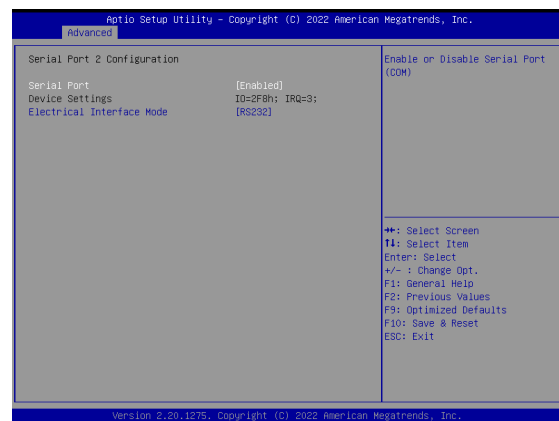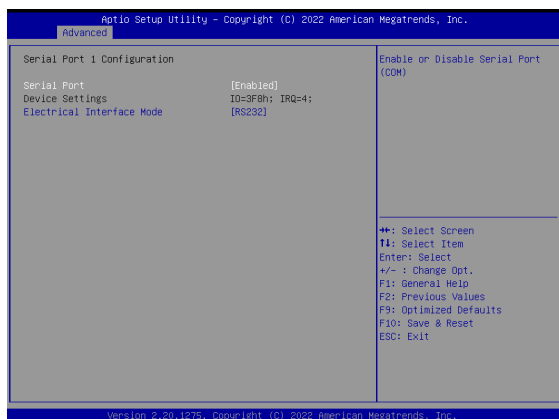

**Serial Port**


Enable or disable serial port.

**Electrical Interface Mode**

Choose mode between RS232 / RS485 / RS422

► Advanced


NCT5525D HW Monitor

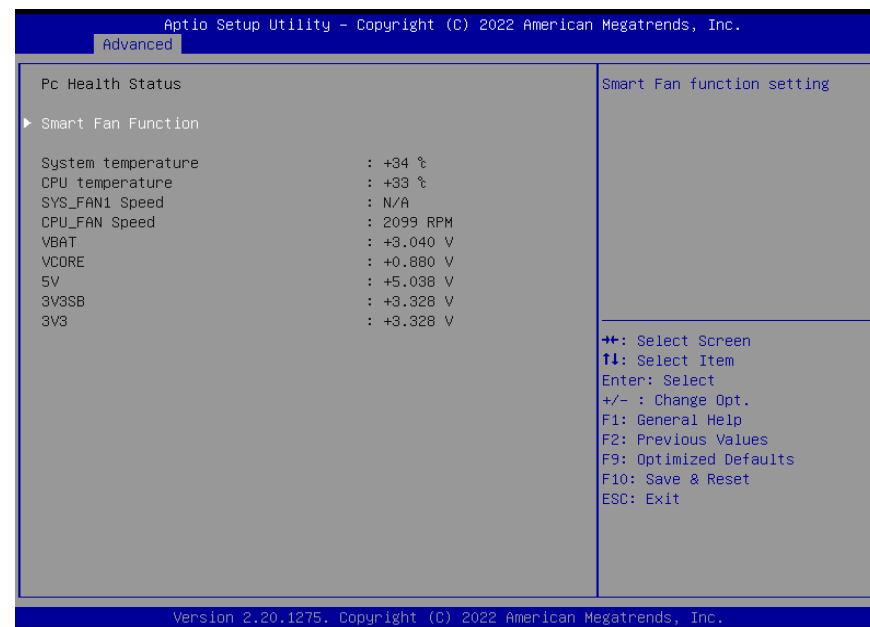

This section displays the system's health information, i.e. voltage readings, CPU and system temperatures, and fan speed readings

► Advanced

NCT5525D HW Monitor ► Smart FAN Function

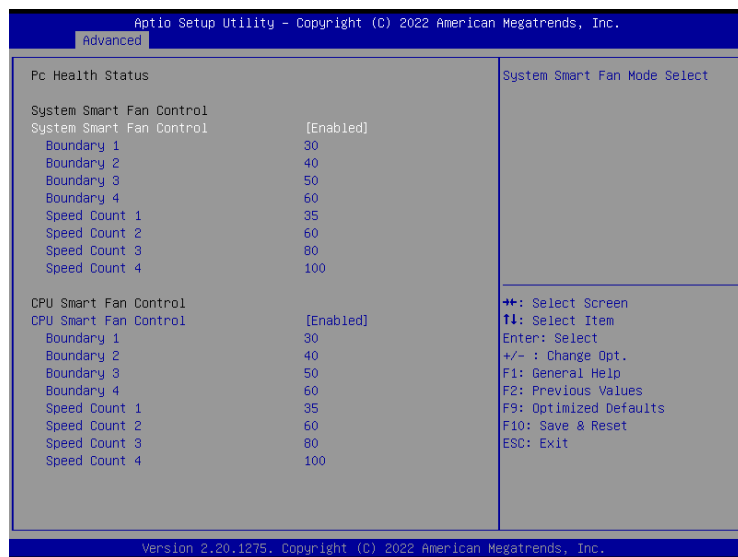

Smart Fan is a fan speed moderation strategy dependent on the current system temperature. When the system temperature goes higher than the Boundary setting, the fan speed will be turned up to the setting of the Fan Speed Count that bears the same index as the Boundary field.

**SYS Smart Fan/CPU Smart Fan Control = [Enabled]**

• **Boundary 1 to Boundary 4**

Set the boundary temperatures that determine the fan speeds accordingly, the value ranging from 0-127°C. For example, when the system temperature reaches Boundary 1 setting, the fan speed will be turned up to the designated speed of the Fan Speed Count 1 field.

• **Fan Speed Count 1 to Fan Speed Count 4**

Set the fan speed, the value ranging from 1-100%, 100% being full speed. The fans will operate according to the specified boundary temperatures above-mentioned.


**SYS Smart Fan/CPU Smart Fan Control = [Disabled]**

• **Fix Fan Speed Count**

Set the fan speed, the value ranging from 1-100%, 100% being full speed. The fans will always operate at the specified speed regardless of gauged temperatures.

► Advanced

Serial Port Console Redirection

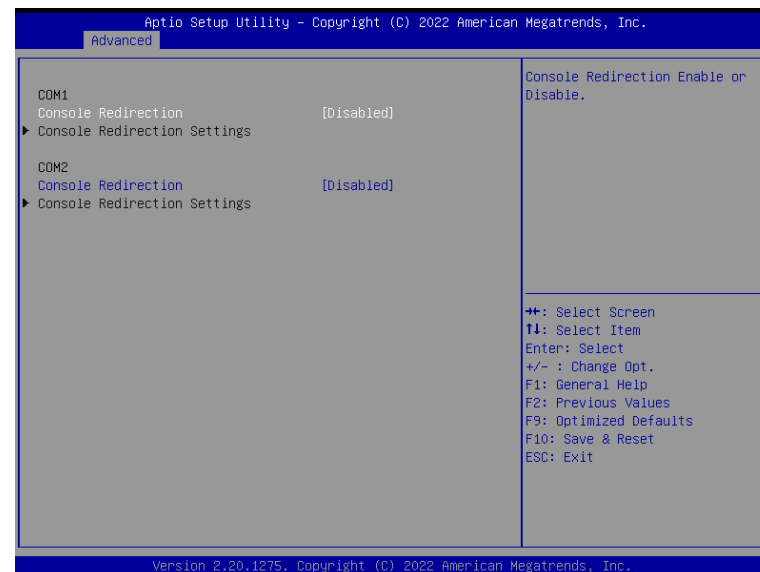

**Console Redirection**

Console Redirection Enable or Disable.


**Console Redirection Settings**

See following pages.



► Advanced

Serial Port Console Redirection ► Console Redirection Settings

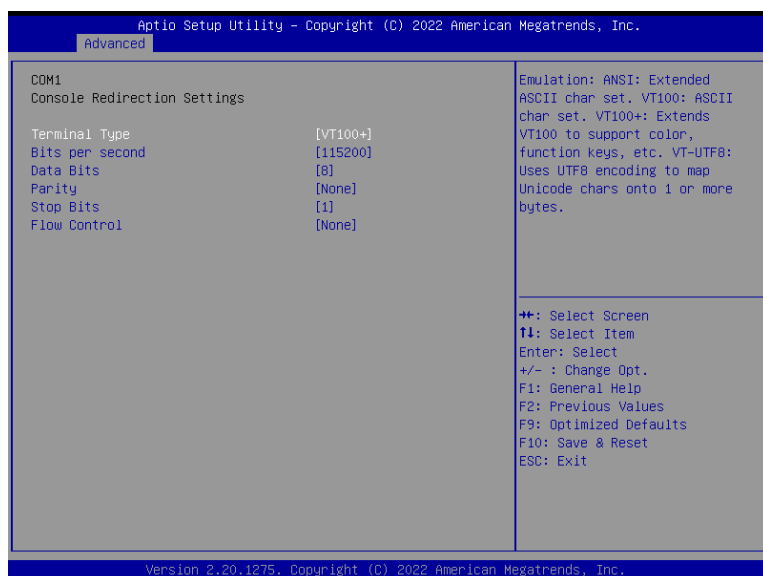

Configure the serial settings of the current COM port.

**Terminal Type**

Select terminal type: VT100, VT100+, VT-UTF8 or ANSI.

**Bits per second**

Select serial port transmission speed: 9600, 19200, 38400, 57600 or 115200.

**Data Bits**

Select data bits: 7 bits or 8 bits.

**Parity**

Select parity bits: None, Even, Odd, Mark or Space.

**Stop Bits**


Select stop bits: 1 bit or 2 bits.

**Flow Control**

Select flow control type: None or RTS/CTS.

► Advanced

USB Configuration

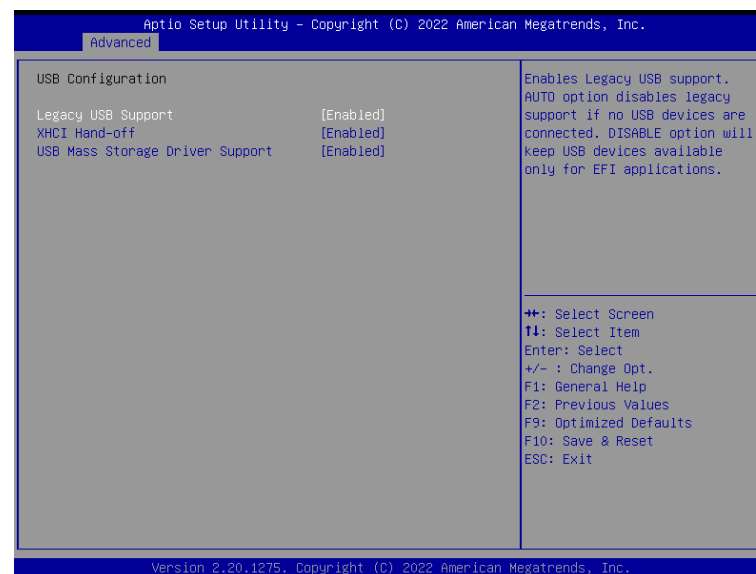

**Legacy USB Support**

- **Enabled** Enable Legacy USB support.
- **Disabled** Keep USB devices available only for EFI applications.
- **Auto** Disable Legacy support if no USB devices are connected.

**XHCI Hand-off**

Enable or disable XHCI Hand-off.

**USB Mass Storage Driver Support**

Enable or disable USB Mass Storage Driver Support.

▶ Advanced

CSM Configuration



**CSM (Compatibility Support Module) Support**

Enable or disable CSM Support.

▶ Advanced

USB Power Control



**USB Power**

5V\_Dual: Support system wake from S3/S4 by USB KB&MS

5V: No Support system wake from S3/S4 by USB KB&MS

## ► Advanced

## Network Stack Configuration

**Network Stack**

Enable or disable (Default) UEFI network stack. The following fields will appear when this field is enabled.

**Ipv4 PXE Support** Enable or disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.

**Ipv6 PXE Support**

Enable or disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.

**PXE boot wait time**

Set the wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.

**Media detect count**


Set the number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

► Chipset



► Chipset

Graphics Configuration

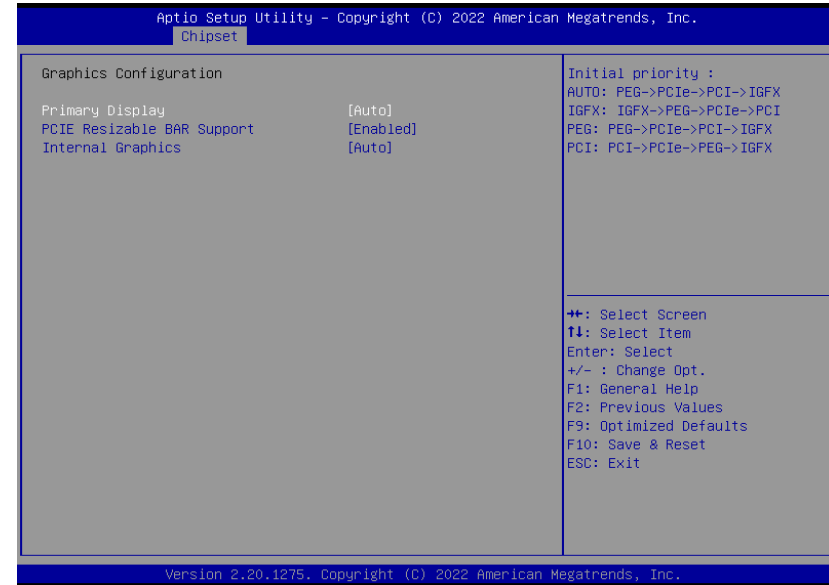

**Primary Display**

Select which of IGFX/PEG/PCI Graphics device to be the primary display.

**PCIE Resizable BAR Support**

Enable/Disable PCIE Resizable BAR Support.


If disable adjust EnableAbove4GBMmio option accordingly

**Internal Graphics**

Keep IGFX "Enabled" or "Disabled" based on the setup options, or select "Auto" for auto-detection.

► Chipset

PEG Port Configuration

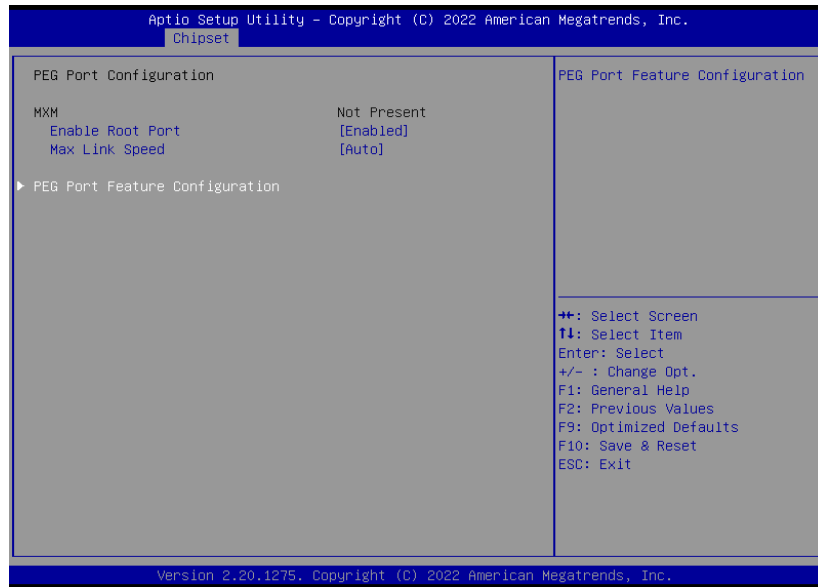

**Enable Root Port**


Enable/Disable the Root Port

**Max Link Speed**

Configure PEG 0:1:0 Max Speed

► Chipset

PEG Port Configuration ► PEG Port Feature Configuration

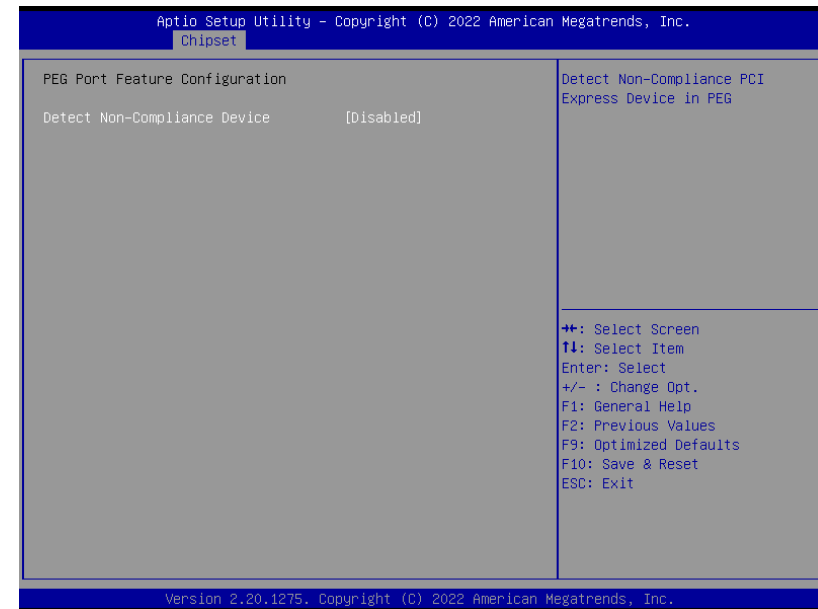


**Detect Non-Compliance Device**

Detect Non-Compliance PCI Express Device in PEG

► Chipset

PCH-IO Configuration

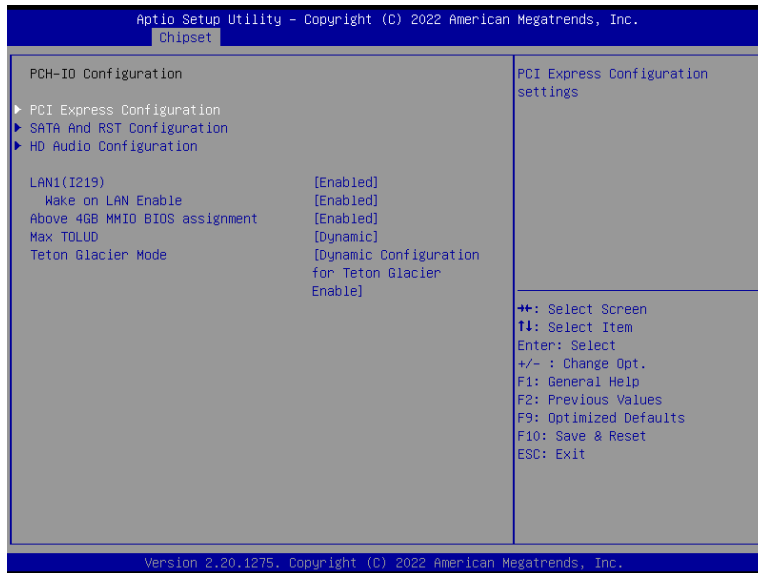

**LAN1(I219)**

Enable or disable onboard NIC.

**Wake on LAN Enable**

Enable or disable integrated LAN to wake the system.

**Above 4GB MMIO BIOS assignment**

Enable/Disable above 4GB MemoryMappedIO BIOS assignment. This is enabled automatically when Aperture Size is set to 2048MB.

**Max TOLUD**

Assign the maximum value of Top Of Lower Usable DRAM (TOLUD). Select to specify a fixed value, or select "Dynamic" so that the assignment would adjust TOLUD automatically based on largest MMIO length of installed graphic controller.

**Teton Glacier Mode**

Switch between Dynamic Configuration for Teton Glacier Enable or Disabled.

**PCI Express Configuration**

PCI Express Configuration Settings

**SATA And RST Configuration**


SATA Device Options Settings

**HD Audio Configuration**

HD Audio Subsystem Configuration Settings

▶ Chipset

PCH-IO Configuration ▶ PCI Express Configuration

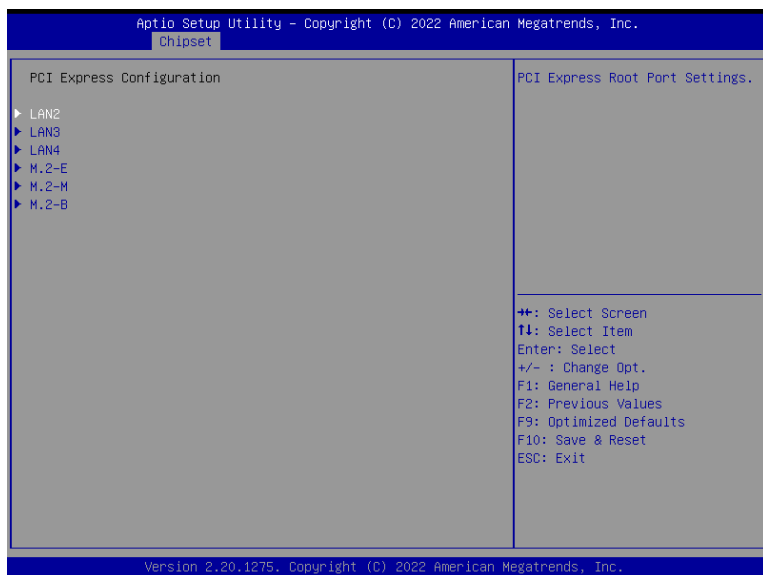

Select one of the PCI Express channels and press enter to configure the following settings.

**LAN 2,3,4 & M.2-E, M.2-M, M.2-B**

Control the PCI Express Root Port.

▶ Chipset

PCH-IO Configuration ▶ SATA And RST Configuration



**SATA Controller(s)**

This field is used to enable or disable the Serial ATA controller.

**SATA Speed**

This field is used to select SATA speed generation limit: Auto, Gen1, Gen2 or Gen3.

**SATA Mode Selection**

The mode selection determines how the SATA controller(s) operates.


- **AHCI** This option allows the Serial ATA controller(s) to use AHCI (Advanced Host Controller Interface).
- **Intel RST Premium With Intel Optane System Acceleration** This option allows you to create RAID or Intel Rapid Storage configuration along with Intel® Optane™ system acceleration on Serial ATA devices.

**Ports and Hot Plug**

Enable or disable the Serial ATA port and its hot plug function.

► **Chipset**

PCH-IO Configuration ► **HD Audio Configuration**

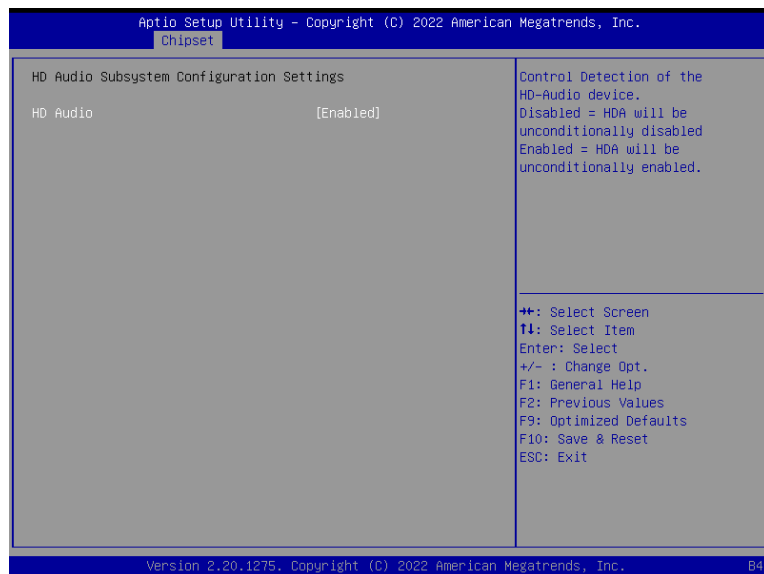


**HD Audio**

Control the detection of the HD Audio device.

- Disabled**      HDA will be unconditionally disabled.
- Enabled**      HDA will be unconditionally enabled.



► Security

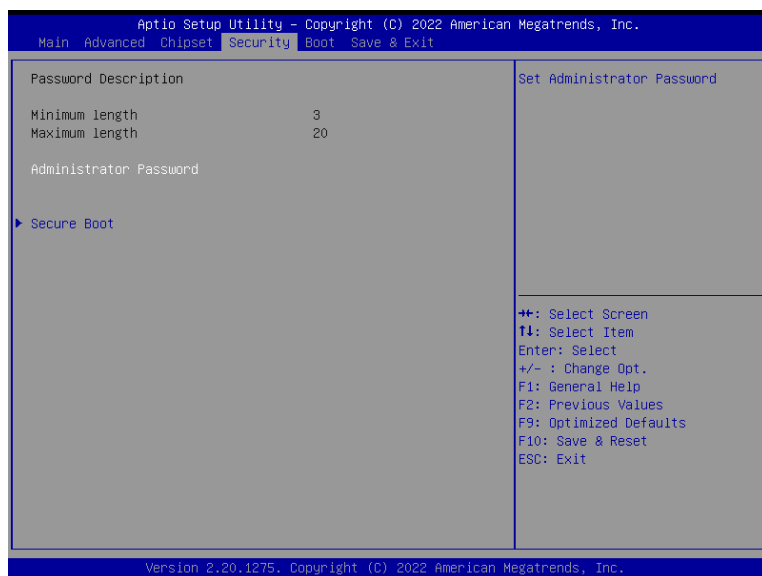

**Administrator Password**

Set the administrator password. To clear the password, input nothing and press enter when a new password is asked. Administrator Password will be required when entering the BIOS.

► Security

Secure Boot



**Secure Boot**

Secure Boot feature is Active if secure Boot is Enabled, Platform Key (PK) is enrolled and the system is in user mode. The mode change requires platform reset.

**Secure Boot Mode**

Select the secure boot mode – Standard or Custom. When set to Custom, the following fields will be configurable for the user to manually modify the key database.

**Restore Factory Keys**

Force system to User Mode. Load OEM-defined factory defaults of keys and databases onto the Secure Boot. Press Enter and a prompt will show up for you to confirm.


**Reset To Setup Mode**

Clear the database from the NVRAM, including all the keys and signatures installed in the Key Management menu. Press Enter and a prompt will show up for you to confirm.

**Key Management**

Enables expert users to modify Secure Boot Policy variables without full authentication.

► Boot

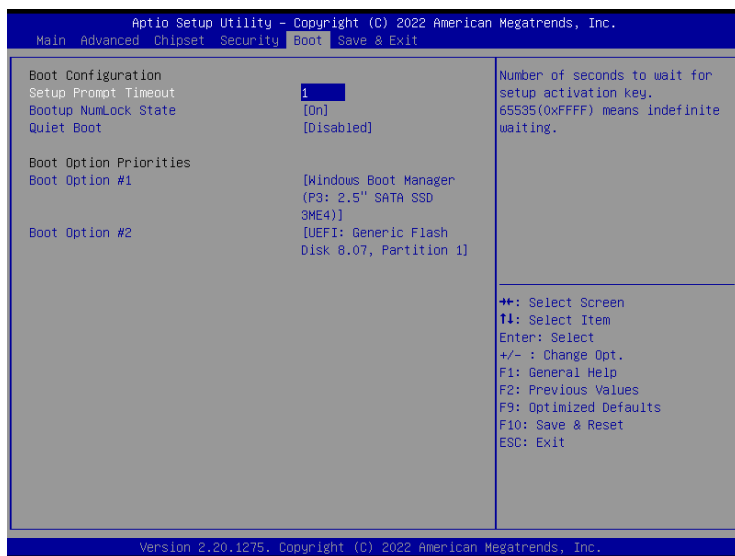

**Setup Prompt Timeout**

Set the number of seconds to wait for the setup activation key. 65535 (0xFFFF) denotes indefinite waiting.

**Bootup NumLock State**

Select the keyboard NumLock state: On or Off.


**Quiet Boot**

This section is used to enable or disable quiet boot option.

**Boot Option Priorities**

Rearrange the system boot order of available boot devices.

► Save & Exit

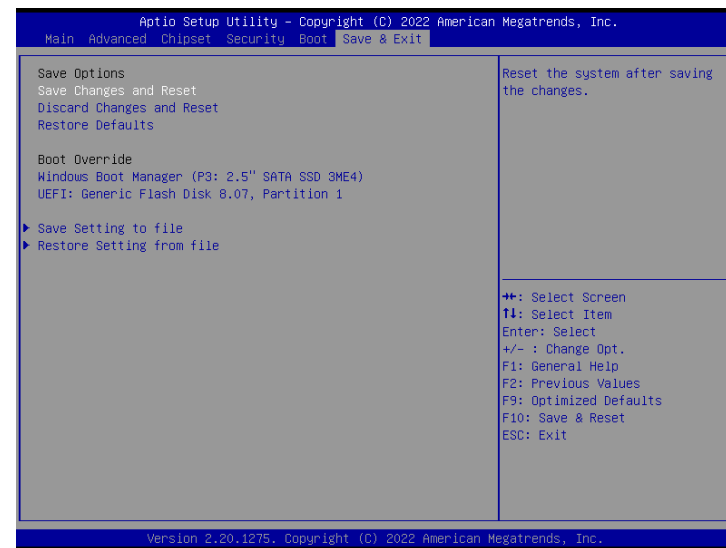

**Save Changes and Reset**

To save the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system after saving all changes made.

**Discard Changes and Reset**

To discard the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system setup without saving any changes.

**Restore Defaults**

To restore and load the optimized default values, select this field and then press <Enter>. A dialog box will appear. Select Yes to restore the default values of all the setup options.

**Boot Override**

Move the cursor to an available boot device and press Enter, and then the system will immediately boot from the selected boot device. The Boot Override function will only be effective for the current boot. The "Boot Option Priorities" configured in the Boot menu will not be changed.

► **Save Setting to file**

Select this option to save BIOS configuration settings to a USB flash device.

► **Restore Setting from file**

This field will appear only when a USB flash device is detected. Select this field to restore setting from the USB flash device.

## ► Updating the BIOS

To update the BIOS, you will need the new BIOS file and a flash utility. Please contact technical support or your sales representative for the files and specific instructions about how to update BIOS with the flash utility.

## ► Notice: BIOS SPI ROM

1. The Intel® Management Engine has already been integrated into this system board. Due to the safety concerns, the BIOS (SPI ROM) chip cannot be removed from this system board and used on another system board of the same model.
2. The BIOS (SPI ROM) on this system board must be the original equipment from the factory and cannot be used to replace one which has been utilized on other system boards.
3. If you do not follow the methods above, the Intel® Management Engine will not be updated and will cease to be effective.



**Note:**

- a. You can take advantage of flash tools to update the default configuration of the BIOS (SPI ROM) to the latest version anytime.
- b. When the BIOS IC needs to be replaced, you have to populate it properly onto the system board after the EEPROM programmer has been burned and follow the technical person's instructions to confirm that the MAC address should be burned or not.
- c. After updating unique MAC Address from manufacturing, NVM will be protected immediately after power cycle. Users cannot update NVM or MAC address.