


# DFI®

## HR100-CRM

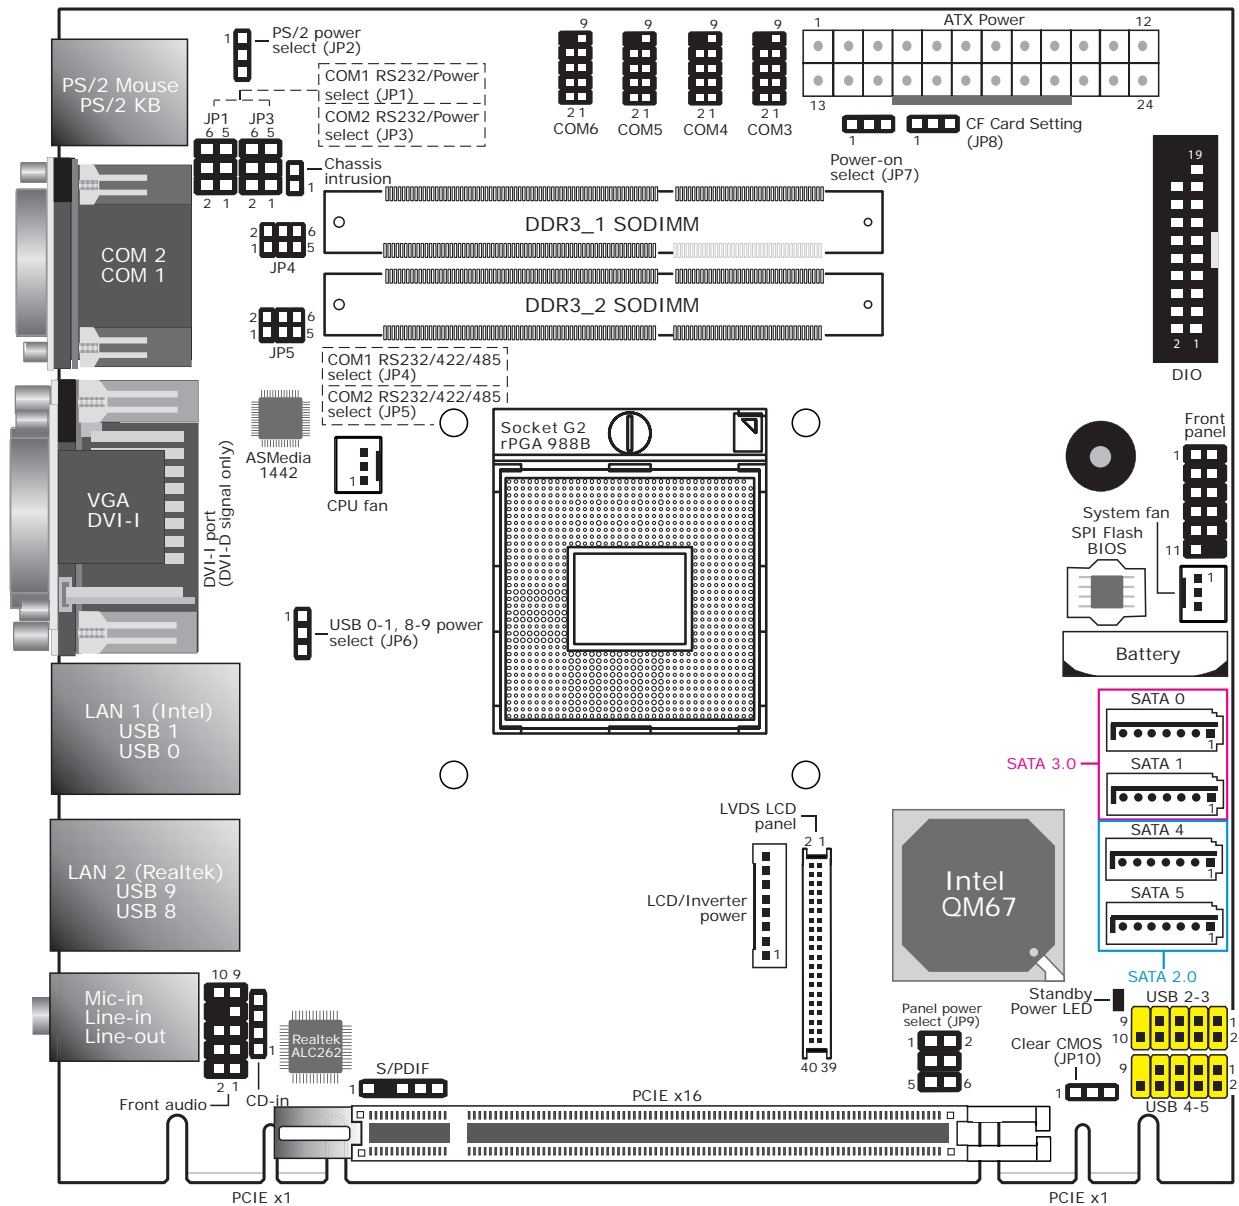

Clear CMOS Data	JP10
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

USB 0-1, 8-9 Power Select	JP6
5V (default)	1-2 On
5V_standby	2-3 On

PS/2 Power Select	JP2
5V (default)	1-2 On
5V_standby	2-3 On

COM 1 (JP1), COM 2 (JP3) RS232/Power	
RS232 (default)	1-3, 2-4 On
RS232 with power	3-5 (+5V), 4-6 (+12V) On

COM 1 (JP4), COM 2 (JP5) RS232/RS422/RS485 Select	
RS232 (default)	1-2 On
RS422 Full Duplex	3-4 On
RS485	5-6 On

Power-on Select	JP7
Power-on via power button (default)	1-2 On
Power-on via AC power; Power-on via WOL After G3	2-3 On

Panel Power Select	JP9
+12V	1-2 On
+5V	3-4 On
+3.3V (default)	5-6 On

## Battery Notice

---



### Battery Usage

The lithium ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off.



### Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.



### Mesure de Sécurité de l'usage de Batterie

Batterie:

- Danger d'explosion si la batterie n'est pas correctement remplacée.
- Remplacez seulement avec le même type ou équivalent recommandé par le fabricant.
- Traitez des batteries usées selon le règlement local.