



IDP156P-MS

User Manual / Installation Guide

▶ WARNING

Warning! It will cause malfunction if the monitor is operating with unspecified power supply adaptor or incorrect power voltage. Do not expose this unit in the rain or moisture environment to reduce the risk of fire or electric shock.

▶ PRECAUTIONS

- · Do not use the monitor near water.
- Do not place the monitor on an unstable cart, stand, or table. If the monitor falls, it can injure a person and cause serious damage to the appliance. Use only a cart or stand recommended by the manufacturer or sold with the monitor. If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.
- The monitor should be operated with type of power adaptor indicated on the label.

 Normally it is packed with monitor, or using an adaptor approved by the manufacturer.
- Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from being damaged due to power surges.
- Never spill liquids on the monitor.
- Do not attempt to service the monitor yourself; opening or removing covers can damage to the monitor or panel. Please refer all servicing to qualified service personnel.
- · For Wall mount adaptor, wall socket shall be installed near the equipment and shall be easily accessible.

User's Manual | IDP0156P-MS

Table of Contents

Chapter 1 - Introduction	4
Features Unpack the monitor Check accessory	4
Chapter 2 - Installation	5
Power Supply & Signal connection	5
Structure of OSD settings	5
Chapter 3 - For your safety	6
Chapter 4 - Support timing chart	7
Chapter 5 - Projected Capacitive Touch panel	
Chapter 6 - Mechanical dimension	9
Chapter 7 - FCC Warning Statement	
Chapter 8 - Product General Specification	11

Chapter 1 - Introduction

- This monitor produces clear images with the vivid color at resolutions from VGA up to WXGA and used with graphics adapter of scanning frequency from 30KHz to 82KHz in horizontal sweep while vertical refresh rate is 55Hz to 76 Hz continuously.
- On Screen Display provide flexibility with simple & user-friendly controls.
 Integrated D-sub and HDMI inputs provide flexible connectivity for high-definition multimedia devices and gaming consoles
- USB interface Projected Capacitive Touch Panel

Features

- 15.6 inch diagonal screen with native display resolution 1366 x768.
- Dual Video input: VGA, HDMI (to DVI-D by a HDMI to DVI-D cable)
- Full flat front panel with high quality projected capacitive touch panel.
- Fully Glossy surface throughout monitor's appearance.
- Rimless front bezel design, spill & dust proof.
- Cable management down routing through the mounting stand.
- Light weight.3,820 g physically.

▶ Unpack the monitor

- Put the monitor on a clean surface; make sure the box in upright position
- Remove packing materials from inside of box.

▶ Check accessory

Please make sure the entire accessory is included:

1.8 meter HDMI cable










AC-DC power adaptor: 100Vac~240Vac Adaptor: 2.10, 12Vdc 18W

(USA/UK/EU Option)

Chapter 2 - Installation

▶ Power Supply & Signal connection

 Power supply: Use attached Wall-mount Power adaptor to get 12Vdc power. VGA signal: Use attached 1.8 meter 15pin D-sub VGA cable to connect System PC. HDMI signal: Apply HDMI signal or use DVI-D to HDMI signal cable for DVI input. Touch Control: Use attached USB cable to connect system PC.



▶ Function Key Control



Power	Use the power switch to turn the power ON or OFF. We recommend turning your system power on first, then the LCD monitor.		
Auto Adjust (AUTO)	Pressing to execute AUTO-Adjusting function. This function will optimize the display image Sometimes this function can't achieve the optimal effects. Please follow the manual adjusting procedure. After OSD menu is activated, press this key can turn off the OSD menu.		
Menu (MENU)	Press Menu key to activate OSD Menu This key also means "OK"; Press "Up, Down" key to move the indicator to the desired item, then press Menu key to select and read to adjust. After adjustment, press this key to return to previous Menu.		
Up (▲)	When OSD mode is activated (When "MENU" key is pressed). These tw keys are used to select the adjustment items.		
. ,			
Down	When adjustment item is selected, these two keys are defined to		
(▼)	decrease or increase the value of each selected item.		

▶ OSD Lock/ Unlock

Press "Menu" Key for more than 7 seconds shall lock all control keys' function. After keys locked, press "Menu" key again for more than 7 second shall unlock the key function.

► Structure of OSD settings

tem	Level 1	Level 2	Lev	el 3	Operating Procedure				
	Auto Adjust	_	-		Press "UP" or "DOWN" to adjust H-phase & H-position				
, tuto rajust	7 tato 7 tajaot				& V-position clock automatically.				
		Brightness	-		Press "UP" key to increase brightness, "DOWN" key decrease brightness.				
		_	-		Press "UP" key to increase contrast, "DOWN" key to				
		Contrast			decrease contrast.				
	Luminance	District	-		Press "UP" key to increase background brightness,				
		Black levels			"DOWN" key to decrease background brightness.				
		Sharpness	_		Press "UP" key to increase image sharpness, "DOWN				
					key to decrease image sharpness.				
		Exit	+		Exit to previous Menu. Press "UP" key to shift screen left, "DOWN" key to s				
		H. Position			Press "UP" key to shift screen left, "DOWN" key to si screen right.				
			sition –		Press "UP" key to shift picture upward, "DOWN" key t				
		V. Position			shift picture downward.				
					To reduce any vertical bars or strips visible on the				
	Management	Pixel Clock	-		screen background. Adjusting the Clock will also				
					change the horizontal screen image width.				
Main		Phase	_		To remove any horizontal noise and clear or sharpen				
Menu					the image of characters.				
		Exit			Exit to previous Menu.				
		9300K			Press "UP" or "DOWN" to choose three types of color				
		6500K		-	temperature 9300°k, 6500°k, sRGB and user define.				
Color			Red						
	User Preset	Green Blue		Select User Preset to enter Color Adjust Menu, and					
				select desired color to adjust.					
				xit					
		Exit	-		Exit to Main Menu.				
		H. Position		_	Adjust OSD Menu horizontal position, press "UP" key				
		11.1 0010011			shift Menu right, "DOWN" key to shift Menu left.				
		V. Position	-		Adjust OSD Menu vertical position, press "UP" key to				
	OSD				shift Menu upward, "DOWN" key to shift Menu downward.				
					Sets the time duration in seconds that the OSD is				
		OSD Time		-	visible after the last button is pressed.				
		Exit	-		Exit to previous Menu.				
		English	-		- In to provide mond.				
		Français	١.	_					
		Deutsch	١.	_					
		Italino	_	_	Press Up/Down key to move OSD bar to desired				
	Language	Espanol	_		language, then press to confirm. The OSD Menu will				
Main Menu Recall				change to desired language and return to Main Menu					
	日本語	<u> </u>	_						
	繁體中文		_						
		简体中文	_	_	December 10 (call to see at Outro) (call to the call				
	Recall	Recall Color	Yes	No	Press "Yes" to reset Color to factory setting.				
		Recall All	Yes	No	Press "Yes" to rest all settings back to factory setting, except language.				
		Exit	+		Press "Exit" to return to Main Menu.				
		Display	+-		Press Display information to display resolution and				
	Information	Information	-		refresh rate.				
	momanon	Exit	_		Press "Exit" to return to Main Men.				
					Press "Exit" key will close OSD Menu and save the				
	Exit	-	-		settings.				

User's Manual | IDP0156P-MS

Chapter 3 - For your safety

- 1. When move the monitor, always switch off power and disconnect all cables to avoid
- any danger.

 2. Please use the power and signal cables correctly when install it.

 3. In case of notice any abnormal smell or noise, please stop operation and call the nearest dealer or service center.

Chapter 4 - Support timing chart

Timing Mode	Reference Standard	Resolution	Pixel MHz	FH KHz	FV Hz	Interlace	H Polarity	V Polarity
Mode 1 Default	VESA	1920 x 1080	148.5	67.5	60	NO	Р	Р
Mode 2	VESA	1366 x 768	85.750	47.852	59.964	NO	Р	Р
Mode 3	VESA	1280 x 1024	108	63.981	60.020	NO	Р	Р
Mode 4	VESA	1280 x 800	83.500	49.702	59.810	NO	N	Р
Mode 5	VESA	1280 x 768	79.500	47.776	59.870	NO	N	Р
Mode 6	CTA-861-F	1280 x 720	74.250	45.000	60.000	NO	Р	Р
Mode 7	VESA	1024 x 768	65.000	48.363	60.004	NO	N	N
Mode 8	VESA	1024 x 768	75.000	56.476	70.069	NO	N	N
Mode 9	VESA	1024 x 768	78.750	60.023	75.029	NO	Р	Р
Mode 10	VESA	800 × 600	36.000	35.156	56.250	NO	Р	Р
Mode 11	VESA	800 × 600	40.000	37.879	60.317	NO	Р	Р
Mode12	VESA	800 × 600	50.000	48.077	72.188	NO	Р	Р
Mode13	VESA	800 x 600	49.50	46.880	75.000	NO	Р	Р
Mode 14	VGA	640 x 480	25.17	31.47	59.94	NO	N	N
Mode15	Mac	640 x 480	30.24	35.00	66.67	NO	N	N
Mode16	VESA	640 x 480	31.5	37.861	72.809	NO	Ν	N
Mode17	VESA	640 x 480	31.5	37.5	75	NO	N	N
Mode18	VGA	720 x 400	28.32	31.47	70.08	NO	N	Р

User's Manual | IDP0156P-MS

Chapter 5 - Projected Capacitive Touch panel

10-Point Project Capacitor Touch Panel Type Input Mode Finger or Capacitive Touch screen stylus Transparency

Touch Control circuitry Build in Touch Panel Module

Control Type

Touch Control Driver eGalax Touch Driver or Windows build in touch driver



▶ Touch Driver installation:


Touch Driver installation:

- (1) If you are using Windows XP Embedded OS, please visit EETI website to download driver: http://www.eeti.com.tw/drivers_Win.html
- (2) If your system Windows version is Windows 7 or later, we suggest you do not install this driver. There is a HID touch digitizer build-in driver in Windows 7, 8, 10.

User's Manual | IDP0156P-MS

8

Chapter 6 - Mechanical dimension

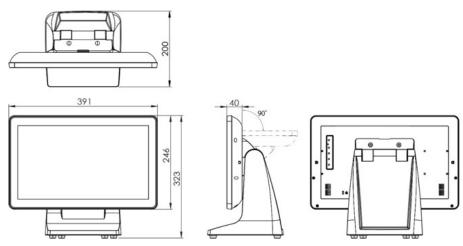

Chapter 7 - FCC Warning Statement

► FCC Class A Warning



Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CISPR 22 Class A Warning



Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Chapter 8 - Product General Specification

Model	IDP156P-MS				
Cabinet color	Black				
Display size	15.6"				
Active Area	344.16 mm x 193.59 mm				
Optimal Resolution	1366 X 768				
Color Arrangement	RGB-stripe				
Brightness	220 cd/m² (typ)				
Contrast Ratio	500:1				
Response Time	25 ms (typ.)				
Viewing Angle	45/45/15/45 (Typ.)(CR>=10)				
Input Video Format	VGA				
Video VGA Signal input connector	VGA D-sub 15pin				
HDMI Signal connector	19 pin HDMI				
Input Frequency	H: 30 - 60 kHz ; V: 55-76Hz				
Power consumption	<6W				
Down ownsky	Wall mount type power adaptor				
Power supply	Input: 100~240AC 0.5A, Output: 12Vdc 1.5A				
Temperature	Operating: 0°C~40°C Storage: -10°C~50°C				
Humidity	Operating : 20%~80% Storage : 10%~90%				
Approvals	CE, FCC Class B				
Wall Mount	VESA 75 * 75 mm				
Touch Panel	10-Point Projected Capacitive Touch Panel				
Туре	Stylus or Finger				
Input Mode	USB				
Touch Control type	eGalax Touch				
Touch Control Driver	driver Windows build in touch driver				

[✓] Product specification to be changed without prior notice

[✓] Made In Taiwan