


COM630-B

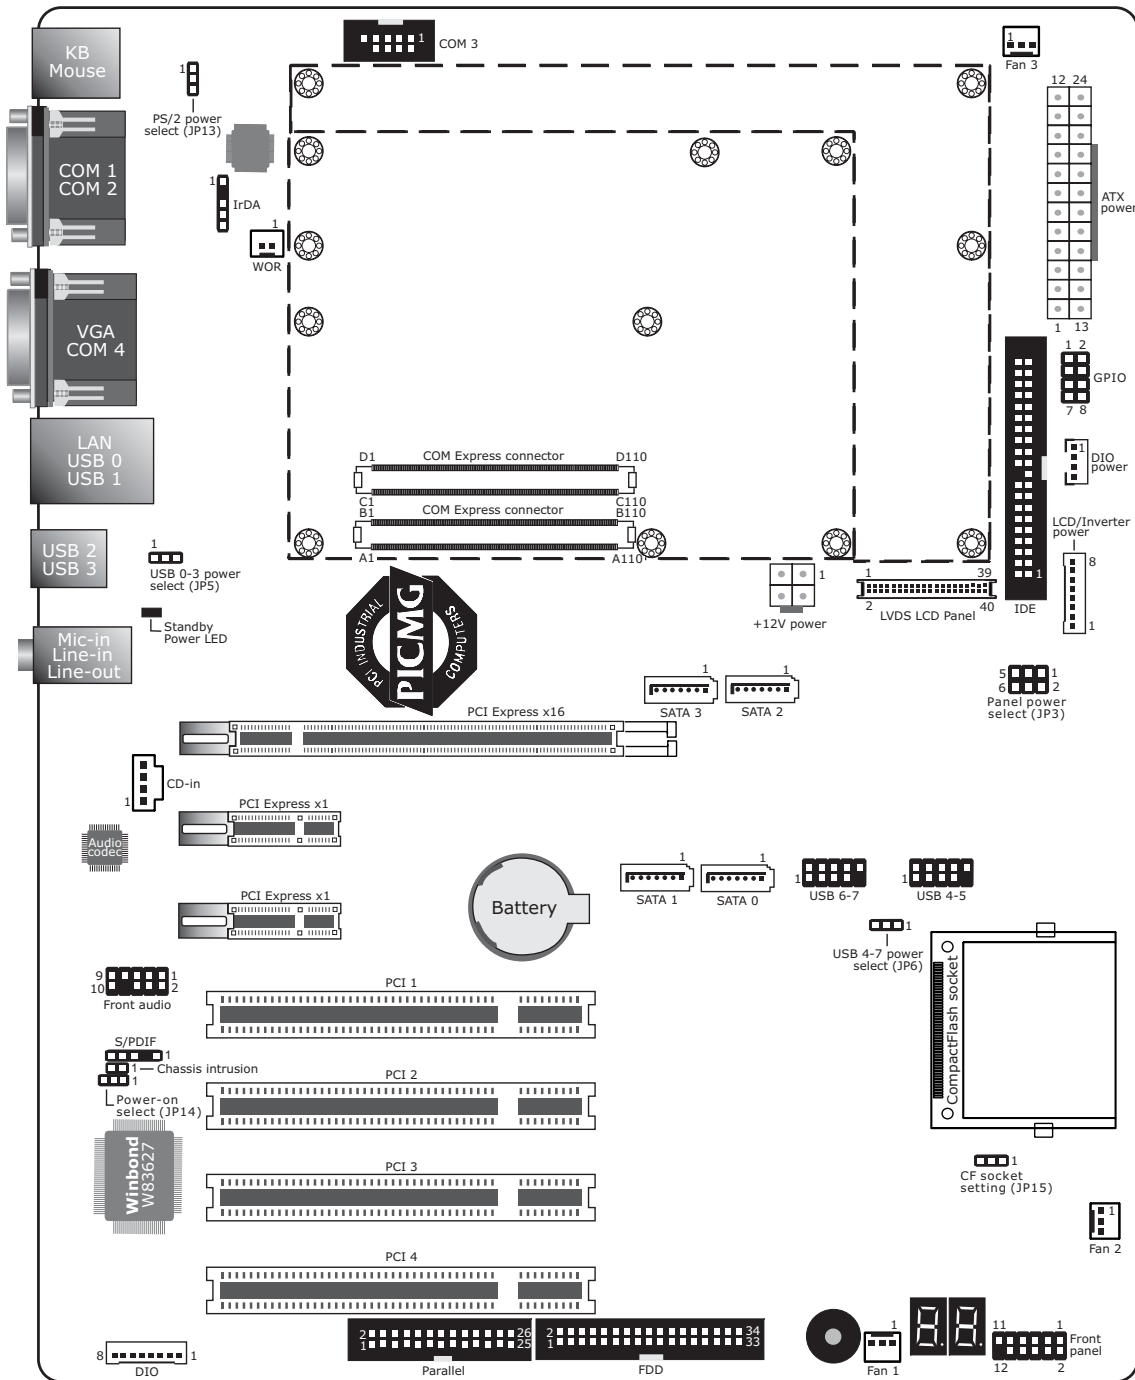

Power-on Select	JP14
Power-on via power button (d)	1-2 On
Power-on via AC power	2-3 On

USB Power: 0-3 (JP5), 4-7 (JP6)	
5V (d)	1-2 On
5V_standby	2-3 On

Panel Power Select	JP3
12V	1-2 On
5V	3-4 On
3V (d)	5-6 On

PS/2 Power	JP13
5V (d)	1-2 On
5V_standby	2-3 On

CF Socket Setting	JP15
Master (d)	1-2 On
Slave	2-3 On

Note:

Before powering-on the system, make sure settings on JP3 match the LCD panel's specifications. Selecting the incorrect voltage will seriously damage the LCD panel.

The parallel connector and the diagnostic LED are optional.
(d) denotes default setting.