


Board Layout and Jumper Settings

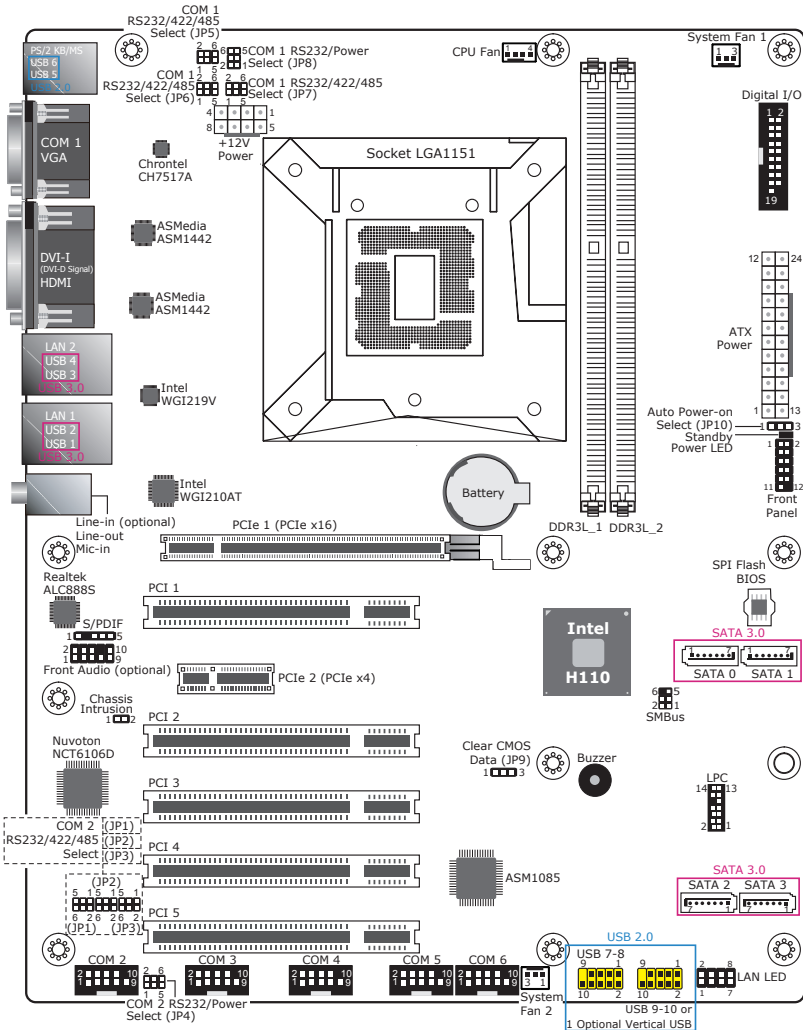

Note:

1. JP5, JP6 and JP7 must be set in accordance with the same serial mode.
2. JP1, JP2 and JP3 must be set in accordance with the same serial mode.

Clear CMOS Data	JP9
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

Power-on Select	JP10
Power-on via power button (default)	1-2 On
Power-on via AC power	2-3 On

RS232 Power Select	JP8 (COM 1), JP4 (COM 2)
Standard RS232 (default)	1-3 (RI), 2-4 (DCD) On
RS232 with power	3-5 (+5V), 4-6 (+12V) On

RS232/422/485 Select	JP5 (COM 1) JP1 (COM 2)	JP6/JP7 (COM 1) JP2/JP3 (COM 2)
RS232 (default)	1-2 On	1-3, 2-4 On
RS422 Full Duplex	3-4 On	3-5, 4-6 On
RS485	5-6 On	

PIN Assignment

COM1/COM2 RS232/422/485 Select

Pin	RS232	RS232 with power	RS422 Full Duplex	RS485
1	DCD-	+12V	RXD+	DATA+
2	RXD	RXD	RXD-	DATA-
3	TXD	TXD	TXD+	N.C.
4	DTR-	DTR-	TXD-	N.C.
5	GND	GND	GND	GND
6	DSR-	DSR-	N.C.	N.C.
7	RTS-	RTS-	N.C.	N.C.
8	CTS-	CTS-	N.C.	N.C.
9	RI-	+5V	N.C.	N.C.



DFI reserves the right to change the specifications at any time prior to the product's release. This QR may be based on editions that do not resemble your actual products. For more documentation and drivers, please visit the download page at go.dfi.com/SD630-H110, or via the QR code to the right.

