



DFI®

CH961-CM246/QM370/HM370

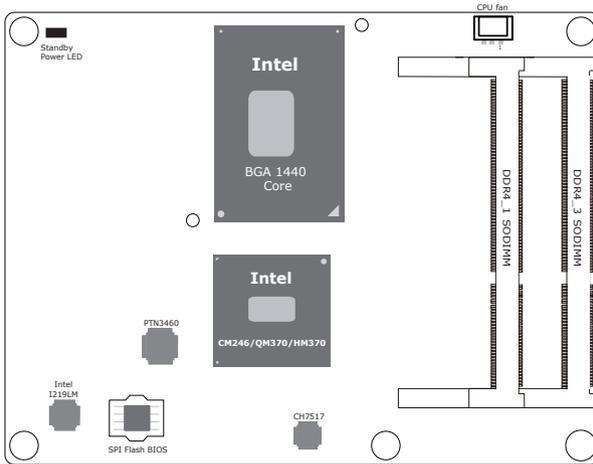

TOP

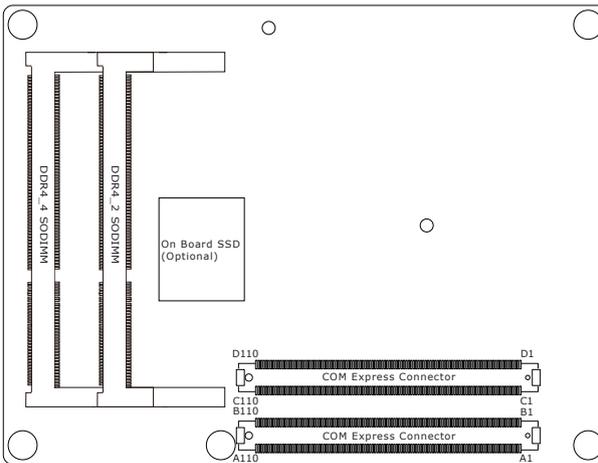

BOTTOM

Please be informed that onboard SSD and DDR4_2 SODIMM can't coexist.

Important Notice:

- Please be sure to screw on the cooler in the sequence as shown in the image below to avoid seriously damaging the CPU. Turn each screw half way down first to initially stabilize the heat sink onto the board, then finally tighten each screw. This is to avoid imbalance which might cause cracks or fractures to the CPU and/or heatsink assembly.

