


DFI®

SB330-CRM

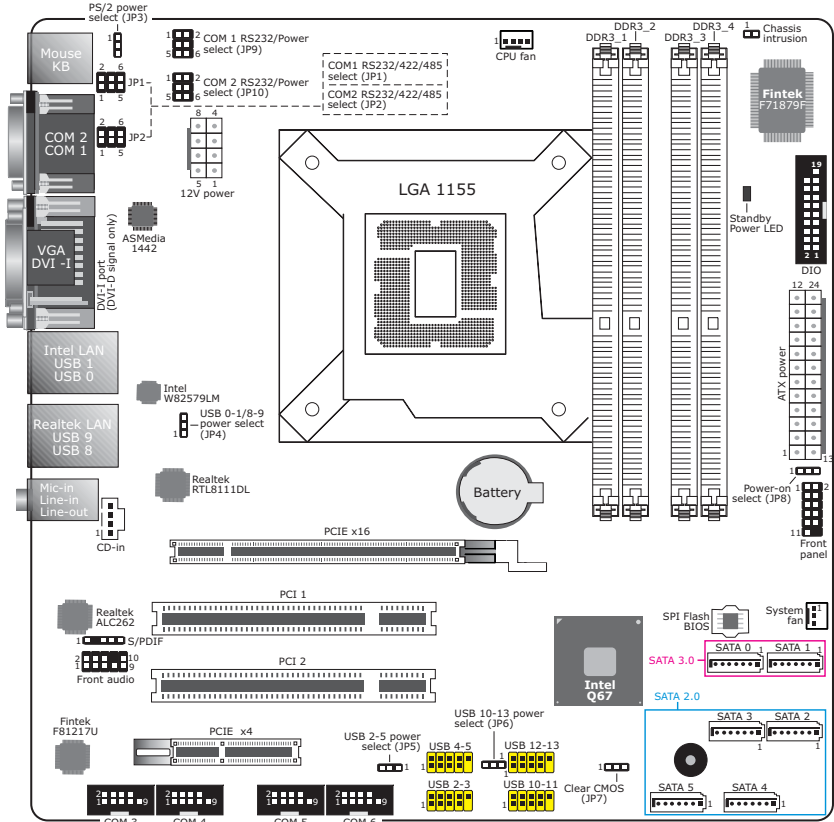

USB Power: 0-1/8-9 (JP4), 2-5 (JP5), 10-13 (JP6)	
+5V (default)	1-2 On
+5V_standby	2-3 On

Clear CMOS Data		JP7	
Normal (default)		1-2	On
Clear CMOS Data		2-3	On

RS232/RS422/RS485 Select: COM 1 (JP1), COM 2 (JP2)	
RS232 (default)	1-2 On
RS422 Full Duplex	3-4 On
RS485	5-6 On

PS/2 Power		JP3	
+5V (default)		1-2	On
+5V_standby		2-3	On

Power-on Select		JP8	
Power-on via power button (default)		1-2	On
Power-on via AC power; Power-on via WOL After G3		2-3	On

RS232/Power: COM 1 (JP9), COM 2 (JP10)			
RS232 (default)	1-3 (RI), 2-4 (DCD)	On	
RS232 with power	3-5 (+5V), 4-6 (+12V)	On	



Battery Notice

Battery Usage

The lithium ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off.

Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.

Mesure de Sécurité de l'usage de Batterie

Batterie:

- Danger d'explosion si la batterie n'est pas correctement remplacée.
- Remplacez seulement avec le même type ou équivalent recommandé par le fabricant.
- Traitez des batteries usées selon le règlement local.